 


If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

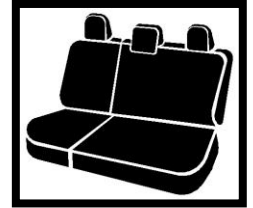

SEAT COVERS
BY

fia

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR

NP92-64/ Oe32-64/ SL62-64/ SP82-64/ TR42-64/ TRS42-64

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) CUSHION COVER – 40 PORTION:

1. Center cushions cover on seat. Cover has allowances for child restrain anchor
2. Place seatbelt buckle through elastic on the side of cover
3. Pass front straps under cushion
4. Lift cushion up in vertical position, pull front straps and buckle to back of cover
5. Pull side strap under cushion and buckle to other side
6. Adjust straps and buckle to equalize tension

B) CUSHION COVER – 60 PORTION:

1. Center cushions cover on seat. Cover has allowances for child restrain anchor
2. Pass front straps under cushion
3. Lift cushion up in vertical position, pull front straps and buckle to back of cover
4. Place side strap (door side) through metal bar under cushion and buckle to back cover
5. Buckle other side strap to back of cover
6. Adjust straps and buckle to equalize tension

C) BACKREST COVER - 60 PORTION:

 
1. Remove headrests (see note on reverse)
2. Release velcro attached at bottom of backrest cover, open zipper
3. Slip cover over backrest and pull down firmly. Ensure cover is installed under seat belt
4. Tuck cover through crevice. Fold down backrest
5. Apply all velcro located on the side of the seat cover backrest to the backrest of the seat
6. Close zipper and attached all velcro at back cover (see note on reverse)
7. Adjust all velcro to equalized tension
8. Replace headrests (see note on reverse)

D) BACKREST COVER - 40 PORTION:

1. Remove headrest (see note on reverse)
2. Release velcro attached at the bottom of backrest cover
3. Slip cover over backrest and pull down firmly
4. Tuck cover through crevice. Fold down backrest
5. Apply all velcro located on the side of the seat cover backrest to the back of the seat Attached to all velcro at back of cover
6. Adjust velcro to equalized tension
7. Replace headrest (see note on reverse)

Notes:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

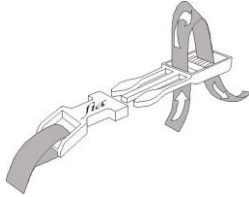

3) ZIPPERS:

 
- A) For ease in installation the zipper is longer than the cover.
- B) Tuck excess zipper under cover

4) RE-INSTALLATION OF HEADRESTS:

- A) Headrest covers must be installed before replacing headrests.
- B) Ensure pre-cut holes in seat cover align with holes in base.
- C) Replace headrests

2) HEAD REST REMOVAL:

Push in side release buttons
- Lift off
(If unable to remove consult dealership)

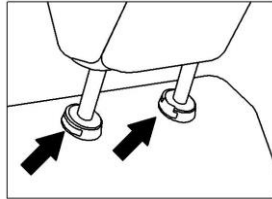

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com