



INSTALLATION INSTRUCTIONS

⚠ WARNING: DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE LAMP LOAD RATING, WHICHEVER IS LOWER

APPLICATIONS

Make	Model
Acura	RDX
Honda	Accord Crosstour

CUSTOM WIRING CONNECTOR

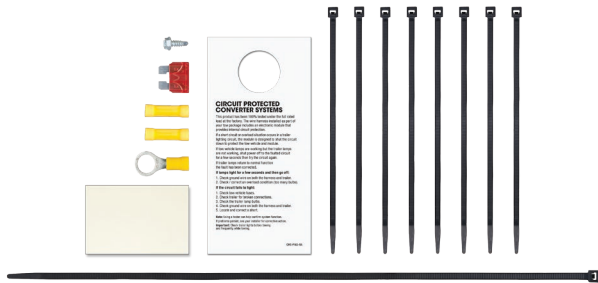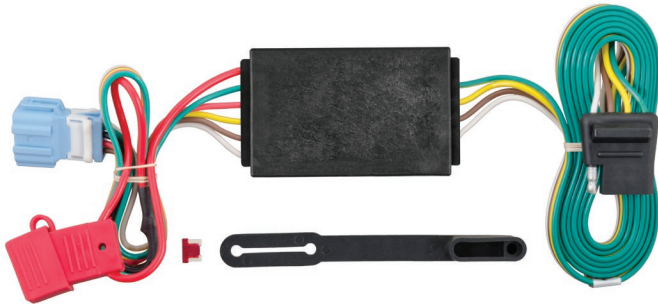

WIRING LOCATION GUIDE

PASSENGER CARS (P)

Representative vehicle shown below

P3 - Behind driver side taillight housing, inside of trunk



NOTICE

All steps must be followed to ensure the wiring connector will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

TOOLS NEEDED

- 10mm socket
- Ratchet
- Panel trim removal tool

⚠ WARNING

The battery connection must be fuse-protected, 10-amp max. Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

Signal Circuits - 3.0 amps per side
Tail / Running Circuits - 6.0 amps total

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

INSTALLATION / SAFETY INSTRUCTIONS

Step 1

Locate vehicle battery on the driver side under the hood and disconnect the negative battery terminal.

NOTE: A fuse may be required in the vehicle fuse panel under the hood to allow tow wiring harness to work. Check vehicle owner manual or contact the vehicle manufacturer for more information.

NO ACCESS PANEL ON DRIVER SIDE REAR TRIM PANEL

Step 2-A

Open the vehicle tailgate and remove the cargo area cover and flooring. Undo the four clips holding the cargo area lid in place and remove the lid and spare tire (A,B).

Step 3-A

Remove the two clips securing the passenger side panel and floor spacer. Remove the floor spacer by pushing in at the back edge and out at the front edge to clear the vehicle bracket.

Step 4-A

Locate the vehicle connector near the back seat, under the passenger side floor spacer (B,C). The connector will be similar to that on the custom wiring harness.

Step 5-A

Insert the custom wiring harness connector into the vehicle connector. Make sure the connectors are fully inserted with locking tabs in place.

WITH ACCESS PANEL ON DRIVER SIDE REAR TRIM PANEL

Step 2-B

Open the vehicle trunk and remove the access panel from the driver side rear trim panel.

Step 3-B

Locate the vehicle tow wiring connector (D,E). The connector will be similar to that on the custom wiring harness.

Step 4-B

Insert the custom wiring harness connector into the vehicle connector. Make sure the connectors are fully inserted with locking tabs in place.

INSTALLATION CONTINUED

Step 6



Locate a flat spot inside the vehicle, near the taillight. Adhere the black converter box using the provided double-sided tape.

Step 7

When in use, route the 4-flat to the center of the vehicle. When not in use, roll up and store in the spare tire storage area (F). Secure any loose wires with the provided cable ties.

Step 8

Reinstall all items removed during install and reconnect negative battery terminal. Install the provided 4-flat dust cover to help prevent corrosion.

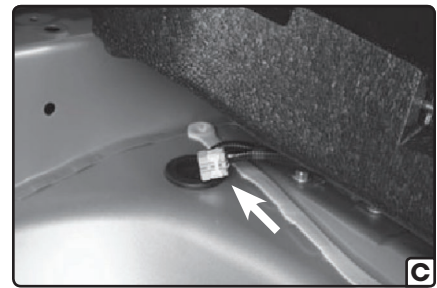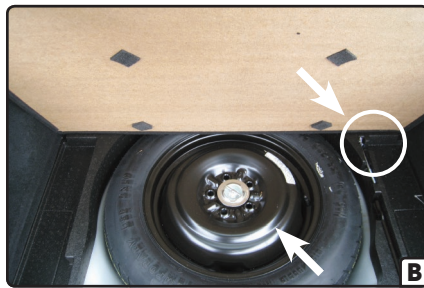

HONDA INSTALLATION

Step 1

Locate the vehicle battery on the driver side under the hood and disconnect the negative battery terminal.

Step 2

Open the vehicle trunk and remove the cargo area cover.

Step 3


On the driver side, remove the 10mm bolts holding the cargo tray in place (G,H).

Step 4

Locate the vehicle connector on the driver side, in the corner under the trim panel (I). The connector will be similar to that on the custom wiring harness.

Step 5

Insert the custom wiring harness connector into the vehicle connector. Make sure the connectors are fully inserted with locking tabs in place (J).

 **WARNING:** Check for miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and / or personal injury.

Step 6

Locate a flat spot outside the vehicle, on the frame. Adhere the black converter box using the provided double-sided tape (K).

Step 7

On the driver side, under the hood, near the firewall, locate the vehicle fuse box (L). Remove the fuse panel cover and locate the trailer tow fuse at position 10. Insert the provided 10 amp fuse into fuse location (M).

Step 8

When in use, route the 4-flat to the center of the vehicle. When not in use, roll up and store in the spare tire storage area. Secure any loose wires with the provided cable ties.

Step 9

Reinstall all items removed during install and reconnect negative battery terminal. Install the provided 4-flat dust cover to help prevent corrosion.

