If you have any comments or concerns, please feel free to contact our customer service department at: Toll-free: 1-800-835-0438 OR Email: info@gofia.com

SEAT COVERS



ia

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS

FOR NP97-18/ Oe37-18/ SL67-18/ SP87-18/ TR47-18/ TRS47-18

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

BACKREST COVERS

- 1) Remove head rest (see note below)
- 2) Open side velcro

3) Slip cover over backrest. Ensure velcro is on the inner side of the seat (facing other bucket)

4) Fasten velcro

- 5) Tuck flaps under backrest and attach to Velcro at back
- 6) Adjust Velcro to equalize tension
- 7) Replace headrests (see note below)

4) Adjust straps and buckles to equalize tension

CUSHION COVERS

 
1) Center cover on the seat

- 2) Pass the front strap under seat. Buckle to back flap
- 3) Pass side straps through the opening between the molded plastic

and the seat. Buckle to back flap

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:




3) RE-INSTALLATION OF HEADRESTS

A) Ensure pre-cut holes in seat cover align with holes in headrest base.B) Replace headrests

2) HEAD REST REMOVAL:

- A) Insert paper clip into holes at base to release Lift off
 - OR
- B) Push in side release buttons - Lift off

 (If unable to remove consult dealership)



WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438 Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com