If you have any comments or concerns, please feel free to contact our customer service department at:

Toll-free: 1-800-835-0438

OR

Email: info@gofia.com

SEAT COVERS BY





SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS **FOR** NP97-21/ OE37-21/ SL67-21/ SP87-21/ TR47-21/ TRS47-21

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER

- 1. move seat to most forward position
- 2. center cover over backrest and install under seat belt
- 3. smooth cover from top to bottom

- 4) place cover so side latch is through hole provide in seat
- 5) insert flaps through crevice and attach to velcro at back

B) CUSHION COVER

- 1) center cover on the seat
- 2) position the seat belts through the opening provided. Driver side has velcro opening
- 3) tuck back flap through the seat crevice

- 4) pass the front straps under the seat and secure to buckles(see note)
- 5) attach side velcro on to carpeting on back of seat cushion

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND **COULD RESULT IN SERIOUS INJURY.**

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438 fia Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com