

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY


fia

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR

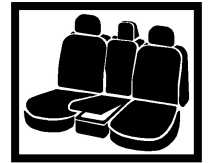

NP97-35/ Oe37-35/ SL67-35/ SP87-35/ TR47-35/ TRS47-35

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) CUSHION COVER – 40 PORTIONS

- 1) Release seat belt buckle from elastic holder
- 2) Center cover on the seat
- 3) With seat in highest position, pass back straps under seat through crevice and buckle to front
- 4) Pass long side strap through the opening between the molded plastic and the seat. Buckle to opposite side
- 5) Replace seat belt buckle to elastic on cover
- 6) Adjust straps and buckles to equalize tension

B) BACKREST COVER – 40 PORTIONS

- 1) Remove head rest (see note)
- 2) Slip cover over backrest. (see air bag warning below)
- 3) Tuck flaps under backrest and attach to Velcro at back
- 4) Adjust Velcro to equalize tension
- 5) Replace headrests (see note)

C) CUSHION COVER – 20 PORTION

- 1) Open cushion lid to up position
- 2) Slip cover over lid and attach velcro strips
- 3) With cushion lid closed, pass back flap through crevice between seat and plastic molding
- 4) Open cushion lid to up position
- 5) Pull back flap and apply velcro to carpet
- 6) Snug and adjust velcro for a better fit

D) BACKREST COVER – 20 PORTION


- 1) Remove headrest (see note)
- 2) Open zipper
- 3) Slip cover over backrest and under seat belt and close zipper
- 4) Snug cover at back of storage compartment so the Velcro on the cover is positioned through the crevice where the lid and storage compartment are hinged
- 5) With backrest down, open storage compartment
- 6) Position adhesive backed velcro (supplied) to inside of storage compartment to align with the velcro tabs on cover and attach. (see note)
- 7) Position adhesive backed velcro supplied to align with velcro on cover around the edge of cup holder. (see note)
- 8) Place elastic between cup holder and compartment lid
- 9) Ensure lid opens and closes with no obstructions
- 10) Adjust all velcro to equalize tension
- 11) Replace headrest (see note)

E) ARMREST / STORAGE COMPARTMENT LID COVER :

- 1) Open armrest / storage compartment
- 2) Slip cover over lid

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

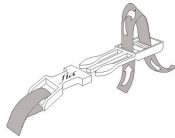

2) HEAD REST REMOVAL:

- Push in side release buttons
 - Lift off
- (If unable to remove consult dealership)



3) ADHESIVE BACK VELCRO:

Before positioning velcro, clean area with alcohol swab provided.

3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com