

THIS COVER FITS A SEAT WITH A CENTER CUSHION COMPARTMENT. IF THE CENTER CUSHION DOES NOT OPEN, YOU HAVE THE WRONG SEAT COVER. (SEE PICTURE ABOVE)

**SEAT COVERS
BY**



FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

**INSTALLATION INSTRUCTIONS
FOR**

NP98-30/ Oe38-30/ SL68-30/ SP88-30/ TR48-30/ TRS48-30

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) CUSHION COVER – “40” PORTION:

- | | |
|---|--|
| 1) Move seat to most forward and uppermost position | 5) Pass long side strap through the opening between the seat and the molded plastic and under the seat |
| 2) Place cover on seat cushion ensuring long side strap is on the door side | 6) Buckle to the other side |
| 3) Pass back flap of cover with straps through crevice | 7) Adjust straps to equalize to equalize tension |
| 4) Feed straps under seat and buckle to front of cushion cover | |

B) BACKREST COVER - “40” PORTION:

- | | |
|---|--------------------------------------|
| 1) Remove headrests. (see note below) | 4) Adjust velcro to equalize tension |
| 2) Slip cover over backrest and pull down firmly (see airbag warning below) | 5) Replace headrest (see note below) |
| 3) Tuck flaps under backrest and attach to velcro at back | |

C) BACKREST COVER/ARMREST COVER – “20” PORTION:

- | | |
|--|--|
| 1) Undo velcro closure on back of cover | 6) Position adhesive back velcro supplied to inside the storage compartment and align with velcro on the side and back of cover. |
| 2) Place the armrest/storage compartment in up position | NOTE: BEFORE POSITIONING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED. |
| 3) Center cover and slip through armrest. Apply velcro closure | 7) Adjust all velcro to equalize tension |
| 4) Position adhesive velcro supplied to align with velcro on cover around the edge of cup holder. NOTE: BEFORE POSITIONING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED. | |
| 5) Snug the cover from top to bottom and place armrest into down position | |

D) LID COVER/ARMREST – “20” PORTION


- | | |
|---|--|
| 1) Open lid | 4) Snug and align all openings on cover to lid |
| 2) Slip cover over lid and position elastic on the back of lid | |
| 3) Pass elastic through the inside back of lid and loop to plastic paper holder | |

E) CUSHION/COMPARTMENT COVER – “20” PORTION

- 1) Open lid
- 2) Slip cover over lid. Pull down firmly and velcro at bottom of cover.


NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

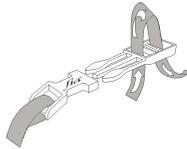

2) HEAD REST REMOVAL:

Push in side release buttons
- Lift off
(If unable to remove consult dealership)

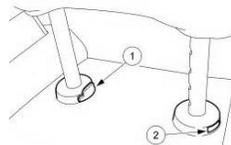

3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

If you have any comments or concerns, please feel free to contact our

customer service department at:

Toll-free: 1-800-835-0438

OR

Email: info@gofia.com

WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



**Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438 Fax: (204) 284-8246
E-Mail: info@gofia.com Website: www.gofia.com**