

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

 
SEAT COVERS  
BY



FEATURING

**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**

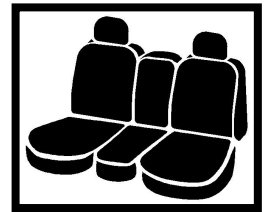

INSTALLATION INSTRUCTIONS  
FOR

NP98-31/ Oe38-31/ SL68-31/ SP88-31/ TR48-31/ TRS48-31

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**A) CUSHION COVER – “40” PORTION:**

- 1) Move seat to most forward and uppermost position
- 2) Place cover on seat cushion ensuring long side strap is on the door side
- 3) Pass back flap of cover with straps through crevice
- 4) Feed straps under seat and buckle to front of cushion cover
- 5) Pass long side strap through the opening between the seat and the molded plastic and under the seat
- 6) Buckle to the other side
- 7) Adjust straps to equalize to equalize tension

**B) BACKREST COVER - “40” PORTION:**

- 1) Remove headrests. (see note below)
- 2) Slip cover over backrest and pull down firmly (see airbag warning below)
- 3) Tuck flaps under backrest and attach to velcro at back
- 4) Adjust velcro to equalize tension
- 5) Replace headrest (see note below)

**C) BACKREST COVER/ARMREST COVER – “20” PORTION:**

- 1) Undo velcro closure on back of cover
- 2) Place the armrest/storage compartment in up position
- 3) Center cover and slip through armrest. Apply velcro closure
- 4) Position adhesive velcro supplied to align with velcro on cover around the edge of cup holder. **NOTE: BEFORE POSITIONING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.**
- 5) Snug the cover from top to bottom and place armrest into down position
- 6) Position adhesive back velcro supplied to inside the storage compartment and align with velcro on the side and back of cover
- 7) Adjust all velcro to equalize tension
- 8) Adjust all velcro to equalize tension

**D) LID COVER/ARMREST – “20” PORTION**

 
- 1) Open lid
- 2) Slip cover over lid and position elastic on the back of lid
- 3) Pass elastic through the inside back of lid and loop to plastic paper holder
- 4) Snug and align all openings on cover to lid

**E) CUSHION COVER – “20” PORTION**

- 1) Center cover on seat
- 2) Place back flap through crevice
- 3) Pass front strap under the seat and buckle to back flap
- 4) Pass side straps around the back and buckle
- 5) Adjust straps and buckles to equalize tension

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

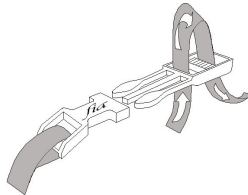


**2) HEAD REST REMOVAL:**

Push in side release buttons

- Lift off

 (If unable to remove consult dealership)

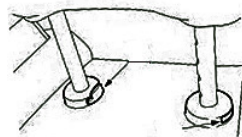

**3) RE-INSTALLATION OF HEADRESTS**

A) Ensure pre-cut holes in seat cover align with holes in headrest base.

B) Replace headrests

**WARNING: DO NOT BLOCK AIR BAGS**

**WHEN INSTALLING SEAT COVERS:**

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

**LIMITATION LIABILITY:** The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

9-04-13