

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY

*fia*

**SUPER-GRIP®**

*The slip resistant fastening system*

TR48

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit. The **SUPER-GRIP BUCKLES** are self-locking. For proper usage, see diagram (1) below.

**INSTALLATION FOR:**

**BENCH, SPLIT BENCH AND INDIVIDUAL SEATS:**



**Backrest Cover(s):**

1. move seat to most forward position
2. slip cover over backrest
3. smooth cover tightly from top to bottom
4. tuck excess material through crevice
5. join velcro to the back

**Cushion Cover:**

1. slip cover over cushion
2. position the seat belts through the openings provided
3. tuck the back part of the cushion cover through the seat crevice
4. pass the front straps under the seat and secure to the center buckles
5. pass the side straps under the back corners of the seat and secure to the end buckles
6. adjust all straps/buckles to equalize the tension for a uniform fit

**INSTALLATION FOR BUCKET SEATS:**



**NOTE:**

 
**BUCKET SEATS WITH ARMRESTS** - The backrest portion of the seat cover has velcro closures on the side seams to fit around armrests.

**BUCKET SEATS WITH REMOVABLE HEADRESTS** – For some models the seat cover is installed over headrest then adjust headrest to ensure proper fit. For models where headrests must be removed, see notes below.

1. move seat to most forward position
2. slip cover over backrest and pull down firmly
3. smooth tightly from top to bottom of backrest
4. tuck flap through crevice and attached to velcro at back
5. position seat cover cushion over seat cushion
6. pass front strap under seat and buckle
7. pass side cushion straps around the back of seat and buckle
8. adjust all straps/buckles and velcro to equalize tension for a uniform fit

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

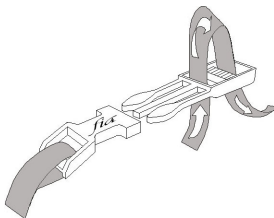

**2) HEAD REST REMOVAL:**

 
A) Insert paper clip into holes at base to release.  
Lift off

**OR**

B) Push in side release buttons  
Lift off

**OR**

C) Ford – Press down on the top of the seat by the post holes. Locate the two clips and remove with pliers. Lift off headrest. Install cover. Replace clips and headrests (If unable to remove consult dealership)



**3) RE-INSTALLATION OF HEADRESTS**

- A) Locate headrest base and put a small slit in the stretch fabric to accommodate each of the posts.
- B) Stretch fabric will not run

**WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.**

*fia*

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com