

SEAT COVERS
BY



If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS

FOR

NP99-27/ OE39-27/ SL69-27/ SP89-27/ TR49-27/ TRS49-27

**THIS COVER FITS A SEAT WITH
A CENTER CUSHION
COMPARTMENT. IF THE CENTER
CUSHION DOES NOT OPEN, YOU
HAVE THE WRONG SEAT
COVER. (SEE PICTURE ABOVE)**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVERS – “40” PORTIONS:

- | | |
|----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| 1) Remove head rest (see note on reverse) | 4) Tuck flaps through crevice, under plastic panel and up to attach to Velcro at back |
| 2) Move seat to most forward position | 5) Replace headrests (see note on reverse) |
| 3) Slip cover over backrest and pull down firmly (see airbag warning on reverse) | |

B) CUSHION COVERS – “40” PORTIONS:

- | | |
|-------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
| 1) Position cover on seat to allow seat belt buckles through opening provided | 3) Pass side straps through the opening between the molded plastic and the seat |
| 2) Pass straps through crevice, under seat and buckle to front | 4) Pass the straps around the back and buckle |
| | 5) Adjust straps and buckles to equalize tension |

C) BACKREST COVER – “20” PORTION

 
- | | |
|--------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| 1) Open armrest / storage compartment | 4) Position adhesive back Velcro, supplied, to align with the velcro on cover |
| 2) Center cover under armrest | NOTE: BEFORE PLACING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED. |
| 3) Snug cover at back of armrest so the velcro on the cover is positioned through the crevice where lid and armrest are hinged | |

E) CUSHION COVER – “20” PORTION

- | | |
|-------------------------------------------------------------|----------------------------------------------------------------------------------|
| 1) Open cushion lid to up position | 4) Pass the side straps under back corners of seat and secure to the end buckles |
| 2) Center the cover on the seat | 5) Adjust straps/buckles to equalize tension |
| 3) Tuck the back part of cushion cover through seat crevice | |

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

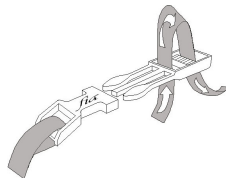


2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

 (If unable to remove consult dealership)

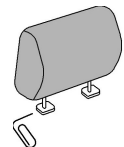

3) RE-INSTALLATION OF HEADRESTS

- Ensure pre-cut holes in seat cover align with holes in base
- Replace headrest

WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

