

SEAT COVERS
BY



If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

THIS COVER FITS A SEAT THAT FOLDS FLAT. IF THE PASSENGER BACK REST DOES NOT FOLD FLAT INTO A TABLE YOU HAVE THE WRONG SEAT COVER. (SEE PICTURE ABOVE)

**THE SLIP RESISTANT FASTENING SYSTEM
INSTALLATION INSTRUCTIONS
FOR
OE39-31/ SL69-31/ SP89-31/ TR49-31**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

DRIVER'S SIDE – ONE PIECE BUCKET SEAT COVER

A) BACKREST COVER –

- | | |
|---|--|
| <ol style="list-style-type: none"> 1) Remove head rest (see note) 2) Slip cover over backrest 3) Pull down firmly over backrest 4) Recline backrest | <ol style="list-style-type: none"> 5) Pass the straps attached to center flap through crevice 6) Move backrest to upright position 7) Replace headrest (see note) |
|---|--|

B) CUSHION COVER

- | | |
|---|---|
| <ol style="list-style-type: none"> 1) Move seat to most forward position 2) Center cushion cover on seat 3) Pull straps to front from underneath the seat at crevice 4) Buckle to the front of the seat | <ol style="list-style-type: none"> 5) Pass side straps to the back of the seat and buckle to back flap of backrest 6) Adjust all straps and buckles to equalize tension for a uniform fit |
|---|---|

PASSENGER SIDE – TWO PIECE BUCKET SEAT COVER

A) BACKREST COVER –

 
- | | |
|--|--|
| <ol style="list-style-type: none"> 1) Remove head rest (see note) 2) Open zipper 3) Slip cover over backrest and pull down firmly | <ol style="list-style-type: none"> 4) Close zipper (see note) 5) Replace headrest (see note) |
|--|--|

B) CUSHION COVER –

- | | |
|---|--|
| <ol style="list-style-type: none"> 1) Center cover on seat 2) Pass the front strap under seat and buckle to back flap | <ol style="list-style-type: none"> 3) Pass side straps around back of seat and buckle 5) Adjust straps and buckles to equalize tension |
|---|--|

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

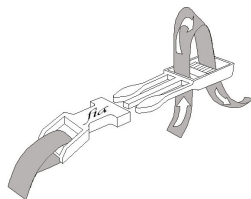

3) ZIPPERS:

- For ease in installation the zipper is longer than the cover.
- Tuck excess zipper under cover

 
2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)

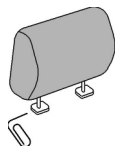

4) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in base.
B) Replace headrests

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

