

Toyota Tacoma 2x4, 4x4 (2017) Part #SSR-612-40/47



Installation Instructions

- 1) Park vehicle on level hard surface. Engage emergency brake. Place blocks in front and behind rear wheels to prevent rolling. Observe all safety precautions and wear safety glasses.
- 2) With the vehicle still on the ground (**one side at a time**), loosen axle u-bolts to allow removal of the factory bump-stop.
- 3) Install the SumoSprings mounting bracket under the ubolts.
- 4) Retighten the u-bolts as before and torque to factory specifications. **IMPORTANT**: After 200-500 miles of driving, re-torque u-bolts.
- 5) Raise rear of vehicle allowing the axle to hang freely. Support the frame using safety jack stands.
- 6) Apply Loc-Tite to threads of the stud on the mounting plate and install the SumoSpring by turning it tightly on to the bolt.

- 7) Repeat procedure on the other side.
- 8) Jack up vehicle, remove safety jack stands.
- 9) Carefully lower vehicle to the hard surface. Remove the blocks in front and back of the rear wheels.
- 10) Release emergency brake.

11) Fill out warranty card and send to SuperSprings. The warranty card is on the reverse side of this page.

Important Notice.

- 1) For easy installation please read instructions completely first and have all necessary tools available.
- 2) We recommend that this installation be done by a professional or persons with sound mechanical knowledge.
- 3) SumoSprings are designed to work with the original factory springs only. If they have been replaced with aftermarket springs then please consult with Supersprings International at 866-898-0720.
- 4) These instructions are meant as a guide for the installation of SumoSprings. SuperSprings International assumes no liability for the actual installation process. Installers should apply common automotive safety practices when raising, lowering and working on vehicles.
- 5) SumoSprings are designed to enhance the vehicles load carrying performance and road handling however it does not authorize (or recommend) loading beyond the manufacturer's GVWR specifications.
- 6) For technical support contact SuperSprings International at 866-898-0720.

To prevent damage to the vehicle and to ensure safety, do not exceed the maximum load recommended by the vehicles manufacturer (GVWR).