
HYUNDAI TUCSON

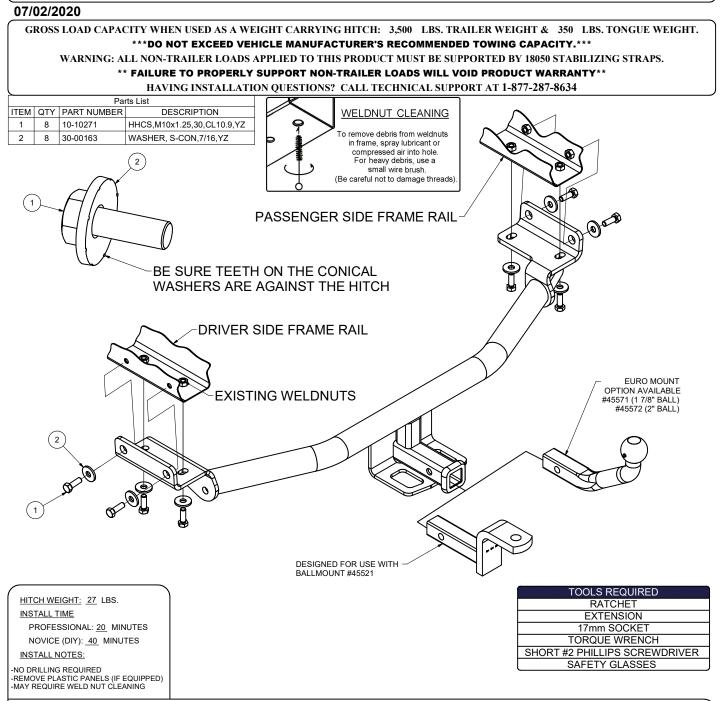

INSTALLATION STEPS

- 1. If equipped, remove two (2) plastic panels. These are located under the bumper behind the rear tires. Using a screw driver, remove three (3) plastic clips from each panel and pull down to dislodge. Put the panels and fasteners aside for reinstallation later.
- 2. Start by inserting the hitch over the of the exhaust on the passenger side. Rotate the hitch and raise hitch into position. Install four (4) M10-1.25 x 30 with four (4) 7/16" conical tooth washers per side. Be sure the tooth portion of the washer is against the hitch. Note: Pull down on the exhaust to ease the installation process.
- 3. Torgue all M10 fasteners to 48 ft-lbs.

Scan

for more

4. Reinstall two plastic panels (if removed in step 1).



PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

CURT Manufacturing LLC., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, CURT Manufacturing LLC., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. CURT Manufacturing LLC.'s liability is limited to information repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage

12241