



WEATHERBEATER™ FLOOR LINERS

PT #1320

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Husky Liners. Your new front floor liners are custom molded to fit your Chevrolet Silverado/GMC Sierra Regular Cab truck. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET SILVERADO / GMC SIERRA REGULAR TRUCK FRONT FLOOR LINERS



LEFT OR DRIVER'S SIDE



RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR NEW FRONT LINERS, MOVE BOTH FRONT ROW SEATS TO THEIR MOST REARWARD POSITION. WITH THIS DONE, INSTALL THE LINERS, POSITIONED AS SHOWN ABOVE. THE DRIVER'S SIDE LINER ATTACHES TO THE FACTORY MAT RETAINER POSTS IN THE FLOORING. A CLIP THAT WILL BE ADDED TO THE PASSENGER SIDE IS (OVER)



WEATHERBEATER™ FLOOR LINERS

PT #1320

INCLUDED IN YOUR PACKAGING. ONCE YOU HAVE INSTALLED BOTH OF YOUR LINERS, REPOSITION THE SEATS AS DESIRED.

INSTRUCTIONS FOR INSTALLING THE PASSENGER SIDE CLIP

- 1) Locate the screw-in liner retention clip in your liner packaging and remove the clip from the bag.
- 2) Insert the screw-in liner retention clips into the bottom of the liner (Image 2).
- 3) Place the liner in the vehicle, moving it to the correct fitment position and press down on the liner to pre-mark the carpet screw into the carpet (Image 3).
- 4) Remove the clip and screw the carpet screw into the carpet with a coin or screw driver (Image 4).
- 5) Press your liner over the top of the retention posts (Image 3).



Image 1.

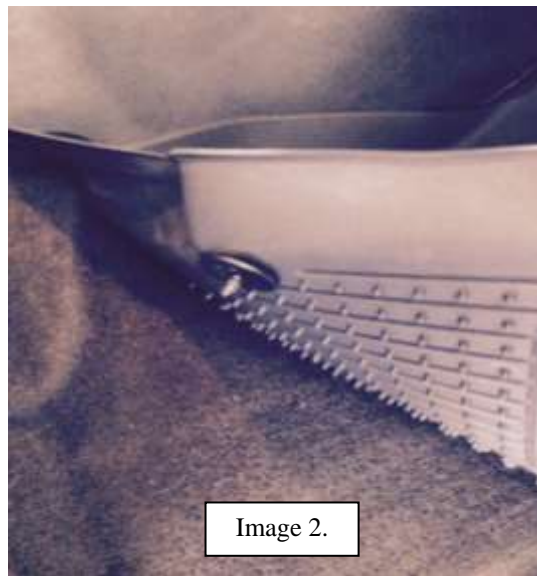


Image 2.



Image 3.



Image 4.

IF YOU HAVE ANY QUESTIONS REGARDING THE INSTALLATION OF YOUR HUSKY® LINER RETAINING CLIPS, JUST GIVE US A CALL MONDAY THROUGH FRIDAY FROM 8:00 AM – 5:00 PM CENTRAL TIME AT 800-344-8759 OR E-MAIL US AT: contactus@huskyliners.com.