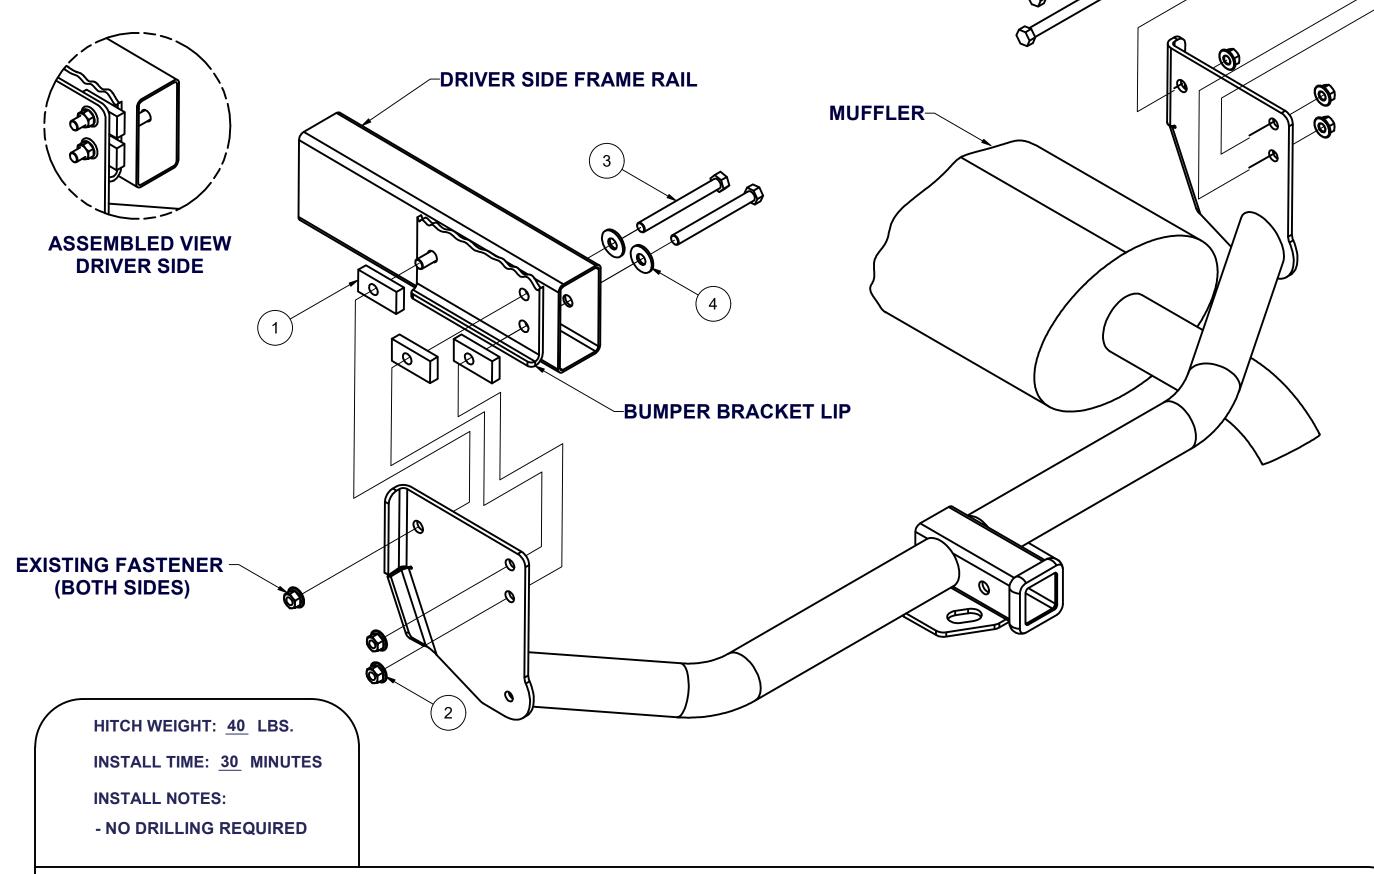# 13296 CHRYSLER ASPEN / DODGE DURANGO

10/23/2020

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 6,000 LBS. TRAILER WEIGHT & 600 LBS. TONGUE WEIGHT.
GROSS LOAD CAPACITY WHEN USED AS A WEIGHT DISTRIBUTION HITCH: 10,000 LBS. TRAILER WEIGHT & 1,000 LBS. TONGUE WEIGHT.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

Parts List

ITEM	QTY	PART NUMBER	DESCRIPTION
1	6	CM-SP52	.500 x 1.25 x 2.50" ROUND HOLE SPACER
2	4	20-00062	NUT, SER-FLANGE,1/2-13 UNC,GRD8,YZ
3	4	10-10294	HHCS,1/2-13 UNC,5,GRD8,YZ
4	4	30-00133	WASHER,FLAT,1/2,YZ

TOOLS REQUIRED
RATCHET
21mm DEEP SOCKET
3/4 DEEP SOCKET
TORQUE WRENCH

PASSENGER SIDE FRAME RAIL

EXISTING FASTENERS

ASSEMBLED VIEW DRIVER SIDE

DRIVER SIDE FRAME RAIL

MUFFLER

BUMPER BRACKET LIP

EXISTING FASTENER (BOTH SIDES)

HITCH WEIGHT: 40 LBS.

INSTALL TIME: 30 MINUTES

INSTALL NOTES:
- NO DRILLING REQUIRED

INSTALLATION STEPS

1) Remove three bumper bracket nuts each side. Remove two rear most bolts each side.

2) Install supplied 1/2" bolts where factory bolts were removed. Push all bolts through frame until 1/2" protrudes through frame over bumper bracket lip. Position 1/2" thick spacers over bolts.

3) Raise hitch into position over tail pipe. Attach with existing forward most bolts and fasten with existing nuts. Fasten remaining bolts with 1/2" flange nuts.

4) Torque all 1/2" fasteners to 110 lb.-ft. Torque all M14 fasteners to 136 lb.-ft.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.