
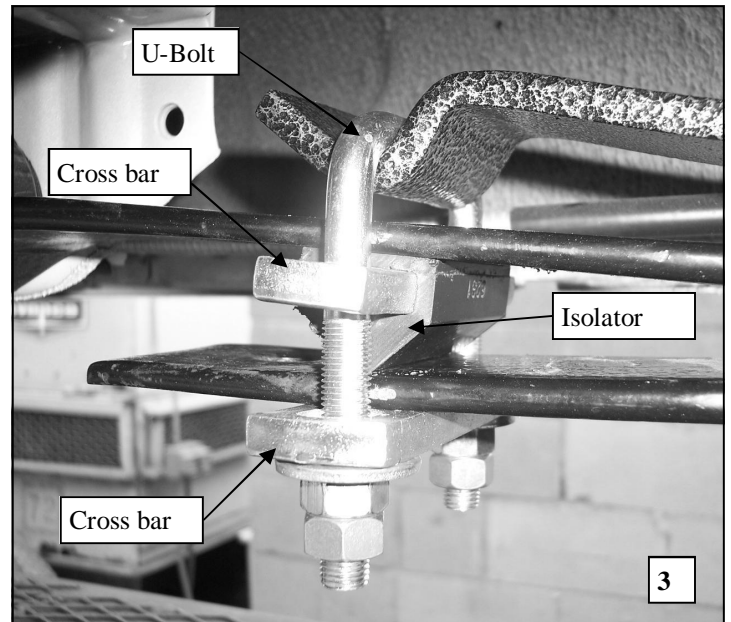


INSTALLATION INSTRUCTIONS Ford Transit Helper Spring

Thank you for purchasing a quality Hellwig Product.

PLEASE READ THIS INSTRUCTION SHEET COMPLETELY BEFORE STARTING YOUR INSTALLATION

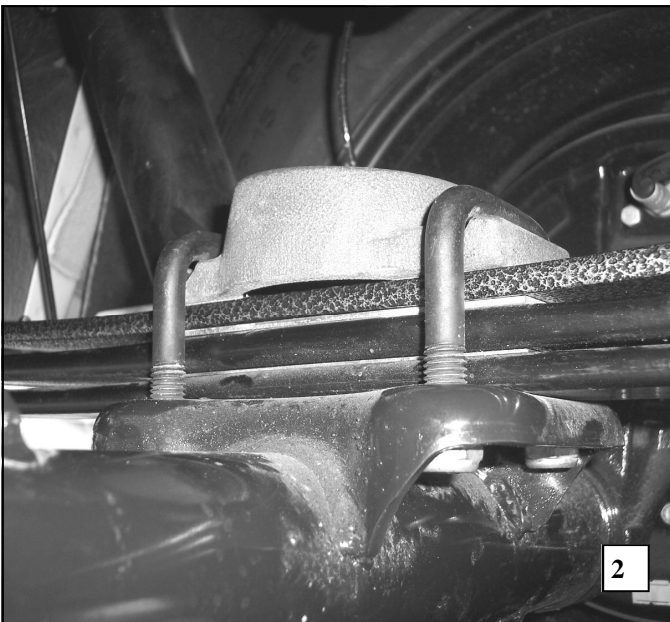

Hellwig PRODUCTS.com

559-734-7451 800-367-5480 FAX 559-734-7460

1. On the driver's side rear spring, remove U-bolts and U-bolt casting at axle and place the helper spring on top of the main spring. Replace the U-bolts and U-bolt casting on top of Hellwig helper spring and tighten to the manufacturer's torque specification. Repeat process for passenger side. **DO NOT REMOVE U-BOLTS FROM BOTH SIDES AT THE SAME TIME. See photos 1 & 2.**
2. Install adjustment U-bolts, crossbars, and isolators as shown in **photo 3.**
3. **Attach U-bolts** with the supplied washers and nuts.
4. Tighten the U-bolts until the isolator bulges slightly. Double nut the U-bolts after adjusting.
5. Bounce the vehicle checking for clearance on all undercarriage components, brake lines, fuel lines, wiring, etc

IMPORTANT NOTE: This unit is designed to increase the level load carrying capacity of your vehicle. Never load the vehicle this unit is installed on beyond the manufacturer's maximum gross vehicle weight rating.

NOTE: Your spring may have a small hole in the end, this is for our manufacturing process and will not be used.

ATTENTION INSTALLER: BE SURE THE CUSTOMER RECEIVES THIS INSTRUCTION SHEET, ALL IMPORTANT NOTE CARDS, WARNING CARDS, AND THE WARRANTY FORM.