



# WEATHERBEATER™ FLOOR LINERS


PT #1979

## CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Husky Liners. Your new third seat floor liner is custom molded to fit your Toyota Highlander. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA HIGHLANDER 3<sup>RD</sup> SEAT FLOOR LINER

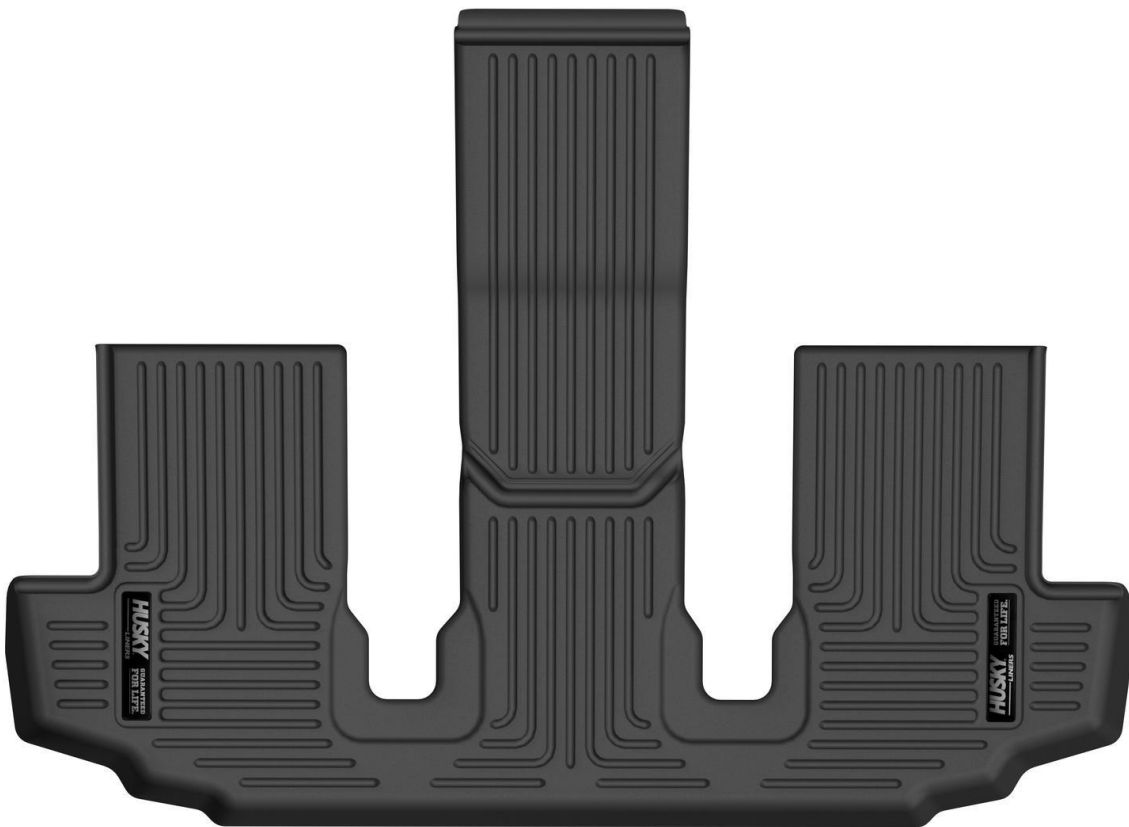

TO EASE INSTALLATION OF YOUR 3<sup>RD</sup> SEAT LINER, MOVE THE 2<sup>ND</sup> ROW SEATS TO THEIR MOST FORWARD POSITION. WITH THIS DONE, INSTALL THE LINER, POSITIONING IT AS SHOWN IN THE IMAGE ABOVE. NOTE THAT THE TONGUE PORTION THAT EXTENDS FORWARD TUCKS BEHIND THE BACK OF THE 2<sup>ND</sup> SEAT LINER. THE TONGUE CAN EXTEND UNDER THE 2<sup>ND</sup> ROW BENCH SEAT AS WELL AS BETWEEN THE 2<sup>ND</sup> ROW BUCKETS. IF YOU HAVE 2<sup>ND</sup> ROW BUCKET SEATS AND A CONSOLE, YOU WILL NEED TO TRIM YOUR LINER. PLEASE SEE THE BACK OF THIS PAGE FOR TRIMMING DETAILS

View the Husky Liner Lifetime Warranty at [www.huskyliners.com/lifetime-warranty](http://www.huskyliners.com/lifetime-warranty)

1979\_Instrdoc.pdf  
09\_24\_2020



# WEATHERBEATER™ FLOOR LINERS

PT #1979

IF YOUR HIGHLANDER HAS 2<sup>ND</sup> ROW BUCKET SEATING WITH THE FACTORY CONSOLE LOCATED BETWEEN THE BUCKET SEATS, YOU WILL NEED TO TRIM YOUR LINER TO ACHIEVE THE CORRECT FIT. TO TRIM, USE A UTILITY KNIFE OR HEAVY SHEARS AND FOLLOW THE MOLDED IN TRIM GROOVE LOCATED JUST IN FRONT OF THE RAISED PROTECTIVE RIB AND REMOVE THE SECTION OF THE TONGUE AS SHOWN BELOW.

