



**PART 2070465 (ALC25000-01, ALC25000-00)**  
**JEEP SECURITY CARGO LID**  
 2007-10 Jeep Wrangler JK

**PARTS:**

	QTY	1	2	3	4
1 CARGO SIDE PLATES- D & P	2				
2 CARGO OUTSIDE PLATES	2				
3 CARGO CENTER PLATE & LID (WITH KEYS)	1				
4 CARGO BACK SEAT PLATE	1				
5 8MM x 25MM Button Head bolts	19				
6 8MM 8x16x1.6mm flat washers	25				
7 8MM LOCK WASHERS	25	10,11	15	16	
8 8MM NUT PLATES	6				
9 8MM x 35MM Button Head bolts	6				
10 8MM X 45MM BUTTON HEAD BOLTS	2				
11 8MM NUT	2				
12 4MM Button Head bolts	8				
13 4MM WASHERS	8				
14 4MM LOCK WASHERS	8				

15 QUICK RELEASE PINS	2
16 RUBBER STRIP	1
17 RUBBER 1" PADS	6

**STEP 1:** MOUNT BACK PLATE TO SUPPORT BAR USING (5) 8MM BOLTS, (5) 8MM FLAT AND LOCK WASHERS



**STEP 2:** FOLD BACK SEAT DOWN, AND LOCATE THE BOLTS MOUNTING THE SEAT. REMOVE THE OUTER BOLTS (DO NOT DISCARD AS THEY'LL BE RE USED).



**STEP 3:** ALIGN THE CARGO BACK SEAT PLATE TO THE EXISTING OUTER HOLES. THE CARGO BACK SEAT PLATE WILL BE UPRIGHT. INSTALL USING THE EXISTING OUTER BOLTS. TIGHTEN IN PLACE SECURELY.



**STEP 4:** WITH THE HELP OF ANOTHER PERSON ALIGN THE CARGO CENTER PLATE & LID ON TOP OF THE BACK SEAT PLATE. UNFOLD THE CARGO CENTER PLATE (FACING TOWARDS THE REAR OF VEHICLE) TO SIT AT A 90 DEGREE ANGLE. THIS WILL STABILIZE THE CARGO CENTER PLATE.



**STEP 5:** ONCE STABLE, MOUNT THE CARGO CENTER PLATE TO THE BACK SEAT PLATE USING (10) 8MM X 35MM BOLTS WITH 8MM LOCK AND FLAT WASHERS. LEAVE SEMI LOOSE FOR ADJUSTMENT.



**STEP 6:** TAKE THE 8MM X 40 BUTTON HEAD BOLT AND ATTACH THE 8MM NUT (THIS WILL ACT AS A LOCK DEVICE). MOUNT THE 8MM BUTTON HEAD AND NUT TO THE BACK BOTTOM END OF THE PASSENGER SIDE CARGO PLATE. SCREW IN ALL THE WAY TO BOTTOM, YET NOT TIGHT. THE CARGO PASSENGER PLATE NEEDS TO BE FITTED TO VEHICLE, AND THEN ADJUSTMENT MADE TO THE 8MM BOLT SO THAT IT STABILIZES THE CARGO PLATE (ADDING ADDITIONAL SUPPORT).





**STEP 7:** ONCE PASSENGER CARGO PLATE ALIGNED- BOLT IN PLATE USING THE (5) 8MM X 35MM BOLTS, (5) 8MM LOCK AND ROUND WASHERS, AND (3) 8MM NUT PLATES\* (**NOTE: THE NUT PLATES ARE USED ALONG THE SIDE OF VEHICLE, AS THE OTHER (2) 8MM BOLTS ARE MOUNTED TO THE BACK PLATE SECTION).**



***\*JEEP JK HARDTOPS WILL NOT REQUIRE (3) 8MM X 35 BOLTS, (3) 8MM NUT PLATES, NOR WASHERS.. USE EXISTING HARDWARE***

**STEP 8:** INSTALL THE CARGO PASSENGER OUTSIDE SIDE PLATE USING THE (4) MM BOLTS AND WASHERS.

**STEP 9:** USING THE RUBBER STRIP SUPPLIED, INSERT THE RUBBER AROUND THE INNER EDGE CREATING A SEAL.





**STEP 10:** REPEAT STEPS - 5 THROUGH 8 FOR THE DRIVER SIDE

**STEP 11:** CLOSE THE CENTER CARGO PLATE & LID AND ALIGN WITH THE CARGO DRIVER AND PASSENGER PLATES. THE LATCH PIN SHOULD BE ABLE TO LOCK INTO BOTH THE DRIVER AND PASSENGER SIDE CARGO PLATE RECEIVING HOLES. IF NOT, ADJUST BY TAPPING WITH A RUBBER Mallet. REMEMBER THE SIDE, BACK, AND CENTER PLATE SHOULD REMAIN SEMI LOOSE UNTIL LATCH PIN FITS INTO PLACE FOR BOTH SIDES.



**STEP 12:** ONCE CENTER PLATE & LID ALIGN WITH BOTH PASSENGER AND DRIVER SIDE PLATES SECURELY FASTEN ALL BOLTS.







**STEP 13:** ATTACH ALL TIE DOWN LOOPS TO EXISTING HOLES ON SIDE PLATES USING #10 MACHINE SCREWS

**STEP 14:** MOUNT THE 6 RUBBER PADS TO EXPOSED AREAS WHERE CENTER LID RESTS.

**STEP 15:** FIND THE HOLES UNDERNEATH THE CARGO CENTER PLATE PASSENGER SIDE, AND INSERT THE QUICK RELEASE PIN. THE PIN NEEDS TO GO ALL THE WAY THROUGH THE CARGO SIDE PLATE SUPPORT BAR. REPEAT FOR THE DRIVER SIDE.

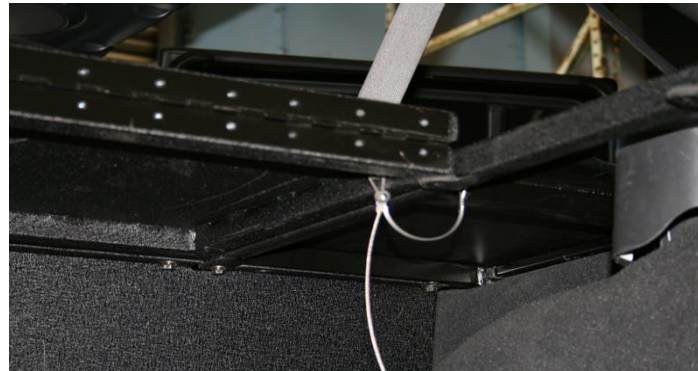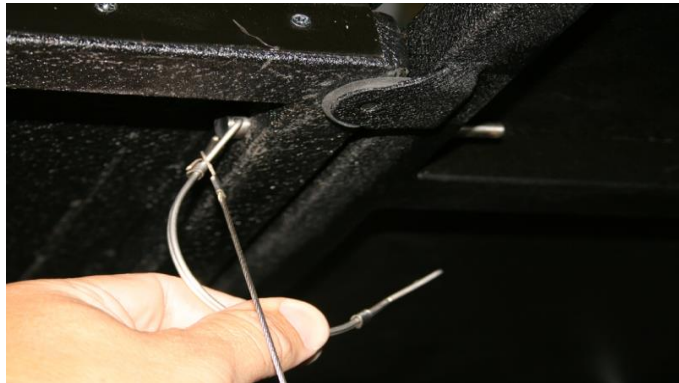

**STEP 16:** USING THE LONG STRIP OF RUBBER TRIM, ATTACH TO BACK LID. YOU'LL NEED TO CUT IN SECTIONS.

ENJOY YOUR SECURITY LID















