




MOUNTING INSTRUCTIONS FOR RAINGUTTER BRACKET KIT

Part No's: 220042 / 220052 / 220062 / 220542 / 222742 / 223412


For Deluxe, Low and M-Profile Light Bars




LOW and M-PROFILE LIGHT BARS

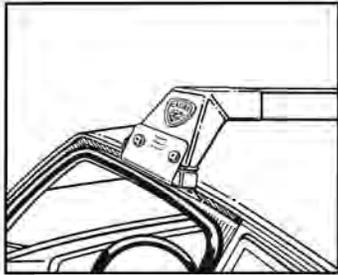


220042/220062

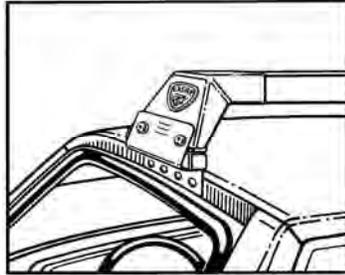


220052

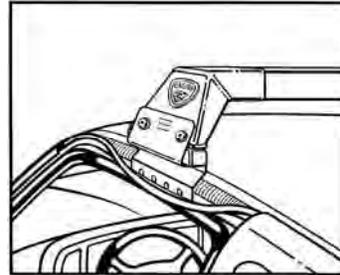

220542

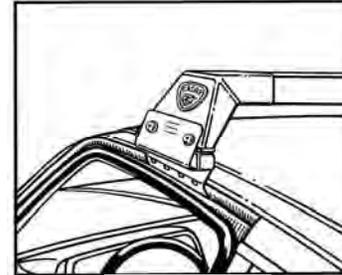


222742

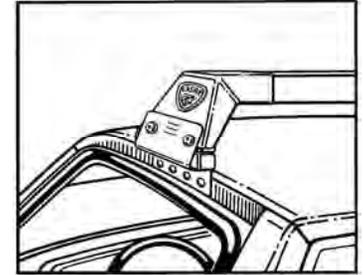


223412


DELUXE LIGHT BARS

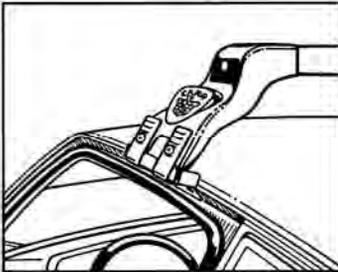


220042/220062

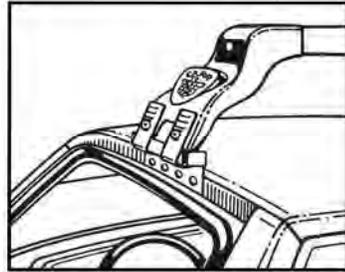


220052

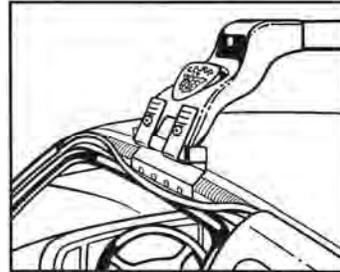

220542

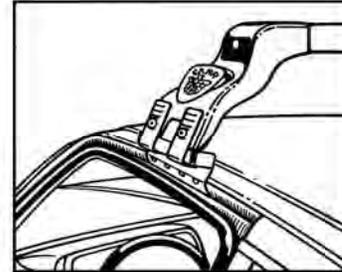

222742

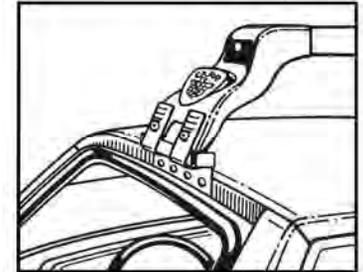

223412

MATERIALS NEEDED: Phillips screw driver, drill motor, 1/8" drill bit.

MATERIALS FURNISHED: Two Stainless Steel Raingutter Brackets, eight sheet metal screws and instruction page.

MOUNTING INSTRUCTIONS:

1. Open the vehicle door.
2. Using diagrams provided place the stainless steel raingutter brackets underneath topside of door jam in desired location. You may to pull back the weather stripping.
3. Hold in place and mark four holes on vehicle using the stainless steel raingutter brackets as a guide.
4. Using a 1/8" drill bit, drill through marked holes on vehicle.
5. Before mounting the raingutter bracket, peel of the plastic (PVC) protective tape. Place the bracket back into location and with the four sheet metal screws provided securely fasten the bracket to the vehicle.
6. Brackets now will be tightly secured to the vehicle. (Refer to the Light Bar instruction guide for installation of your Light Bar)
7. Repeat the same steps for the raingutter bracket on the other side.



Quality and Style that Endures

Follow the diagram and the written directions carefully for a proper, safe installation.

Should you encounter an unusual, unforeseen problem, contact our

Technical Help Line

7:00 AM – 3:00 PM Pacific Time

(951) 719-1068

Visit our web-site at

www.CARR.com

Carr Pattern Co., Inc.