



# EGR

## INSTALLATION INSTRUCTIONS

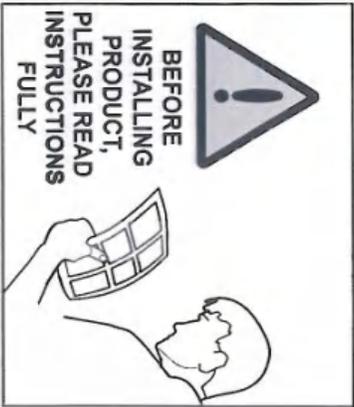



### Cleaning Notes

- Spray with a firm water spray to remove any loose dirt.
- Wash with water, detergent and a soft cloth or sponge.
- Do not use petroleum based solvents or abrasives.
- Do not drive for four hours after installation.
- Do not use automatic car wash.

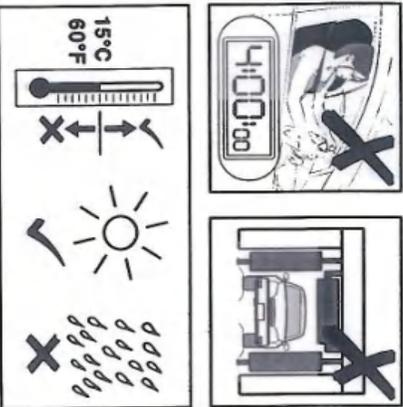

For Technical Support/Warranty Information please call: 800-757-7075

MADE IN USA

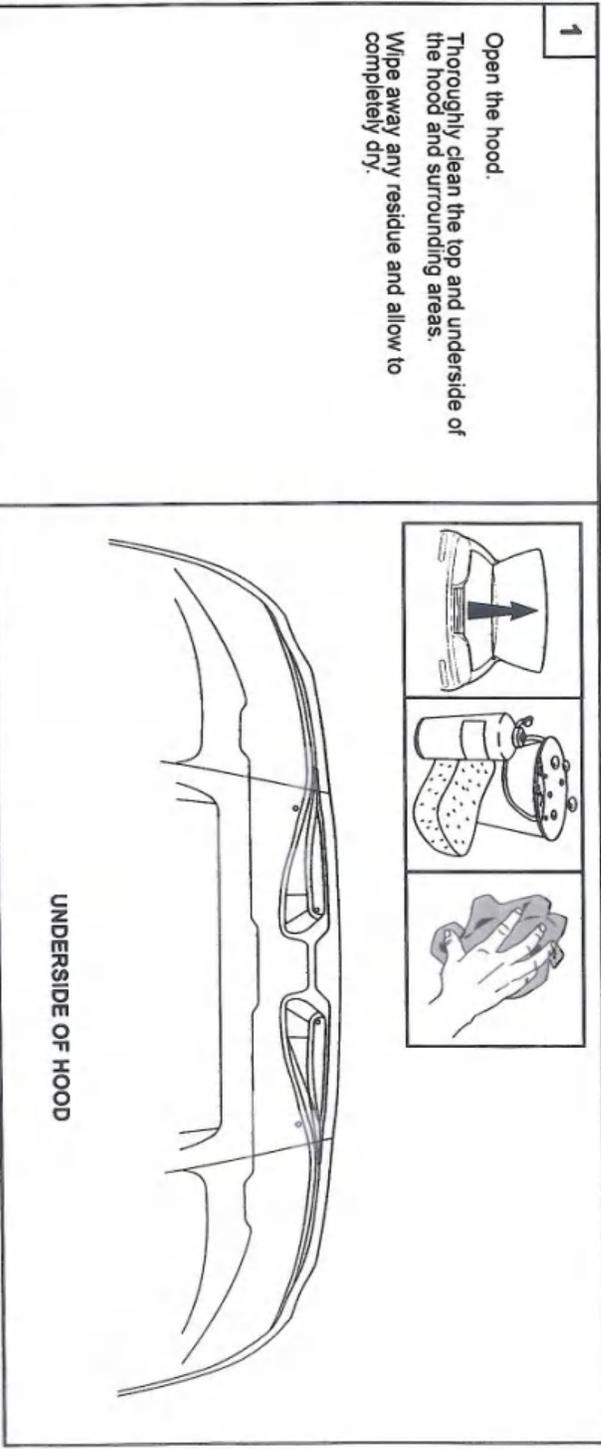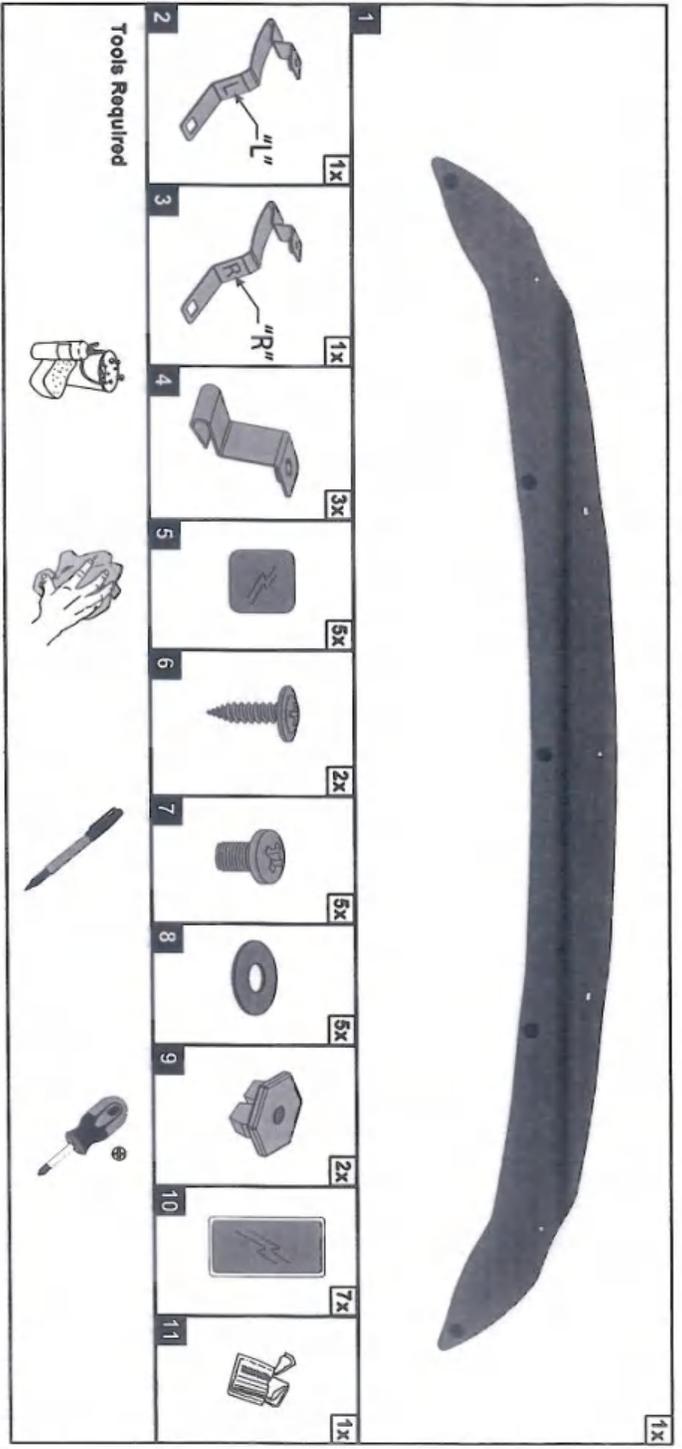

SUP550 01-21-2020

PAGE 1/4

# EGR

## INSTALLATION INSTRUCTIONS


2

Trial fit the hood protector (1) centrally onto the hood and align the front edge of the Hood Protector with the hood lip.

Note the holes on the underside of the hood that correspond with the two slotted holes in the Hood Protector.

With a non-permanent Marker and Pencil, mark the underside of the hood that correspond with the other three holes in the Hood Protector.

Remove the Hood Protector.

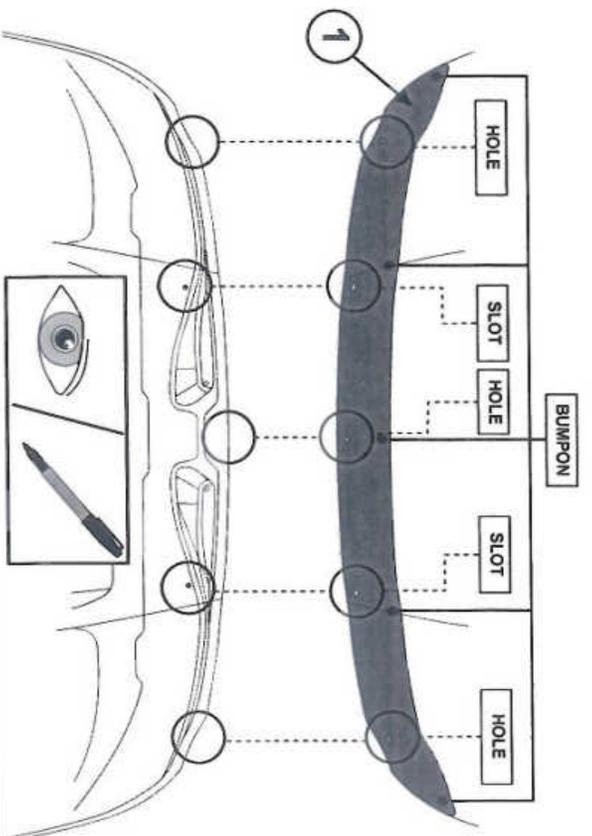



3

At the five hole locations, clean the noted areas on the hood with alcohol wipe (11) provided.

Wipe off any residue with a dry clean cloth.

Adhere the abrasive resistant tape strips (10) over the hood lip.

Apply tape so approximately half of each strip is adhered to the topside and half is adhered to the underside of hood.

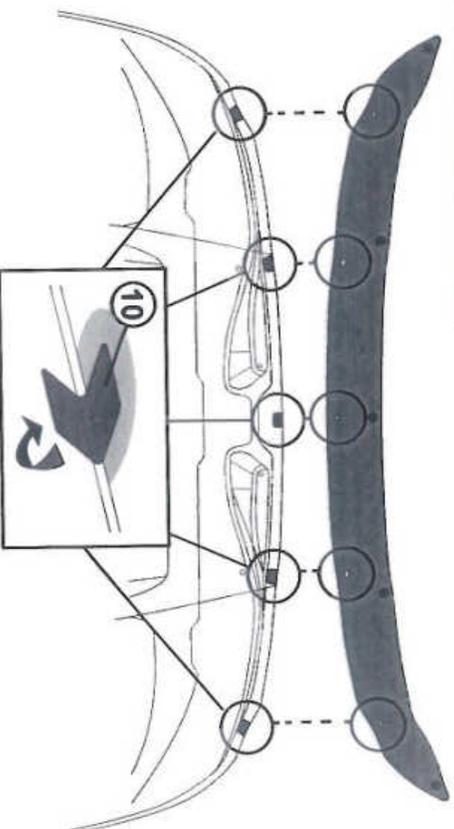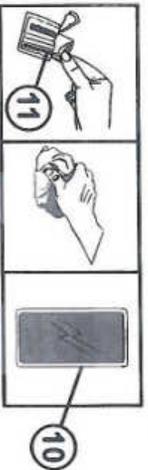

# EGR


## INSTALLATION INSTRUCTIONS

4

Thoroughly clean the tape attachment areas below the fixed clip positions with the alcohol wipe (11) provided.

Adhere two Large Abrasive Resistant Tapes (10) below the previously adhered tapes where the fixed clip will contact the surface of the hood.

Check positioning with the fixed clips to ensure accurate placement.

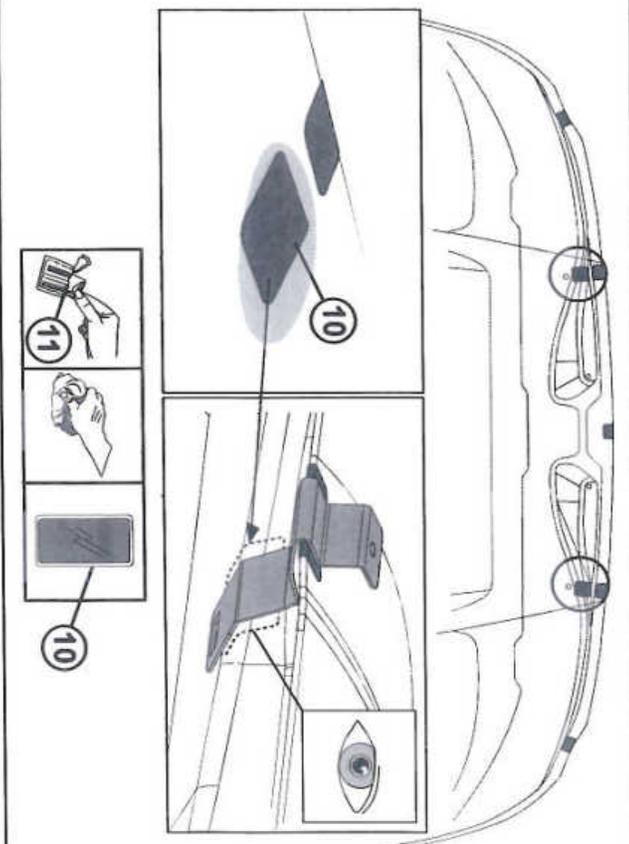

5

As shown above, insert Fixed Clips ("L") (2) and ("R") (3) at the hood locations over the Abrasive Resistant Tapes (10).


Make sure that the two Fixed Clips rest on both Abrasive Resistant Tapes (10).

Secure the two Fixed Clips by pressing the Screw Plug (9) through the Fixed Clips into the hood.

Insert the two Self Tapping Screws (6) into the Screw Plugs (9).

Ensure the Clips are positioned over the Abrasive Resistant Tapes preventing direct contact with the paint.

Failure to do so may result in paint damage.

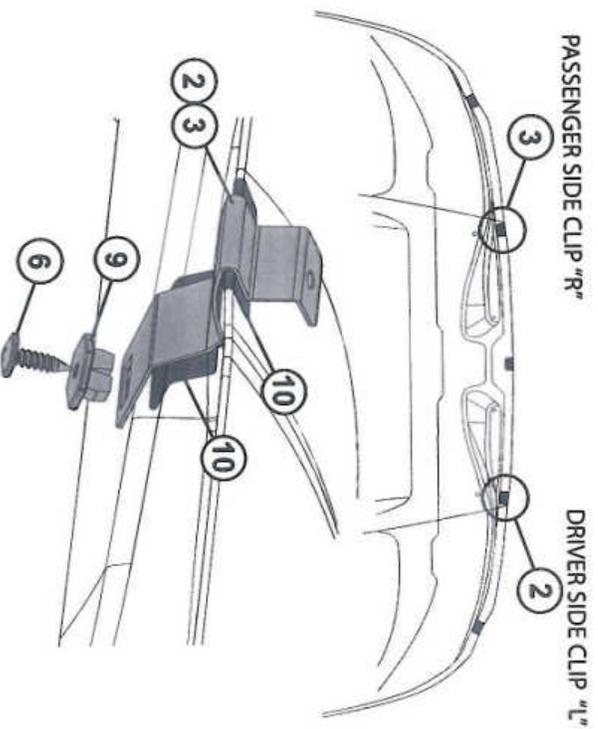

# EGR


## INSTALLATION INSTRUCTIONS

6

Install the push-on clips (4) in the centre and outer positions over the Abrasive Resistant Tapes (10).

**NOTE:** It may be necessary to trim the thickness of the Hood Panel Sealant thickness using a razor blade, to match the thickness at the panel corner. Be careful not to nick the painted metal surface. If the metal is nicked or scratched, use a rust preventative paint to protect it from corrosion such as touch-up or a zinc-rich paint meant for corrosion protection.

Ensure the Clips are positioned over the Abrasive Resistant Tapes preventing direct contact with the paint.  
Failure to do so may result in paint damage.

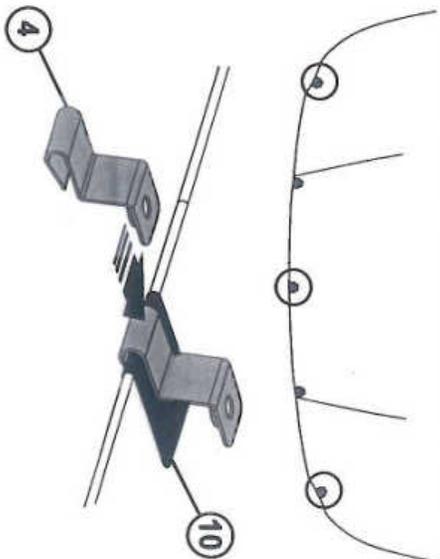

7

Loosely secure the Hood Deflector to the five clips with the five screws (7) and washers (8) provided.

Ensure the Hood Protector is central to the hood.



8

Slightly raise the Hood Protector and clean the noted areas under each bumpson using the alcohol wipe (10) provided.

Adhere the five small abrasive tapes (5) to the hood directly under the bumpsons.

Tighten all five screws (7).

Ensure the Clips and Bumpsons are positioned over the Abrasive Resistant Tapes preventing direct contact with the paint.  
Failure to do so may result in paint damage.

