

# INSTALLATION INSTRUCTIONS AND PARTS LIST

MODEL 415078, 415088, GRIP STEPS (BOARDS ONLY)

UNIVERSAL APPLICATIONS

1. Read instructions completely and check to make sure that all required parts (listed on the service parts list) are on hand before starting the installation.
2. Follow the instructions included with the specific bracket package that you are using to mount the brackets to your vehicle.
3. Step assembly:
  - 3.1 Before attaching the grip steps to the brackets, slide the appropriate number of support braces (item #2) into the channel of the step (item #1).
  - 3.2 Slide the end cap (item #3) over the front and rear of each step. Using the supplied #8 x 1/2" self drilling tek screw (item #8), screw the end cap to the bottom of the step.
4. Attaching the step to the mounting bracket:
  - 4.1 Set the step on the mounting brackets, and slide each support brace over the top of each mounting bracket. Attach the flat spacer plate (item #4) to the bottom of the step, between the support brace, and the top of the mounting bracket.
  - 4.2 Using the supplied 5/16-18 x 1" carriage bolt, washer, and flange nuts, (item #5, 6, 7), attach the step assembly, flat spacer plate and mounting bracket. **(NOTE: Some of the flange nuts are supplied in the specific bracket package, not the step package.)**
  - 4.3 Set the step plate in the correct position and tighten all fasteners.  
Torque all 5/16" fasteners to 19 LB FT.

## SERVICE PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION                              |
|------|----------|-----|--|
| 1    | 551384   | 2   | EXTRUSION-AL,77.62, GRIP STEP,BLK,415078 |
| 1    | 551385   | 2   | EXTRUSION-AL,87.75,GRIP STEP,BLK,415088  |
| 2    | 551296   | 8   | SUPPORT BRACE, UPPER, GALV               |
| 3    | 551394   | 4   | CAP-END,GRIP STEP, BLACK, PLASTIC        |
| 4    | 551298   | 8   | SPACER PLATE, LOWER, BLACK               |
| 5    | 108683   | 16  | BOLT-CRG,5/16-18 X 1.0", SST             |
| 6    | 101369   | 16  | WASHER-FLAT,5/16,SST                     |
| 7    | 102680   | 16  | NUT-SERR FLG,HX,SST,WX,5/16-18           |
| 8    | 107958   | 8   | SCR-TEK #8-18 X 1/2",SST,BLK             |

**LIVERNE**  
TRUCK EQUIPMENT

(A LIVERNE Company)

1200 E. Birch St.

Brandon, SD 57005


REV B 03DEC10

REV A 10JUL09

551267 SHEET 1 OF 2 20AUG08

SERVICE PARTS LIST

MODEL NO. - 415078  
- 415088

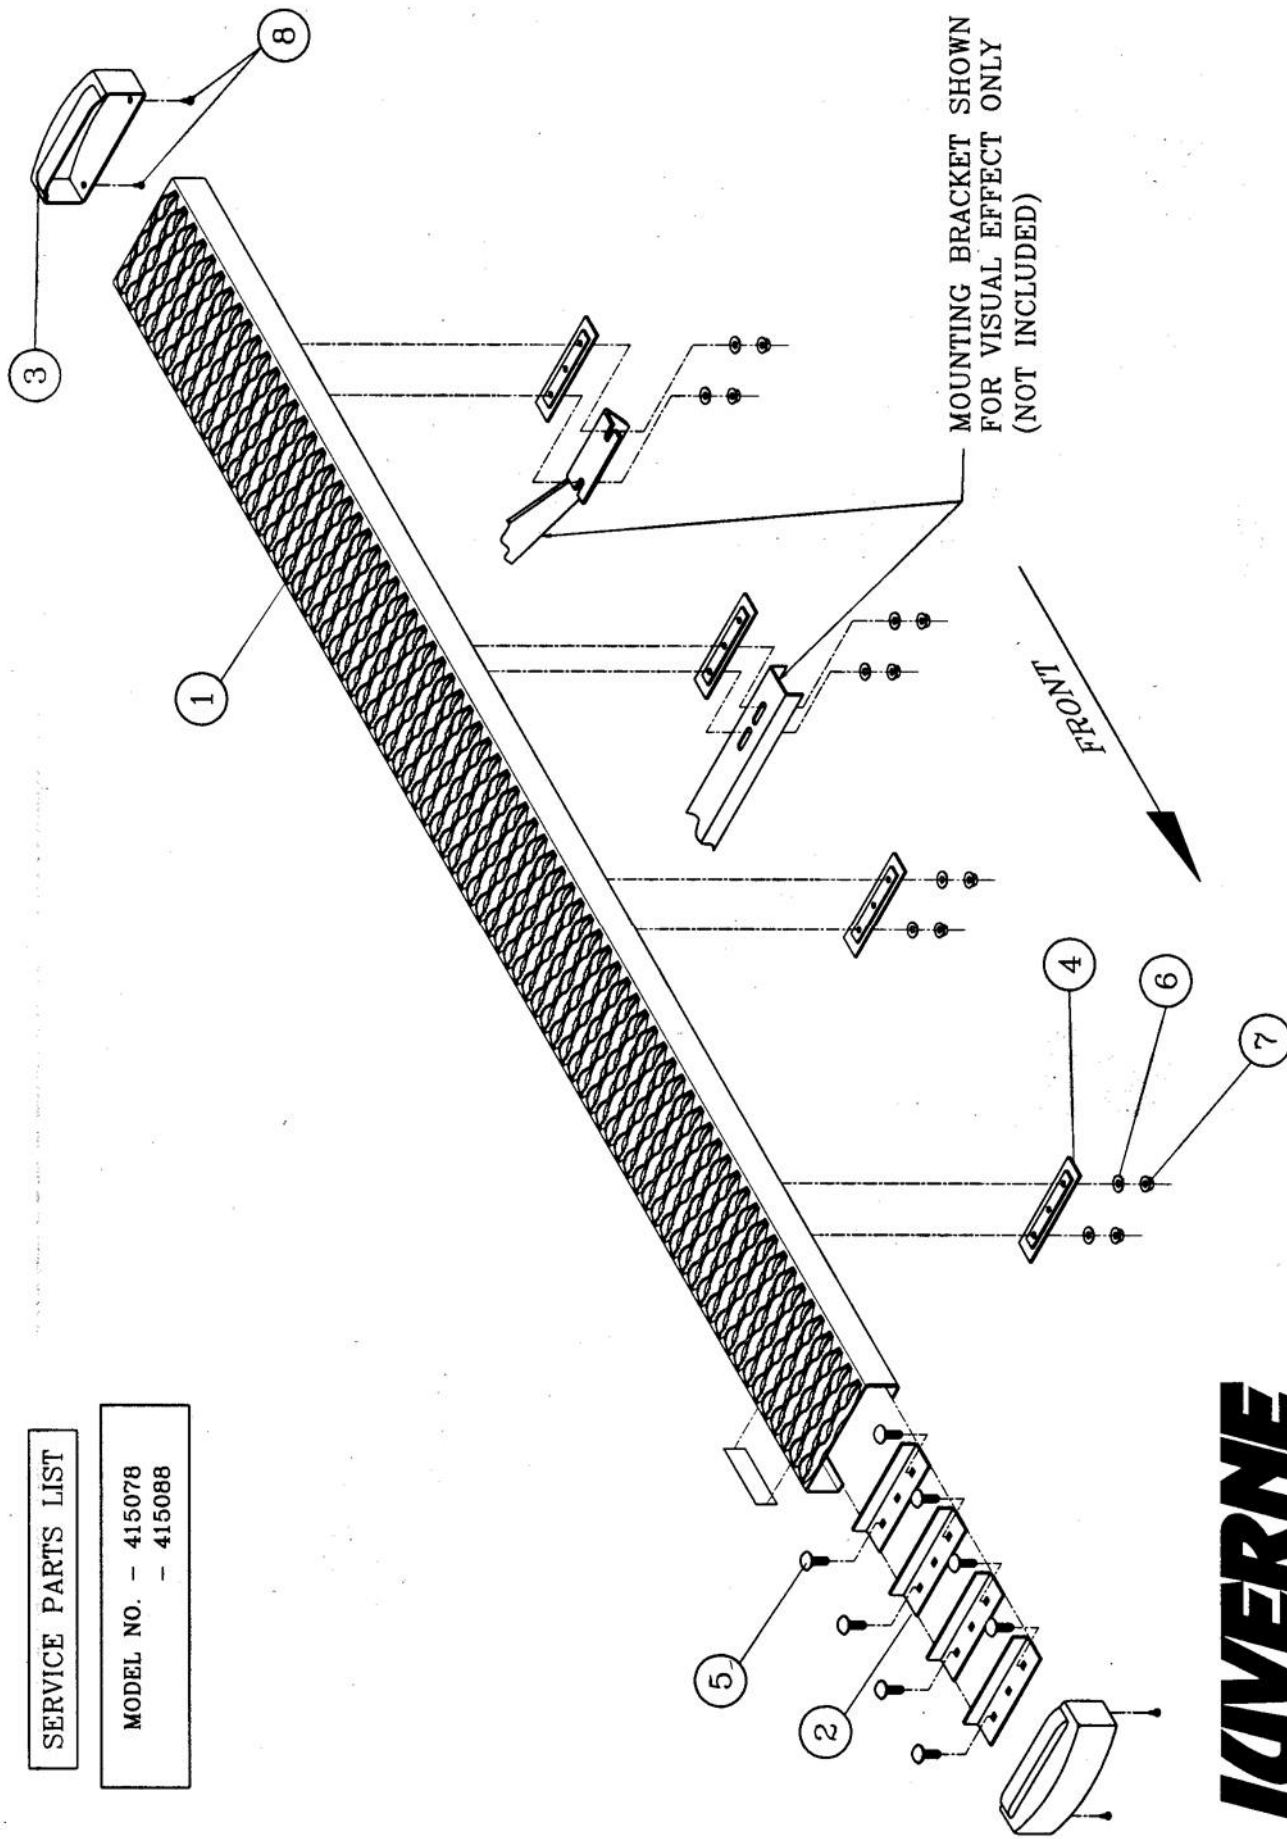

**LAVERNE**  
TRUCK EQUIPMENT  
(A LAVERNE Company)

1200 E. Birch St.  
Brandon, SD 57005

REV B 03DEC10  
REV A 10JUL09  
551267 SHEET 3 20AUG08

# INSTALLATION INSTRUCTIONS AND PARTS LIST

APPLICATION:

**MODEL 401117 WHEEL TO WHEEL STEP BRACKETS:**

**1999 GM SILVERADO & SIERRA REGULAR/EXTENDED/CREW CAB PICKUPS**



1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.
2. ASSEMBLE THE LOAD REACTION STUDS AND HARDWARE (ITEM #8 THRU #11) AS FOLLOWS.
  - 2.1. ON THE SHORT THREADED END OF THE LOAD REACTION STUD (ITEM #11), INSTALL A BLACK 3/8" SERRATED FLANGE NUT (ITEM #10) BACKWARDS TO THE BOTTOM OF THE THREAD. THEN, INSTALL A BLACK 3/8" FLAT WASHER (ITEM #9) AND RUBBER "CUSHION" WASHER (ITEM #8) TIGHT UP AGAINST THE SERRATED FLANGE NUT. (THE END OF THE STUD MUST BE RECESSED IN THE RUBBER WASHER APPROX. 3/16").
  - 2.2. ON THE LONG THREADED END OF THE STUD, INSTALL A BLACK 3/8" SERRATED FLANGE NUT (ITEM #10) BACKWARDS TO NEAR TO THE BOTTOM OF THE THREADS
3. ATTACH THE LOAD REACTION STUD ASSEMBLIES TO THE BODY MOUNTING BRACKETS AS SHOWN.

**NOTE: IF YOU ARE MOUNTING THE STEPS ON A 1500 MODEL PICKUP, YOU MUST ATTACH BRACKET (ITEM #14) TO BRACKETS (ITEM #1 & 2) (SEE FIG 1.) IN ORDER TO USE THE LOAD REACTION STUD.**

- 3.1. INSERT THE STUD, FROM THE INBOARD SIDE OF THE BRACKET THRU THE LOWEST HOLE IN THE BENT FLANGE THAT WILL ALLOW THE RUBBER WASHER TO SEAT FIRM AGAINST THE SIDE WALL OF THE FRAME. INSTALL A BLACK FLANGE NUT (ITEM #10) ON THE OUTBOARD END OF THE STUD (FINGER TIGHT ONLY).

**NOTE:**

**DUE TO EXCESSIVE THREAD LOCKER IN THE BODY MOUNT BOLT AREA ON THE 2010+ GM SILVERADO/SIERRA, USE CAUTION WHEN REMOVING THE BODY MOUNT BOLTS TO REDUCE THE RISK OF CAUSING DAMAGE TO THE THREADED INSERTS INSIDE THE VEHICLE.**

4. REMOVE THE FACTORY FRONT, CENTER, AND REAR BODY MOUNT BOLTS (ONE SIDE OF THE VEHICLE AT A TIME) AND INSTALL THE MOUNTING BRACKETS PER THE FOLLOWING INSTRUCTIONS.
  - 4.1. INSTALL THE FRONT MTG BRKT (ITEM #1 & #2) TO THE FRONT CAB MOUNT AS SHOWN (LEAVE THESE FASTENERS FINGER TIGHT).
  - 4.2. INSTALL THE CENTER MTG BRKT (ITEM #3 & #4) TO THE CENTER CAB MOUNT AS SHOWN (LEAVE THESE FASTENERS FINGER TIGHT).
  - 4.3. INSTALL THE REAR INBOARD MTG BRKT (ITEM #7) & WASHER (ITEM #13) TO THE REAR CAB MOUNT AS SHOWN (LEAVE THESE FASTENERS FINGER TIGHT) (EXTENDED AND CREW CAB ONLY).



(A LIVERNE Company)

1200 E. Birch St.

Brandon, SD 57005

REVISION B 05MAR12  
REVISION A 13OCT10  
551874 SHEET 1 OF 4 27JUL10

# INSTALLATION INSTRUCTIONS AND PARTS LIST

APPLICATION:

**MODEL 401117 WHEEL TO WHEEL STEP BRACKETS:**

**1999 GM SILVERADO & SIERRA REGULAR/EXTENDED/CREW CAB PICKUPS**

## EXTENDED CAB ONLY

- 4.3.1. ATTACH THE REAR OUTBOARD CAB MTG BRKT (ITEM #5 & #6) TO THE REAR INBOARD CAB MTG BRKT (ITEM #7), WITH THE 3/8" BLACK ZINC PLATED BOLTS (ITEM # 12), WASHERS (ITEM #9) AND SERRATED FLANGE NUTS (ITEM # 10). THE REAR OUTBOARD CAB MTG BRKT MUST BE MOUNTED TO THE BACK SIDE OF THE REAR INBOARD CAB MTG BRKT (TOWARDS THE REAR OF THE VEHICLE) AS SHOWN. BE SURE TO USE THE BOTTOM SINGLE HOLE AND BOTTOM DOUBLE HOLES IN THE REAR INBOARD CAB MTG BRKT (SEE FIG 1). PUT THE BOLTS THROUGH THE FRONT SIDE OF THE BRACKET SO THE FLANGE NUTS ARE ON THE BACK SIDE TO ALLOW CLEARANCE FOR THE FRAME OF THE TRUCK. TORQUE THE BOLTS TO 19 LB. FT.

## CREW CAB ONLY

- 4.3.2. INSTALL THE REAR OUTBOARD CAB MTG BRKT (ITEM #5 & #6) TO THE REAR INBOARD CAB MTG BRKT (ITEM #7), WITH THE 3/8" BLACK ZINC PLATED BOLTS (ITEM # 12), WASHERS (ITEM #9) AND SERRATED FLANGE NUTS (ITEM # 12). THE REAR OUTBOARD CAB MTG BRKT MUST BE MOUNTED TO THE BACK SIDE OF THE REAR INBOARD CAB MTG BRKT (TOWARDS THE REAR OF THE VEHICLE) AS SHOWN. BE SURE TO USE THE BOTTOM SINGLE HOLE AND TOP DOUBLE HOLES IN THE REAR INBOARD CAB MTG BRKT (SEE FIG 1). PUT THE BOLTS THROUGH THE FRONT SIDE OF THE BRACKET SO THE FLANGE NUTS ARE ON THE BACK SIDE TO ALLOW CLEARANCE FOR THE FRAME OF THE TRUCK. TORQUE THE BOLTS TO 19 LB. FT.
5. ATTACH THE SPRING HANGER MOUNTING BRACKETS (ITEM # 22 & #23) AGAINST THE SIDE OF THE VEHICLE SPRING HANGER AS SHOWN
    - 5.1. LOOSEN THE SPRING HANGER BOLT JUST ENOUGH SO THAT THE INBOARD SPRING HANGER MTG BRKT (ITEM #23) CAN BE SLID UP BEHIND THE FLANGE OF THE BOLT. POSITION THE INBOARD SPRING HANGER MTG BRKT BEHIND THE FLANGE OF THE SPRING HANGER BOLT, WITH THE CHANNEL OPEN TO THE OUTBOARD SIDE, AS SHOWN.
    - 5.2. INSTALL THE OUTBOARD SPRING HANGER MTG BRKT (ITEM #22) SO THAT THE INBOARD VERTICAL PORTION OF THE BRACKET FITS INSIDE THE CHANNEL SHAPE OF THE INBOARD SPRING HANGER MTG BRKT USING THE 3/8" ZINC PLATED BOLT (ITEM #20), 3/8" WASHER (ITEM #21), 1/2" WASHER (ITEM #18), AND 3/8" ZINC PLATED NYLOCK NUT (ITEM #19) AS SHOWN. DO NOT TIGHTEN THESE BOLTS UNTIL THE BRACKET IS ATTACHED TO THE STEP ASSEMBLY.
  6. ATTACHING THE STEP ASSEMBLY:  
PLEASE REVIEW THE INSTALLATION INSTRUCTIONS THAT ARE INCLUDED IN YOUR STEP ASSEMBLY FOR SPECIFIC DETAILS

TIGHTEN THE BODY MOUNT BOLTS PER MANUFACTURERS SPECS.  
TIGHTEN THE SPRING HANGER BOLT PER MANUFACTURERS SPECS



1200 E. Birch St.

Brandon, SD 57005

REVISION B 05MAR12  
REVISION A 13OCT10  
551874 SHEET 2 OF 4 27JUL10

# INSTALLATION INSTRUCTIONS AND PARTS LIST

APPLICATION:

**MODEL 401117 WHEEL TO WHEEL STEP BRACKETS:**

**1999 GM SILVERADO & SIERRA REGULAR/EXTENDED/CREW CAB PICKUPS**

## SERVICE PARTS LIST

| ITEM                                     | PART NO. | QTY | DESCRIPTION  |
|--|----------|-----|--|
| <b>PARTS INCLUDED IN BRACKET PACKAGE</b> |          |     |  |
| 1  | 551868   | 1   | BRACKET-MTG, CAB, FRONT, LH, 401117                |
| 2  | 551869   | 1   | BRACKET-MTG, CAB, FRONT, RH, 401117                |
| 3  | 551870   | 1   | BRACKET-MTG, CAB,CENTER, LH, 401117                |
| 4  | 551871   | 1   | BRACKET-MTG, CAB, CENTER, RH, 401117               |
| 5  | 551890   | 1   | BRACKET-MTG, CAB, REAR, OUTBOARD, LH, 401117       |
| 6  | 551891   | 1   | BRACKET-MTG, CAB, REAR, OUTBOARD, RH, 401117       |
| 7  | 551907   | 2   | BRACKET-MTG, CAB, REAR, INBOARD, LH/RH, 401117     |
| 8  | 102592   | 6   | WSHR, RUBBER, .354 ID X 1.00 OD X .75 THK          |
| 9  | 106962   | 12  | WSHR, FL, 3/8", .438 ID X 1.00 OD X .083" THK, BZP |
| 10                                       | 106995   | 24  | NUT, SERR FLG, HEX, 3/8-16 UNC, BZP                |
| 11                                       | 106960   | 6   | STUD, -DBL ENDED, STL, 3/8-16 X 4.50", BZP         |
| 12                                       | 106963   | 6   | BOLT, 3/8-16X1.00, BZP                             |
| 13                                       | 108882   | 2   | WSHR, FL, .59 ID X 1.06 OD X .19 THK, ZP           |
| 14                                       | 551571   | 2   | BRKT, 90 DEGREE, 3 HOLES                           |
| 15                                       | 106997   | 2   | SCREW, HHC, 5/16-18X1.00, BZP                      |
| 16                                       | 106996   | 2   | NUT-SERR FLG, 5/16-18, BZP                         |
| 17                                       | 106998   | 2   | WSHR-FL,SST,5/16",BZP                              |
| 18                                       | 100118   | 4   | WASHER-FL, 1/2", ZP                                |
| 19                                       | 102381   | 2   | NUT-NYLOCK, HEX, 3/8-16, ZP                        |
| 20                                       | 101326   | 2   | BOLT, HEX HEAD, 3/8-16X2.00, ZP                    |
| 21                                       | 100062   | 4   | WASHER-FL, 3/8", ZP                                |
| 22                                       | 551892   | 2   | BRACKET-MTG, SPRING HANGER, OUTBOARD, 401117       |
| 23                                       | 551806   | 2   | BRACKET-MTG, SPRING HANGER, INBOARD, 401117        |



(A LUVERNE Company)

1200 E. Birch St.

Brandon, SD 57005

REVISION B 05MAR12  
REVISION A 13OCT10  
551874 SHEET 3 OF 4 27JUL10

SERVICE PARTS LIST

MODEL NO. -401117

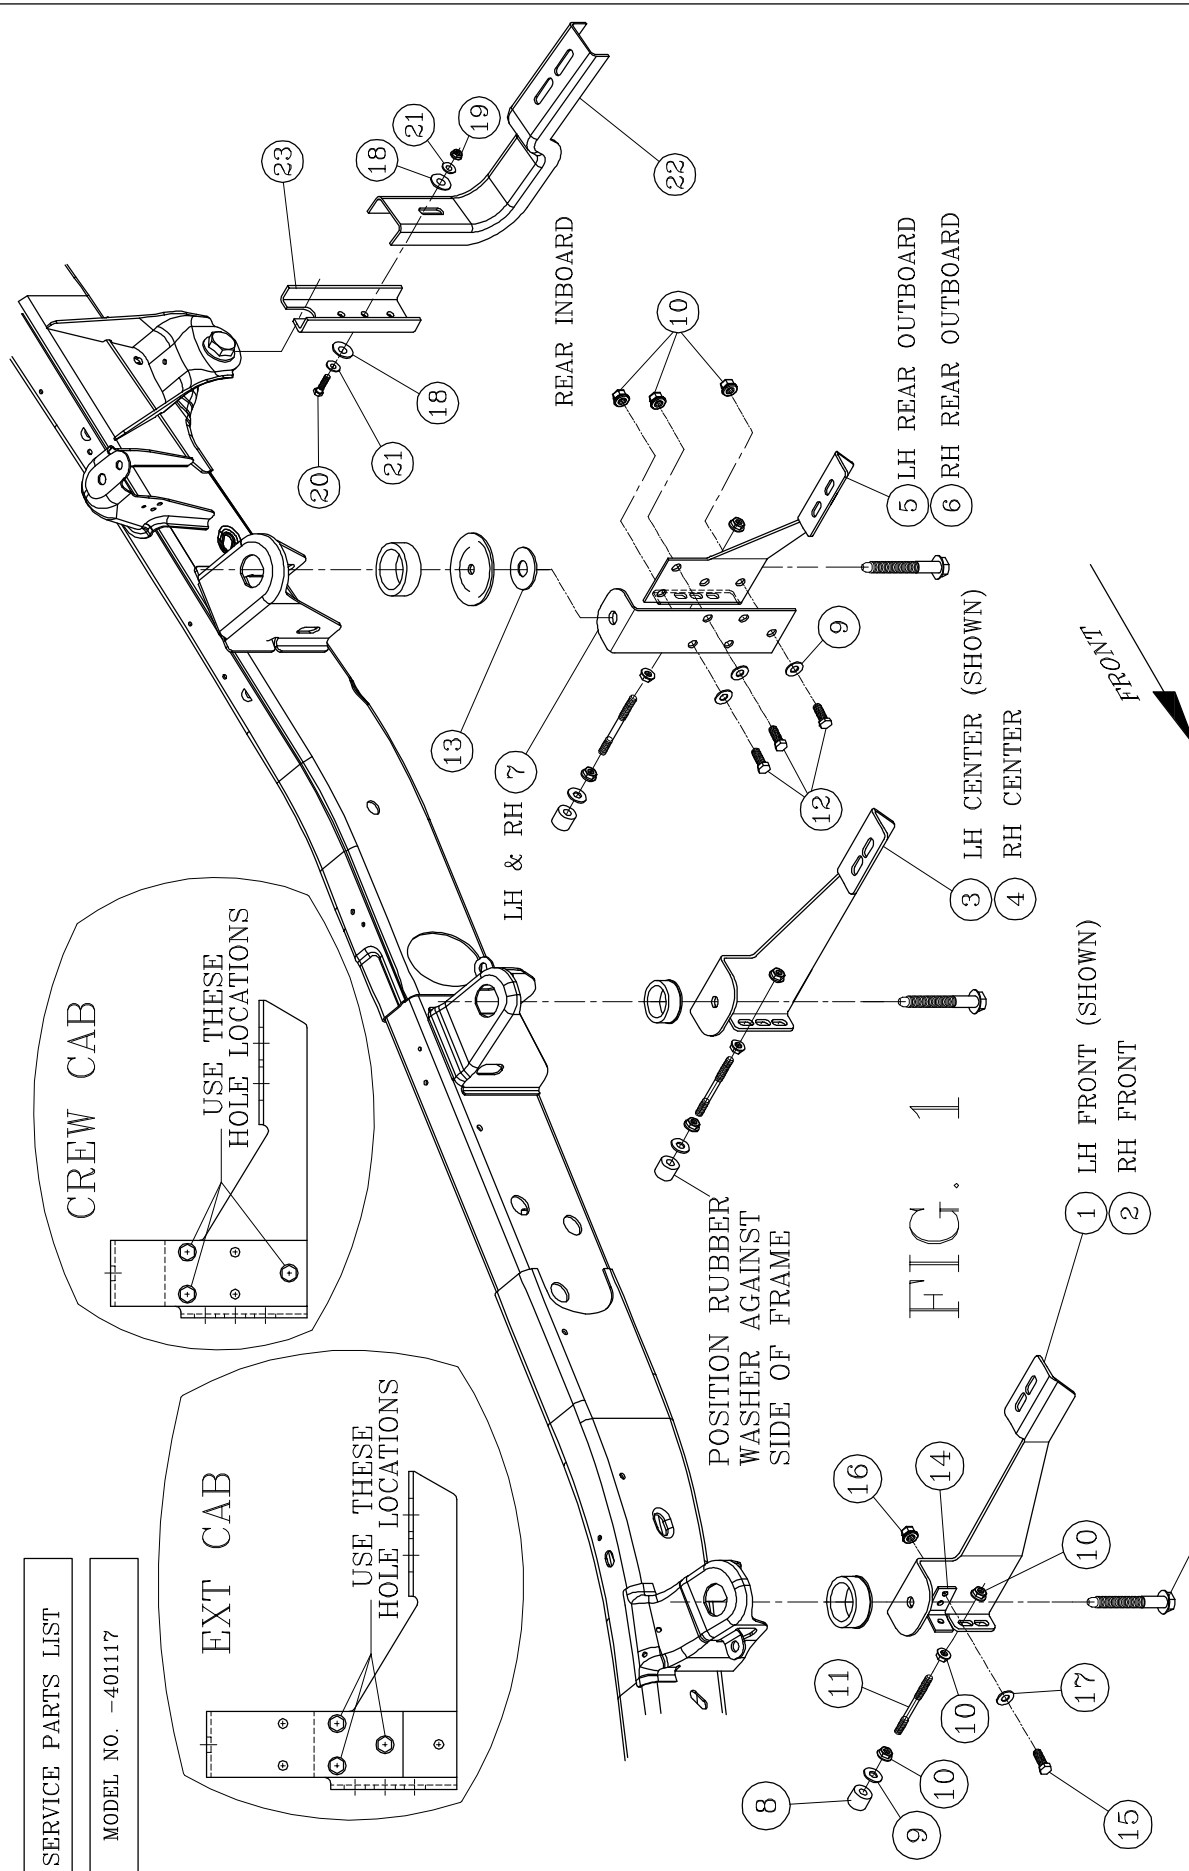


FIG. 1

#14-17 ARE USED ON 1500 MODELS ONLY

EXISTING BODY MOUNT BOLTS TORQUE PER INSTRUCTION

**LIVERNE**  
 A LIVERNE COMPANY  
 1200 E. 84th St.  
 Des Moines, IA 50315

LEFT (DRIVER) SIDE SHOWN  
 -RIGHT (PASSENGER) SIDE OPPOSITE-

REVISION B 05MARI2  
 REVISION A 13OCT10  
 551874 SHEET 4 OF 4 27JUL10