



# GATORBACK MUDFLAPS

## 2019-Current Ram 1500 New Body No-Drill Front Rubber Mud Flap Set Mounting Diagram & Instructions Kit's # GCR34F

### IMPORTANT:


**Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.**




### TOOLS REQUIRED



Push Pin Removal  
Tool



5/16 & 3/8" Open End  
Wrench & Socket Wrench

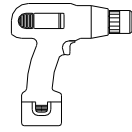


Electric or Chargeable  
Drill




1/4" Drill Bit

### FLAPS

(1) Flap Assembly,  
Front, DS

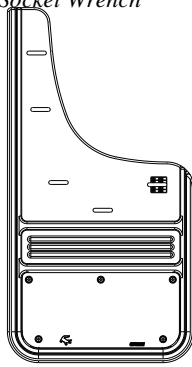

(1) Flap Assembly,  
Front, PS

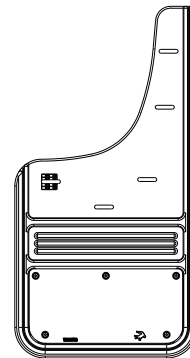

### PARTS BAG # 766781

a) (4) Washer, Flat  
0.203" x 1", SS  
Part #018081




b) (2) Washer, Lock  
#10, Helicoil, SS  
Part #024001



c) (2) Hex Nut  
#10, SS  
Part #025003




d) (2) Mach. Screw  
#10-24 x 1", SS  
Part #012022



e) (2) Screw, Sheet Metal, SS  
1/4" Hex Washer Head, #8-15x1"  
Part #016056



f) (8) Washer, Flat, SS  
0.203" x 1.5", 18ga  
Part #018066




g) (2) Spring Nut  
#8, 9/16" Reach  
Part #028004




### INSTALLATION *(For ease of installation it is suggested that the wheel be removed)*

1. Before you install your Gatorback Mud Flap, see the diagram and parts list for all necessary parts.
2. Remove factory push pin from fender (Hole #9).
3. Pull back liner and install spring nut to sit over hole where push pin was removed. (See Diagram).
4. Remove 3 factory bolts from fender holes #6 to #8.
5. Install mud flap through holes #1 to #3 into factory holes #6 to #8 using factory screws and 1-1/2" stainless steel washers (018066).
6. Install mud flap to spring nut through factory hole #9 using provided bolt (016041).

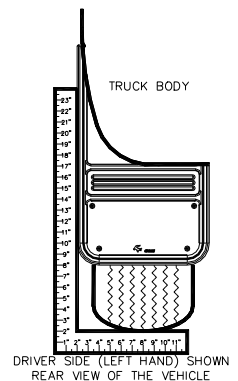

7. Using a bubble level or square, ensure that the mud flap is level. Viewing the vehicle from the back, the outer edge of the mud flap should appear parallel to the tires.
8. Carefully tighten all fasteners. Ensure that the mud flap has remained level.
9. Drill ¼" hole through mud flap hole #5 into plastic liner, creating hole #10.
10. Secure flap through hole #5 to plastic liner hole #10 with a machine screw (012022), 2 stainless steel washers (018081), a lock washer (024001), and a hex nut (025003).
11. Repeat procedure on passenger side.

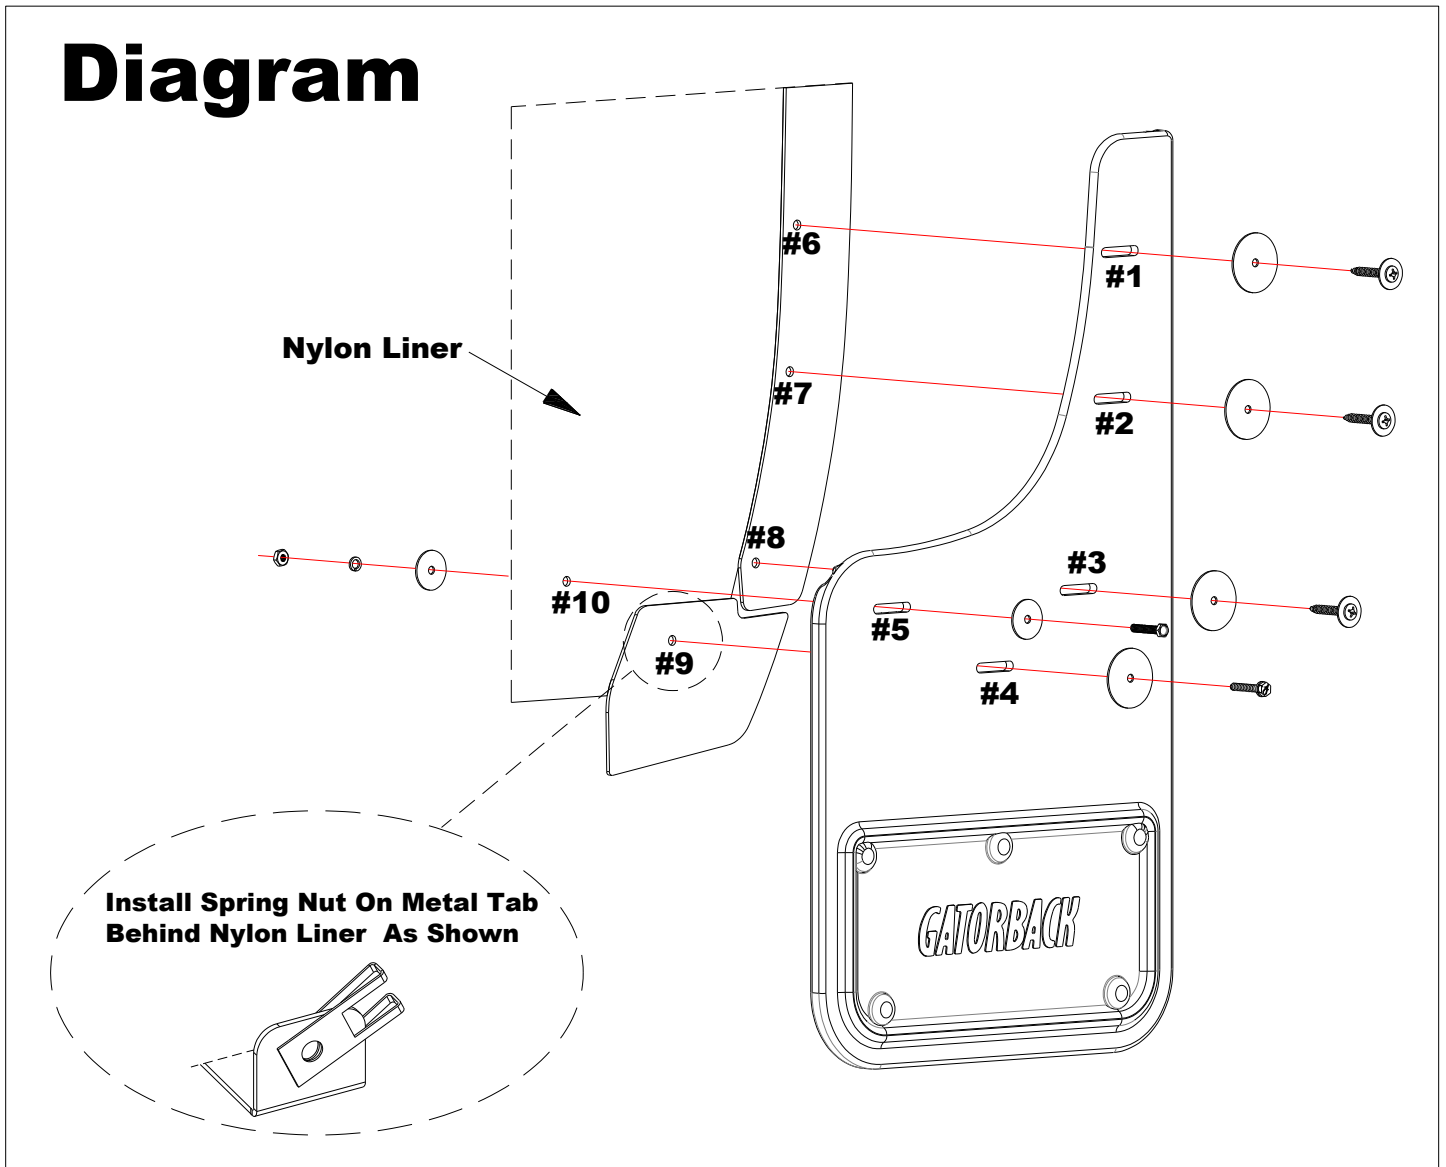

Please check out our YouTube channel to see an install video for this application.

