



# X-ACT CONTOUR


## FLOOR LINERS

### CARE AND USE INSTRUCTIONS – PN:52701

Thank you for selecting an X-act Contour™ 2<sup>nd</sup> Seat Floor Liner from Husky Liners Inc. Your new floor liner is custom molded to fit your specific vehicle's floor board. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

FRONT OF VEHICLE

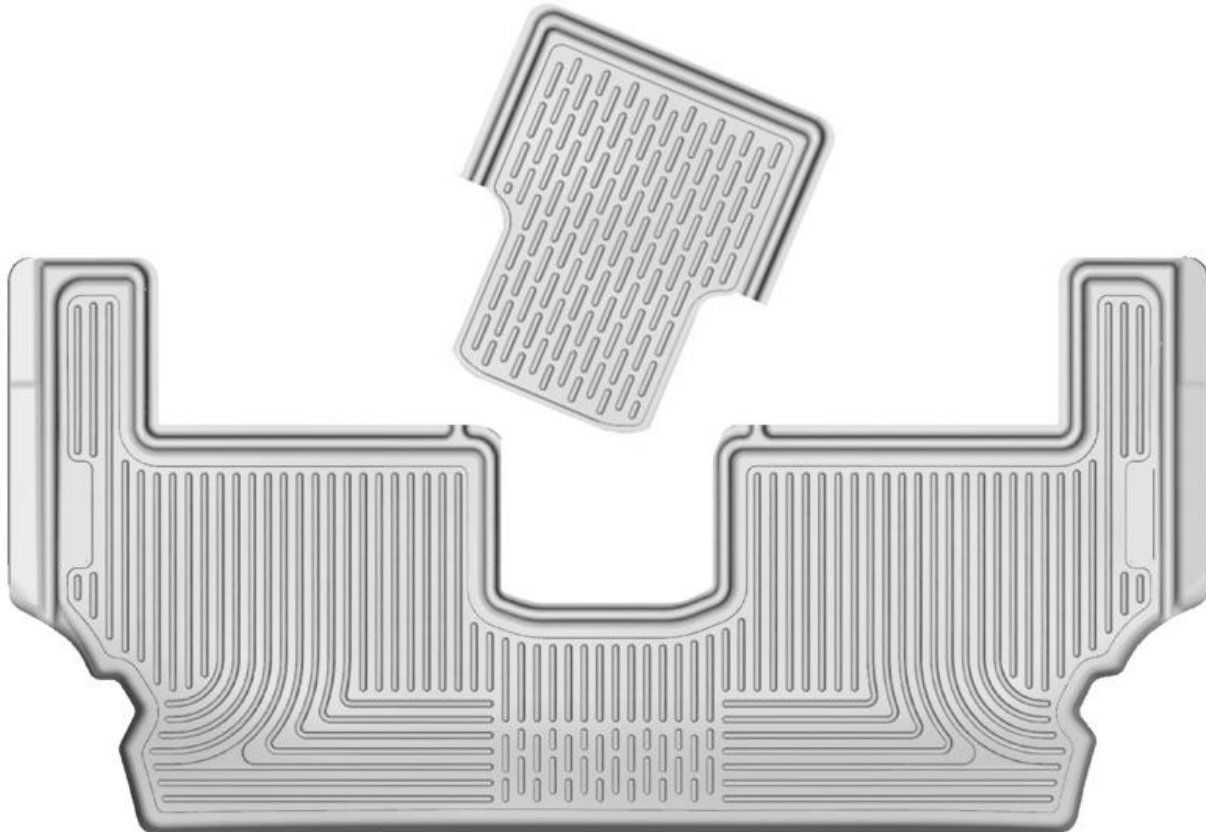

TO INSTALL YOUR LINER IN A PACIFICA WITH 2<sup>ND</sup> ROW BUCKET SEATS, FIRST SLIDE BOTH 2<sup>ND</sup> ROW SEATS FORWARD TO ALLOW EASIER ACCESS TO THE 3<sup>RD</sup> ROW FLOOR. WITH THE SEATS MOVED, INSTALL THE LINER POSITIONED AS SHOWN ABOVE. NOTE THAT THIS LINER ONLY WORKS WITH 2<sup>ND</sup> ROW STOW-N-GO SEATS. (OVER)

IF YOUR PACIFICA HAS 2<sup>ND</sup> ROW BENCH SEATING, YOU WILL NEED TO REMOVE THE CENTER SECTION OF THE LINER AS SHOWN IN THE IMAGE ON THE PREVIOUS PAGE. TO TRIM, USE A UTILITY KNIFE AND TRIM USING THE MOLDED IN STEP IN THE PART AS YOUR TRIM GUIDE (SEE BELOW). WITH THIS AREA REMOVED INSTALL THE LINER AND REPOSITION 2<sup>ND</sup> ROW SEATS AS DESIRED.

