

HUMMER H2 FRONT MUD GUARDS INSTALLATION INSTRUCTIONS

Please read instructions thoroughly before installation.

Tools Required

- Short Phillips screwdriver
- Center punch / Hammer
- Drill / 1/8" drill bit

Package Contents

- Driver (LH) & passenger (RH) side front mud guard
- 1" #10 screw (qty. 6)
- Washer (qty. 6)
- U-Clips (qty. 2)
- Instruction sheet

NOTE: Turn the wheels all the way one way or the other for installation. It may still be necessary to remove the wheels depending on the tools being used.

1. Clean and degrease the mud guard location area on the fender before installation.
2. Remove existing fastener from location B (Fig. 1).
3. Place mud guard against front fender and install factory fastener at location B, make sure bottom edge of mud guard is parallel to ground before tightening.
4. Using mud guard as a template, mark and drill an 1/8" hole at locations A and C and fasten with a 1" #10 screw and washer.
5. Mark and drill 1/8" hole at location D. Attach with a 1" #10 screw and washer through mud guard and liner and into U-clip on the backside of liner. **NOTE:** The u-clip is used like a nut and not to be clipped over liner.

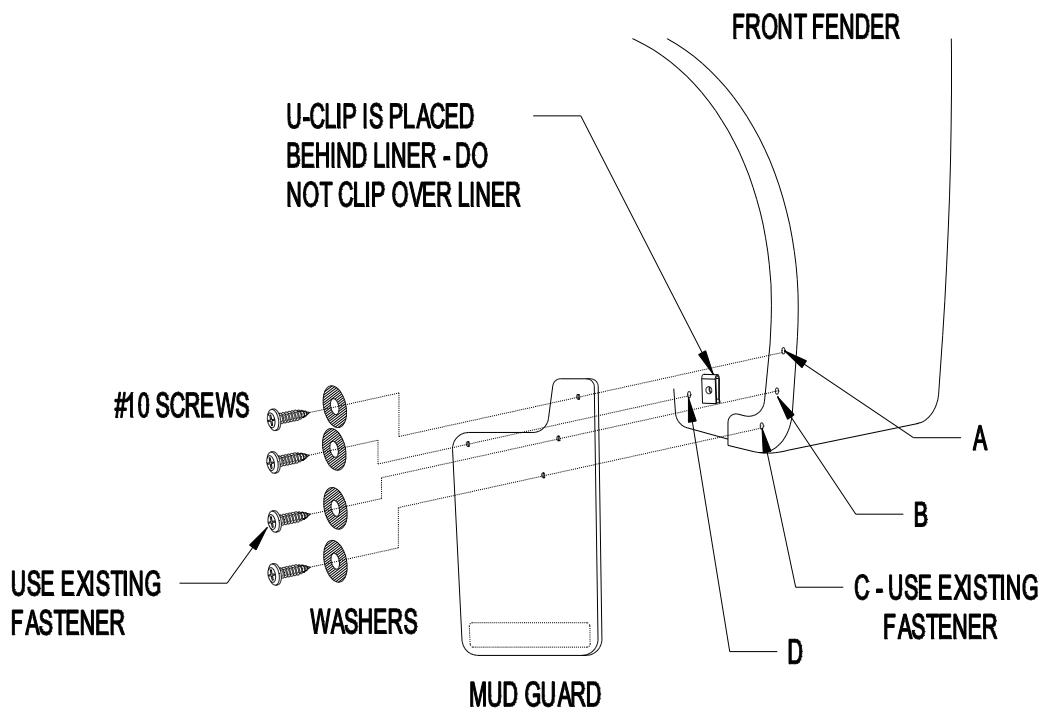


Figure 1