

**GM TRUCK / SUBURBAN, TAHOE, YUKON with fender flares  
 AVALANCHE with flares and without cladding  
 FRONT MUD GUARD INSTALLATION INSTRUCTIONS**

**Install paint protection film before mud guards (see other side).  
 Please read instructions thoroughly before installation.**

**Tools Required:**

- 1/8" drill bit / Drill
- Center punch / Hammer
- Short Phillips screwdriver or drill attachment
- Flat head screwdriver
- Marking utensil (fine tip marker, grease pencil, etc.)

**Package Contents:**

- Driver & passenger side front mud guards
- #10 screw (qty. 6)
- Washer (qty. 6)
- U-Clip (qty. 4)
- Instruction sheet

**NOTE:** Turn the front wheels all the way to the left or right for front mud guard installation.

1. Clean and degrease the mud guard location area on the fender before installation.
2. Remove existing plastic rivets from locations C, D, and E by prying insert (1) out of sleeve (2) with a flat tip screwdriver and removing the sleeve (2) (Figure 1 and 3).
3. Remove plastic fastener from location B by cutting the head off the fastener and pushing the remaining stud through the hole.
4. Pull the fender liner back and slide a U-Clip over locations B and C (Figure 1 and 2).  
**NOTE:** the upper factory fender hole will not be used – DO NOT REMOVE EXISTING FASTENER.
5. Reinstall fender liner with existing plastic rivets at locations D and E.
6. Attach mud guard at location B with a #10 screw and washer. Adjust accordingly before tightening screw.
7. Install a # 10 screw and washer at location C.
8. Center punch and drill an 1/8" hole at location A and fasten with a #10 screw and washer.

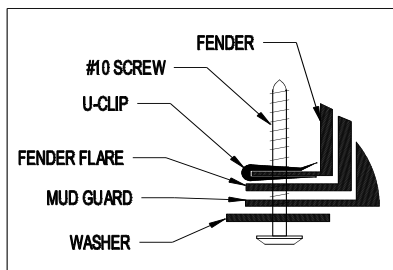


Figure 2

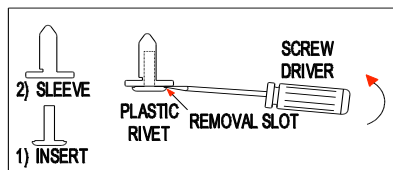


Figure 3

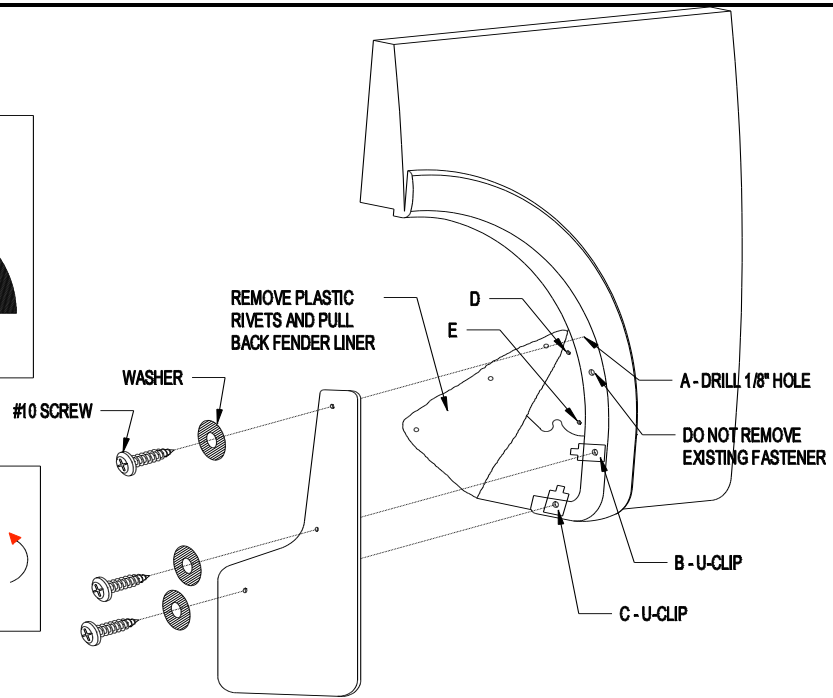
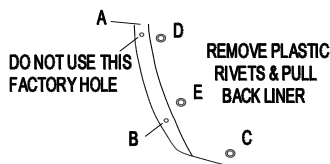


Figure 1

**NEED A LOGO FOR YOUR NEW MUD GUARD? TRY AN INTERNET SEARCH FOR "EMBLEM" ON E-BAY, AMAZON OR YOUR FAVORITE AUTOMOTIVE SITE.**