

56584

BUICK ENCLAVE	GMC ENVOY
BUICK RAINIER	GMC SIERRA
CADILLAC ESCALADE	GMC YUKON
CHEVY AVALANCHE	HUMMER H2 & H3
CHEVY SILVERADO	INFINITI QX56
CHEVY SUBURBAN	ISUZU ASCENDER
CHEVY TAHOE	NISSAN PATHFINDER
CHEVY TRAILBLAZER	NISSAN TITAN
CHRYSLER ASPEN	OLDSMOBILE BRAVADA
DODGE DURANGO	SAAB 9-7X
GMC ACADIA	SATURN OUTLOOK

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.


À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

1/18/2011

English

1. Locate the vehicle's factory 7-Way attached on the drivers side near the hitch (A).
2. Separate the vehicles connector from the back side of the factory 7-Way (B). Take care not to damage the locking tabs.
3. Insert the T-Connector end between the separated connectors (C). Make sure the connectors are fully inserted with locking tabs in place.
4. Route the 5-Flat to the center of the vehicle and secure in a safe out of the way location using the cable ties provided.

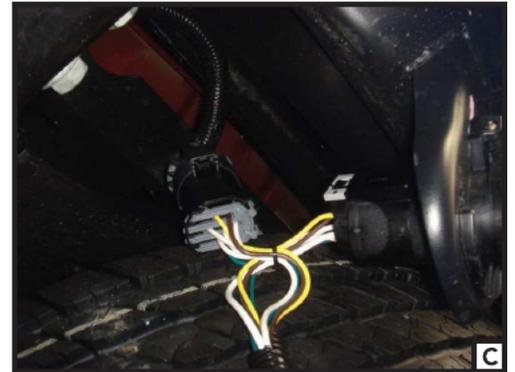

INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-877-287-8634

