

## INSTALLATION INSTRUCTIONS AND PARTS LIST

**MODEL 570237 W2W MEGA STEP BRACKETS:**  
2002 AND NEWER 1500 DODGE RAM QUAD CAB PICKUPS  
2003 AND NEWER 2500/3500 DODGE RAM QUAD CAB PICKUPS




1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.
2. ASSEMBLE THE LOAD REACTION STUDS AND HARDWARE (ITEM #13 THRU #16) AS FOLLOWS.
  - 2.1. ON THE SHORT THREADED END OF THE LOAD REACTION STUD (ITEM #13), INSTALL A 3/8" SERRATED FLANGE NUT (ITEM #15) BACKWARDS TO THE BOTTOM OF THE THREAD. THEN, INSTALL A 3/8" FLAT WASHER (ITEM #16) AND RUBBER "CUSHION" WASHER (ITEM #14) TIGHT UP AGAINST THE SERRATED FLANGE NUT. (THE END OF THE STUD MUST BE RECESSED IN THE RUBBER WASHER APPROX. 3/16").
  - 2.2. ON THE LONG THREADED END OF THE STUD, INSTALL A 3/8" SERRATED FLANGE NUT (ITEM #15) BACKWARDS TO NEAR TO THE BOTTOM OF THE THREADS.
3. ATTACH THE LOAD REACTION STUD ASSEMBLIES TO THE FRONT STEP MOUNTING BRACKETS AS SHOWN.
  - 3.1. INSERT THE STUD, FROM WHAT WILL BE THE INBOARD OR FRAME SIDE, THRU THE HOLE IN THE BENT FLANGE OF THE STEP BRACKET SO THAT THE RUBBER WASHER WILL SEAT FIRM AGAINST THE SIDE WALL OF THE FRAME. INSTALL A FLANGE NUT ON THE OUTBOARD END OF THE STUD. (FINGER TIGHT ONLY).
4. REMOVE THE FACTORY FRONT, CENTER AND REAR BODY MOUNT BOLTS (ONE SIDE OF THE VEHICLE AT A TIME) AND INSTALL THE STEP MOUNTING BRACKETS. ON MODEL YEAR 2002 THRU 2005 THE BODY MOUNT STEEL WASHER PLATES WITH RUBBER CUSHIONS ARE REUSED BETWEEN THE BODY MOUNTS AND THE STEP MOUNTING BRACKETS. ON MODEL YEAR 2006 TO CURRENT USE A 5/8" FLAT WASHER (ITEM #12) BETWEEN THE BOTTOM OF THE BODY MOUNT AND THE STEP MOUNTING BRACKET.
  - 4.1. ATTACH THE FRONT, CENTER AND REAR STEP MOUNTING BRACKETS. (ITEM #2 THRU #6) TO THE BODY MOUNTS AS SHOWN. USE M12-1.75 X 110mm (APPROX 4-3/8" LONG) HEX HEAD BOLTS (ITEM #9), 1/2" LOCK WASHERS (ITEM #10) AND 1/2" FLAT WASHERS (ITEM #11).
  - 4.2. LOCATE THE FRONT, CENTER AND REAR STEP MOUNTING BRACKETS TO THE INBOARD MOUNTING POSITION. THIS IS DONE BY PUSHING THE BRACKETS INWARD TO THE END OF THE SLOT.
  - 4.3. ROTATE THE STEP BRACKETS SO THAT THE SLOTS IN THE FLAT STEP PLATE MOUNTING SURFACE ARE STRAIGHT OUT (AT 90 DEGREE ANGLE) FROM THE FRAME. TORQUE ALL BODY MOUNT BOLTS TO 60 LB. FT
5. ATTACH THE STEP ASSEMBLIES (ITEM #1) TO THE STEP MOUNTING BRACKETS.
  - 5.1. INSERT FOUR (4) 5/16-18 SQUARE HEAD SCREWS (ITEM #7) IN THE OUTBOARD SLOT ON THE UNDER SIDE OF EACH STEP. (THE FRONT THREE (3) SETS OF FASTENERS WILL BE USED TO ATTACH THE STEP TO THE CAB BODY MOUNT BRACKETS).
  - 5.2. POSITION THE STEP ON THE STEP MOUNTING BRACKETS SO THAT THE STEP IS CENTERED, FRONT TO REAR, ON THE CAB AND BOX AND THE SQUARE HEAD SCREWS ARE LOCATED IN THE SLOTS OF THE CAB STEP MOUNTING BRACKETS.
  - 5.3. INSTALL 5/16-18 SERRATED FLANGE NUTS (ITEM #8) ON THE SQUARE HEAD SCREWS AND TIGHTEN TO 19 LB FT.

6. ATTACH THE LOAD REACTION STUD ASSEMBLIES AND 90 DEGREE MOUNTING BRACKETS (ITEM #17) TO THE CENTER AND REAR STEP MOUNTING BRACKETS AS SHOWN.
  - 6.1. USE A 5/16" X 1.00" HEX HD SCREW (ITEM #18), 5/16" SERRATED FLANGE NUT (ITEM #19) AND 5/16" FLAT WASHER (ITEM #20). INSERT THE STUD ASSY THRU THE HOLE IN THE 90 DEGREE BRACKET AND INSTALL A FLANGE NUT ON THE OUTBOARD END OF THE STUD.
  - 6.2. ADJUST THE FRONT & CENTER STUD ASSY SO THAT THE RUBBER WASHER IS FIRM AGAINST THE SIDE OF THE FRAME. ADJUST THE REAR STUD ASSY SO THAT THE RUBBER WASHER IS FIRM AGAINST THE INCLINED SURFACE OF THE BODY MOUNT HOUSING.
  - 6.3. TIGHTEN THE LOAD REACTION STUD ADJUSTING NUTS TO 19 LB FT.
7. ATTACH THE REAR MOUNTING BRACKETS AGAINST THE VEHICLE SPRING SHACKLE AND ON THE MEGA STEP AS SHOWN.
  - 7.1. REMOVE THE FACTORY FLANGE NUT FROM THE SPRING HANGER BOLT. (TO KEEP THE BOLT FROM TURNING, HOLD THE HEX PORTION OF THE HANGER BOLT WHILE REMOVING THE FLANGE NUT). USING THE OBOUNDED HOLE NEAR THE TOP OF THE REAR INBOARD MOUNTING BRACKET (ITEM #21), SLIDE THE BRACKET OVER THE SPRING HANGER BOLT AND REINSTALL THE FACTORY FLANGE NUT. (FINGER TIGHT ONLY).
  - 7.2. INSTALL THE REAR OUTBOARD MOUNTING BRACKET (ITEM #22) ON THE MEGA STEP AS SHOWN. USE 5/16-18 SERRATED FLANGE NUTS (ITEM #8). ADJUST THE INBOARD BRACKET UP & DOWN SO THAT THE SLOTS AND HOLES IN THE INBOARD AND OUTBOARD BRACKETS MATCH. FASTEN WITH 5/16" X 1.00" HEX HD CAP SCREWS (ITEM #18), 5/16" FLAT WASHERS (ITEM #20) AND 5/16" SERRATED FLANGE NUTS (ITEM #19) AS SHOWN.
  - 7.3. TIGHTEN THE SPRING HANGER FLG. NUT TO 60 LB FT & THE 5/16" FASTENERS TO 19 LB FT.

### SERVICE PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION   |
|------|----------|-----|---|
| 1    |          | 2   | MEGA STEP BOARD ASSEMBLY (SOLD SEPARATELY)<br>LENGTH WILL VARY DEPENDING ON APPLICATION |
| 2    | 551565   | 1   | BRKT- MTG, STEP, FRONT, RH  |
| 3    | 551566   | 1   | BRKT- MTG, STEP, FRONT, LH  |
| 4    | 551567   | 2   | BRKT- MTG, STEP, CENTER, RH/LH  |
| 5    | 551569   | 1   | BRKT- MTG, STEP, REAR, RH   |
| 6    | 551570   | 1   | BRKT- MTG, STEP, REAR, LH   |
| 7    | 106880   | 8   | SCREW-SQUARE HEAD, 5/16 18 UNC  |
| 8    | 102680   | 16  | NUT- SERRATED FLANGE, HEX, SST, 5/16-18 UNC   |
| 9    | 103444   | 6   | BOLT- HEX HD CAP, M12-1.75 X 110mm (4-3/8"), BZP  |
| 10   | 100121   | 6   | WSHR- LOCK, 1/2", ZP  |
| 11   | 100118   | 6   | WSHR- PL, A, STL, 1/2", ZP  |
| 12   | 100147   | 6   | WASHER- PL, STL, (5/8") .688 X 1.75 X .134, ZP  |
| 13   | 106960   | 6   | STUD- DBL ENDED, STL, 3/8-16RT, X 4.50", BZP  |
| 14   | 102592   | 6   | WASHER- RUBBER, .354 ID X 1.00 OD X .75 THK   |
| 15   | 106995   | 18  | NUT- SERR FLG, HEX, SST, 3/8-16UNC, BLK ZP  |
| 16   | 106962   | 6   | WASHER- PL, A, SST, 3/8", .438 ID X 1.00 OD X .083 THK, BZP                             |
| 17   | 551571   | 4   | BRKT- 90 DEG, 3 HOLE, 1.25"X1.25"/2.25"LEGS   |
| 18   | 106997   | 8   | SCR- HHC, 5/16-18 X 1.00", SST, BZP   |
| 19   | 106996   | 8   | NUT- SERR FLG, HEX, SST, 5/16-18UNC, BLK ZP   |
| 20   | 106998   | 8   | WASHER- PL, SST, 5/16", .75 ID X .875 OD X .083 THK, BZP                                |
| 21   | 551720   | 2   | BRKT- MTG, STEP, REAR INBOARD, RH/LH  |
| 22   | 551721   | 2   | BRKT- MTG, STEP, REAR OUTBOARD, RH/LH   |

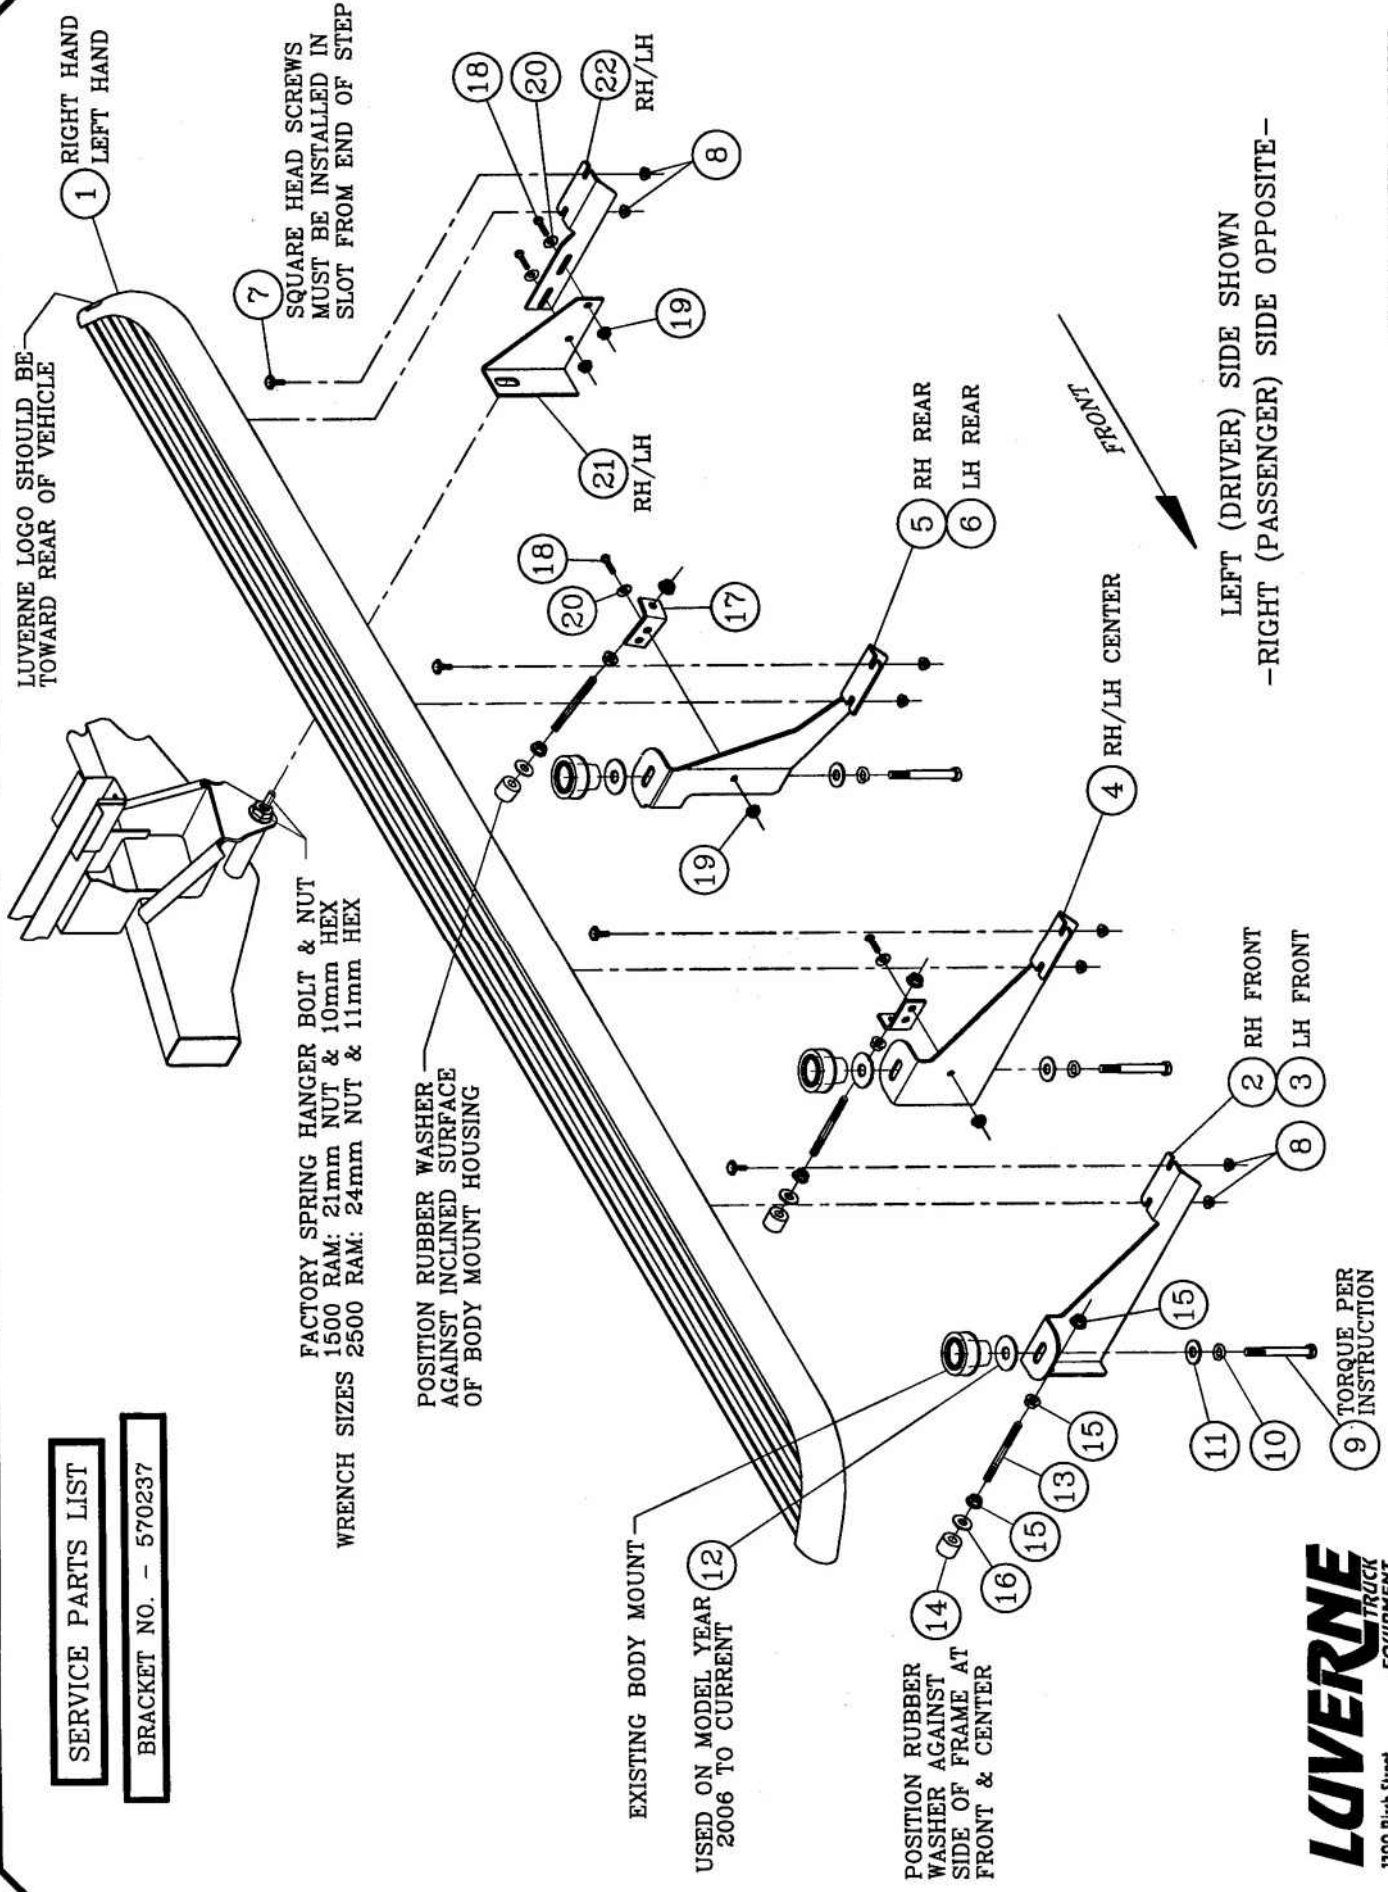

SERVICE PARTS LIST

BRACKET NO. - 570237

FACTORY SPRING HANGER BOLT & NUT  
 1500 RAM: 21mm NUT & 10mm HEX  
 2500 RAM: 24mm NUT & 11mm HEX

POSITION RUBBER WASHER  
 AGAINST INCLINED SURFACE  
 OF BODY MOUNT HOUSING

EXISTING BODY MOUNT  
 USED ON MODEL YEAR  
 2006 TO CURRENT

POSITION RUBBER  
 WASHER AGAINST  
 SIDE OF FRAME AT  
 FRONT & CENTER

**LUVIERNE**  
 TRUCK  
 EQUIPMENT  
 INC.  
 1200 Birch Street  
 Brandon, SD 57005

FRONT  
 LEFT (DRIVER) SIDE SHOWN  
 -RIGHT (PASSENGER) SIDE OPPOSITE-

9 TORQUE PER  
 INSTRUCTION