

JEEP CHEROKEE REAR MUD GUARD INSTALLATION INSTRUCTIONS

Please read instructions thoroughly before installation.

Tools Required

- 1/8" drill bit
- Drill
- Short Phillips screwdriver or drill attachment

Package Contents

- Driver & passenger side mud guard
- #10 SEM screw (qty. 8)
- U-clip (qty. 8)
- Instruction sheet

NOTE: It may be necessary to remove the wheels depending on the tools being used for installation.

1. Clean and degrease the mud guard location area on the fender before installation.
2. Position mud guard to fender ensuring that it is flush with fender and parallel to the ground.
3. Using the mud guard as the template drill holes through the plastic fender liner in positions A, B, C and D.
4. Starting at hole location A, install SEM screw through the mud guard hole and the new fender liner hole into a U-clip on the back side of the liner. The U-clip will be used as a nut. (See Figure 2).
5. Repeat step 4 for hole locations B, C and D.
6. Ensure the mud guard is parallel to the ground before tightening

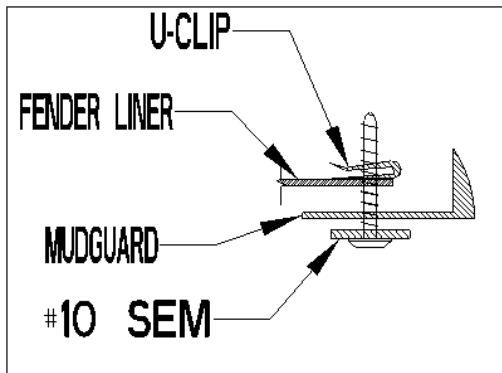


FIGURE 2

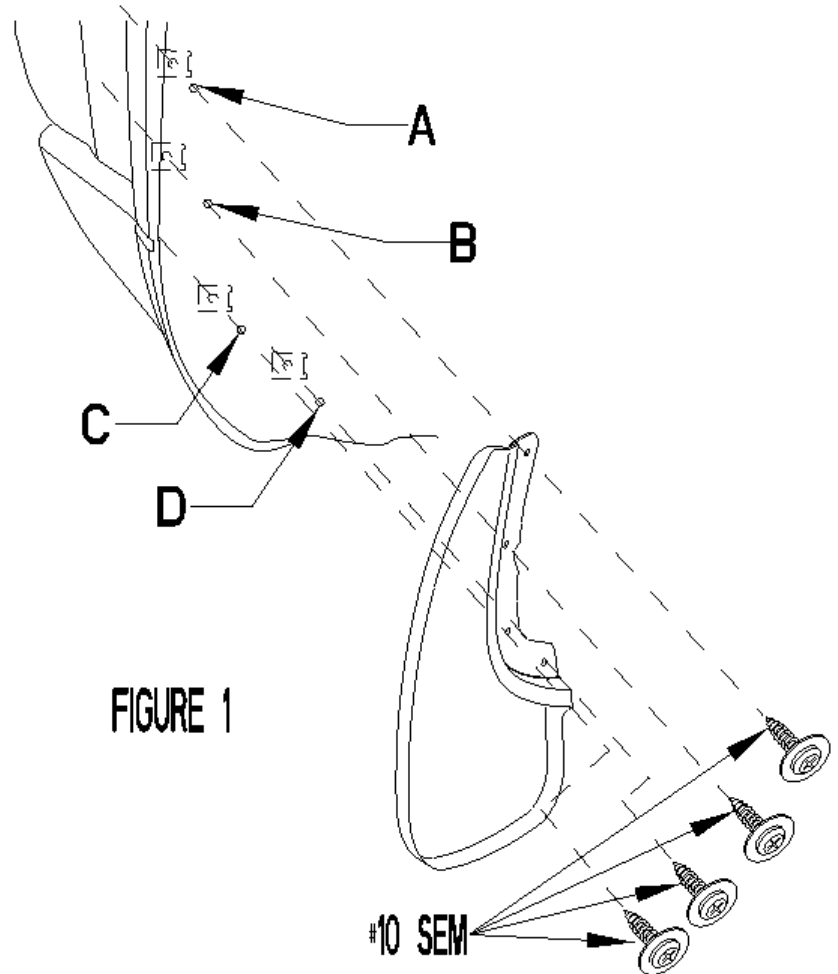


FIGURE 1