

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

## CARE AND USE INSTRUCTIONS


---

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR FORD ESCAPE/MAZDA TRIBUTE SECOND SEAT FLOOR LINER

FRONT OF VEHICLE

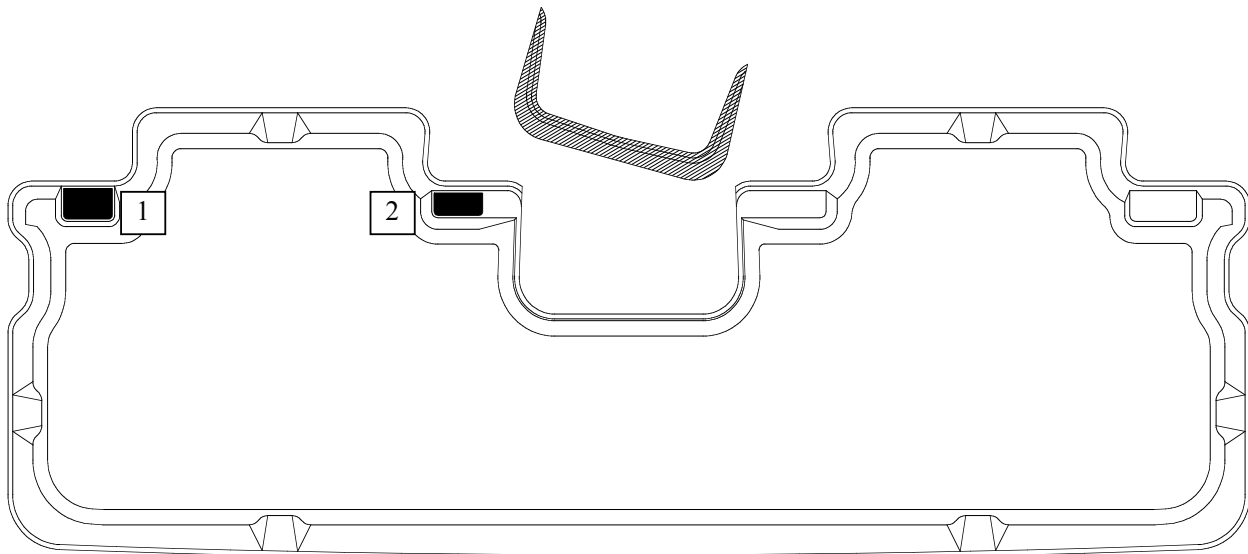

FORD ESCAPE'S AND MAZDA TRIBUTE'S COME EQUIPPED WITH TWO STYLES OF CENTER CONSOLES (SEE PHOTOS ON BACK). YOUR HUSKY LINER WILL ACCOMMODATE BOTH CONSOLE STYLES BUT SOME TRIMMING MAY BE REQUIRED. TEST FIT YOUR LINER TO DETERMINE IF YOUR LINER NEEDS TRIMMED. IF TRIMMING IS NECESSARY, IT IS EASILY DONE BY TRIMMING ALONG THE INSIDE THE RAISED BAND ON OF THE LINER (SEE ABOVE). ADDITIONAL TRIM AREAS ARE PROVIDED TO ACCOMMODATE THE POWER SEAT TRACK MOVEMENT ON THE OPTIONAL DRIVER'S SIDE POWER SEAT (SEE #1 AND #2 ABOVE). TRIM THE RECESSED PORTION OF THE WALL AWAY USING A UTILITY KNIFE OR HEAVY SHEARS. ADDITIONAL PHOTOS ARE INCLUDED ON THE BACK OF THIS INSTRUCTION SHEET TO AID IN TRIMMING.

PHOTOS OF HUSKY LINER #6317 SHOWING CONSOLE STYLES AND TRIMMING  
(WHERE APPLICABLE)

6317 SHOWN TRIMMED FOR USE  
WITH LONG CONSOLE (UP TO 04')



6317 SHOWN IN VEHICLE WITH THE  
SHORT CONSOLE (UP TO 04')



6317 SHOWN TRIMMED FOR USE WITH  
POWER SEAT EQUIPPED MODELS



6317 SHOWN IN VEHICLE WITH THE  
LONG CONSOLE (UP TO 04')