


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR NISSAN FRONTIER & SUZUKI EQUATOR CREW CAB SECOND SEAT FLOOR LINER

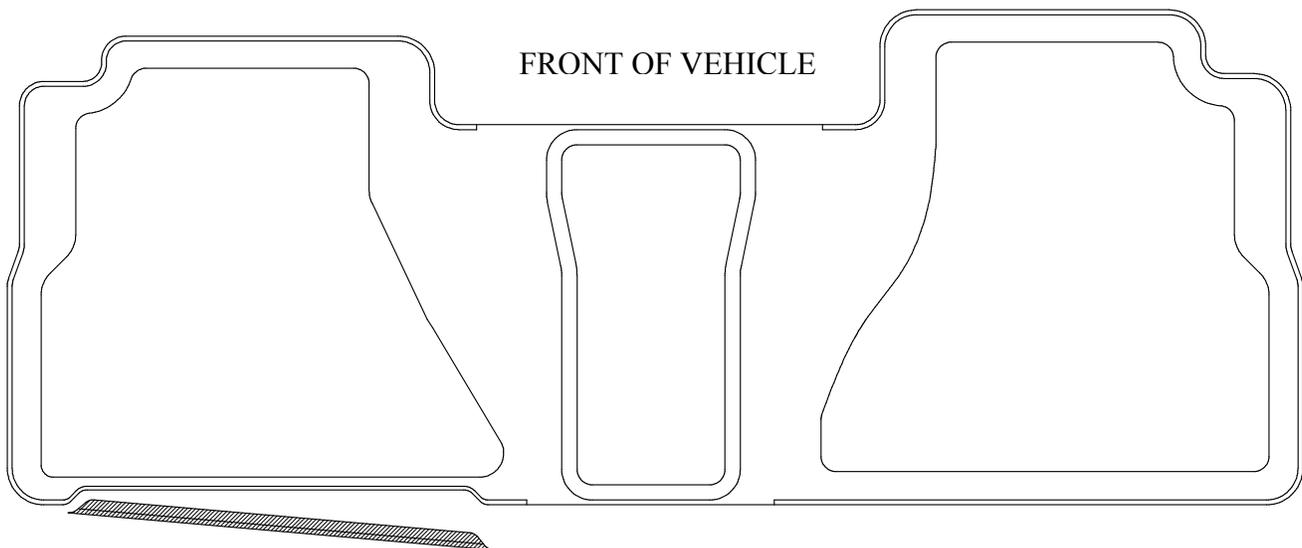

TO EASE INSTALLATION OF YOUR LINER, MOVE BOTH FRONT SEATS TO THEIR MOST FORWARD POSITION BEFORE INSTALLING LINER. ONCE LINER IS INSTALLED, REPOSITION FRONT SEATS AS DESIRED.

IF YOUR TRUCK IS EQUIPPED WITH THE OPTIONAL FACTORY SUBWOOFER MOUNTED UNDERNEATH OF THE BACK ROW DRIVER'S SIDE SEAT, YOU WILL NEED TO TRIM A PORTION OF YOUR LINER AWAY TO ACCOMMODATE THIS FEATURE. TO TRIM, USE A UTILITY KNIFE OR HEAVY SHEARS AND FOLLOW THE STEP MOLDED INTO THE BACK DRIVER'S SIDE WALL OF THE LINER. THE SKETCH ABOVE DEPICTS THE TRIMMING. A PHOTO OF THE TRIMMED PART IS INCLUDED ON THE BACK OF THIS PAGE.



PHOTO SHOWING PART #6629 TRIMMED FOR THE OPTIONAL FACTORY SUBWOOFER LOCATED UNDER THE REAR SEAT (DRIVER'S SIDE).