



INSTRUCTIONS—INSTRUCCIONES—CONSIGNES

APPLICATION: 06-11 HONDA RIDGELINE
APP. PART # 23-2880, 23-2885
3" ROUND STEP BARS


AUTOMOTIVE PRODUCTS, INC.

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	2	STEP BARS	10MM SOCKET
2,3	2	FRONT MOUNTING BRACKETS (2) DRIVERS SIDE, (3) PASSENGER SIDE	RATCHET
4,5	2	CENTER MOUNTING BRACKET (4) DRIVERS SIDE, (5) PASSENGER SIDE	TORQUE WRENCH
6,7	2	REAR MOUNTING BRACKET (6) DRIVERS SIDE, (7) PASSENGER SIDE	
8	12	M8 X 30MM HEX HEAD BOLTS	
9	12	M8 X 25MM HEX HEAD BOLTS	
10	24	M8 FLAT WASHERS	
12	24	M8 LOCK WASHERS	

1. Remove all contents from box, verify all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.
2. Begin installation by working on driver side of the vehicle(refer to Figure 1)
3. Locate existing holes under vehicle. These will have plastic tabs in place, so remove to get to existing holes needed .Install Mount Brackets with M8X30 MM hex bolt and hardware .Leave semi loose for adjustment.
4. Fasten side tube to mount brackets using M8x25MM hex bolts and hardware. Hand tighten side tube to all three brackets.
5. Adjust as needed, then fully tighten hardware at this time. Torque all M8 fasteners to 20-25 ft lbs
6. Repeat steps 2-5 for passenger side

CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER

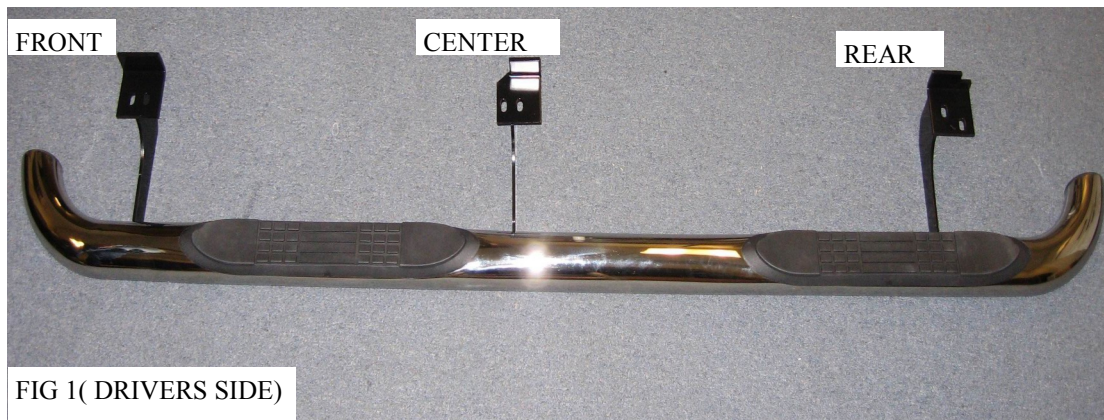

Westing Automotive Products, Inc.
5200 N. Irwindale Ave. Suite 220
Irwindale, Ca. 91706

3/17/2011 P.N.: 75-0050-Rev A

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com