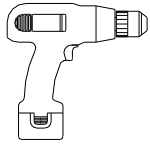


IMPORTANT:

The manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.

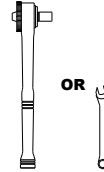
TOOLS REQUIRED:




*Electric or re-chargeable
1/2" or 3/8" drill.*



*#15 Torque
screwdriver*

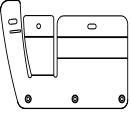
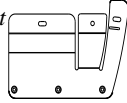




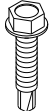
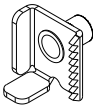

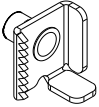


*7/16" open wrench
or socket wrench*



3/8" Socket Driver

KIT CONTAINS: PARTS BAG #766395

- | | | | | |
|--|---|--|---|--|
| <p>a) (1) Upper Mount Rear, DS
Part #766387</p>  | <p>b) (1) Upper Mount Rear, PS
Part #766388</p>  | <p>c) (6) Machine Screw #8-32 x 0.625"
Part #012034</p>  | <p>d) (6) Flat Washer 0.188" x 0.781"
Part #018018</p>  | <p>e) (6) Nylock Nut #8-32
Part #025005</p>  |
| <p>f) (4) Flat Washer 0.281" x 1"
Part #018028</p>  | <p>g) (2) Screw, Tek 0.25" x 1.25"
Part #010011</p>  | <p>h) (1) Mount Clip DS, Clinch Nut
Part #750582</p>  | <p>i) (2) Capscrew 0.25"-20 x 1.5"
Part #014066</p>  | <p>j) (1) Mount Clip PS, Clinch Nut
Part #750584</p>  |

INSTALLATION: *(For ease of installation, it is suggested that the wheel be removed)*

- Before you install your mud flap set, see the diagram and parts list for all necessary parts. Cut protective plastic and peel away from stainless steel. Start on driver's side.
- Place template onto mud flap, ensuring that holes #1 & #2 are aligned with the dimples on the rubber as shown on diagram on template. Cut the slotted holes into the rubber.
- Install upper mount on mud flap, ensuring that the lower dimples on the rubber are utilized as shown in Diagram #1. Secure using (3) machine screws #8-32 x 0.625", (3) flat washers 0.188" x 0.781", and (3) nylock nuts #8-32.
- Remove the (3) factory screws on holes #6 to #8 as shown in Diagram #2.
- Install the mud flap clip to the hole #1 with a capscrew and a flat washer then tighten screw until the bottom tab of the mud flap clip just passes through the bottom slotted hole of hole #1.
- Install factory screws through holes #3 to #5 into factory holes #6 to #8 as shown in Diagram #2. Ensure that the installed mud flap clip is behind the factory wheel well.
- Square the flap with the tire while putting pressure against the wheel well and tighten the factory screw on holes #3 to #5.
- Now secure the flap with a flat washer and a tek screw on hole #2 through the wheel tub.
- Secure the upper tab of the mud flap by sliding the installed mud flap clip on hole #1 to the wheel well until mud flap clip's teeth are gripped behind the wheel well, then tighten the screw.
- Repeat procedure for the passenger side.



