



X-ACT CONTOUR® FLOOR LINERS


PT 77451

USE AND INSTALLATION INSTRUCTIONS FOR YOUR 3RD SEAT FLOOR LINER

Thank you for selecting an X-act Contour® Floor Liner from Husky Liners. Your new 3rd seat liner is custom molded to fit your specific vehicle. The liner is made to take the place of your factory floor mat(s). **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the trunk of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area will accelerate the process.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

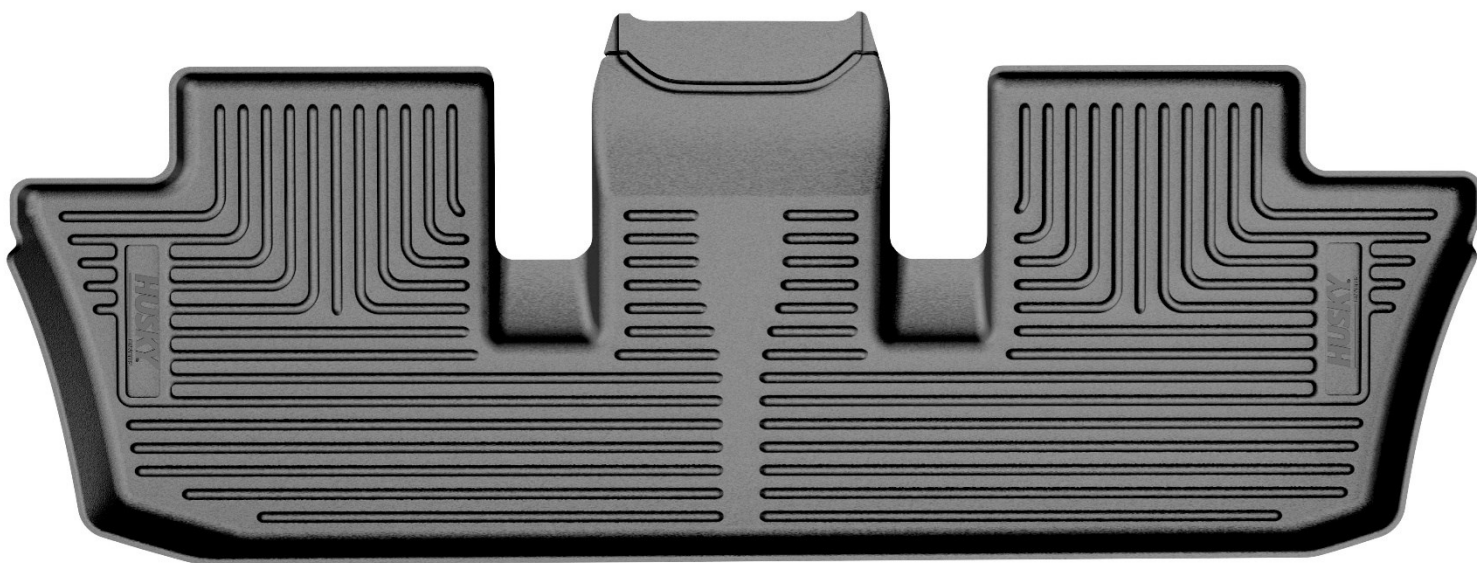

TO INSTALL YOUR THIRD SEAT LINER, FIRST MOVE YOUR SECOND ROW SEATS COMPLETELY FORWARD. THEN, INSTALL YOUR NEW LINER, POSITIONING IT IN THE VEHICLE AS SHOWN ABOVE. LASTLY, REPOSITION YOUR SECOND ROW SEATS AS DESIRED.



X-ACT CONTOUR® FLOOR LINERS

PT 77451

USE AND INSTALLATION INSTRUCTIONS FOR YOUR 3RD SEAT FLOOR LINER

SOME VEHICLES AND TRIM PACKAGES MAY HAVE DIFFERENT CONSOLES SIZES BETWEEN THE 2ND SEATS. A TRIM GROOVE IS PROVIDED TO REMOVE THE AREA OF THE LINER TO ACCOMMODATE THE DIFFERENT CONSOLES.

