

# HUSKY LINERS®

## weatherBEATER

### CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Toyota Prius. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

### INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA PRIUS FRONT WeatherBeater® FLOOR LINERS



LEFT OR DRIVER'S SIDE



RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR TOYOTA PRIUS FRONT FLOOR LINERS, MOVE THE FRONT SEATS TO THEIR REAR MOST POSITION. WITH THIS DONE, THE FACTORY CARPET HOOK(S) LOCATED IN THE CARPET OF THE DRIVER'S SIDE FLOOR CAN BE EASILY REMOVED. REMOVING THE HOOK(S) WILL ALLOW YOUR LINER TO LAY COMPLETELY FLAT. TO REMOVE THE HOOK(S), APPLY FIRM AND EVEN PRESSURE WHILE LIFTING THE END OF THE HOOK ARM STRAIGHT UP. ONCE THE HOOK(S) ARE REMOVED, INSTALL THE LINERS AND REPOSITION SEATS AS DESIRED.

AS IT IS BOXED, YOUR DRIVER'S SIDE LINER COVERS THE FUEL DOOR RELEASE LEVER. TO ACCESS THE RELEASE LEVER YOU CAN SIMPLY JUST LIFT UP THE LINER, OR, YOU CAN TRIM AWAY THE LOWERED AREA ON THE LINER LOCATED DIRECTLY ABOVE THE RELEASE LEVER. TO TRIM, USE THE EDGES OF THE RECESSED AREA AS YOUR GUIDE. THE DIAGRAM ABOVE SHOWS THE AREA TRIMMED.

# HUSKYLINERS®

## weatherBEATER


### CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new rear floor liner is custom molded to fit your Toyota Prius. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA PRIUS REAR SEAT WeatherBeater® FLOOR LINERS FRONT OF VEHICLE

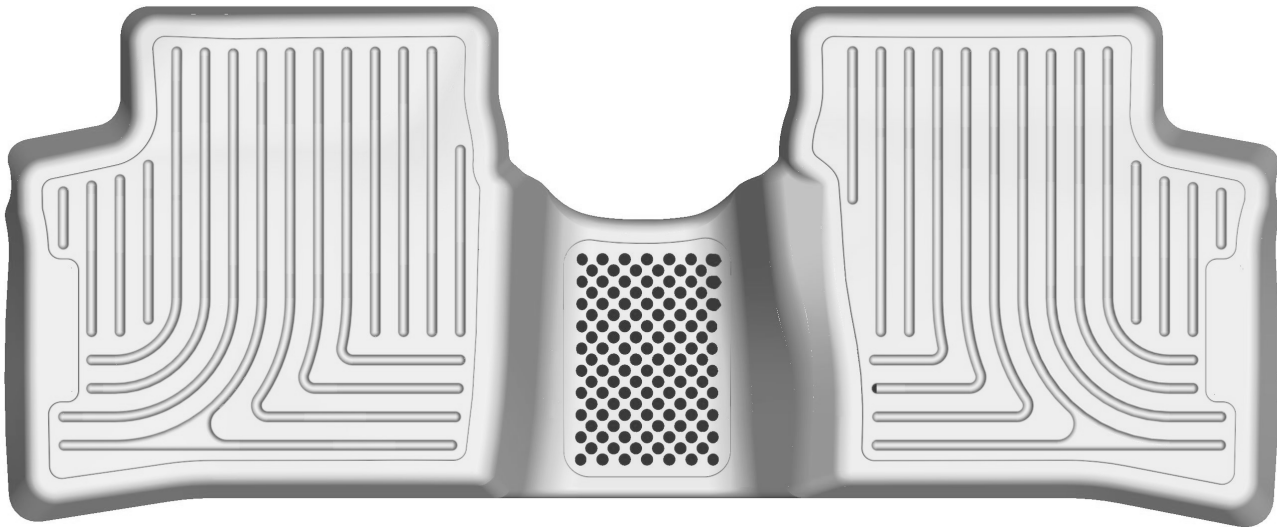

TO EASE INSTALLATION OF YOUR PRIUS SECOND SEAT LINER, MOVE THE FRONT SEATS TO THEIR MOST FORWARD POSITION. WITH THIS DONE, INSTALL LINER IN VEHICLE. ONCE LINER IS IN PLACE, REPOSITION THE FRONT SEATS AS NEEDED.