

# Bugflector / Bugflector II<sup>®</sup> Carflector<sup>™</sup>

## Quick and Easy Installation Instructions


### CONTENTS

- (1) Bugflector
- (4) fasteners
- (4) bump-ons
- (1) instruction sheet

**IMPORTANT:** Read all instructions carefully before beginning installation. Installation utilizes the existing holes in the hood which align with the holes in the Bugflector. The ideal installation temperature is between 65°-110°F (18°-43°C). **A “dry-run” trial fit is recommended prior to painting and/or final installation.**


### STEP 1

Clean the hood surface with warm water then wipe clean. See **FIGURE 1**

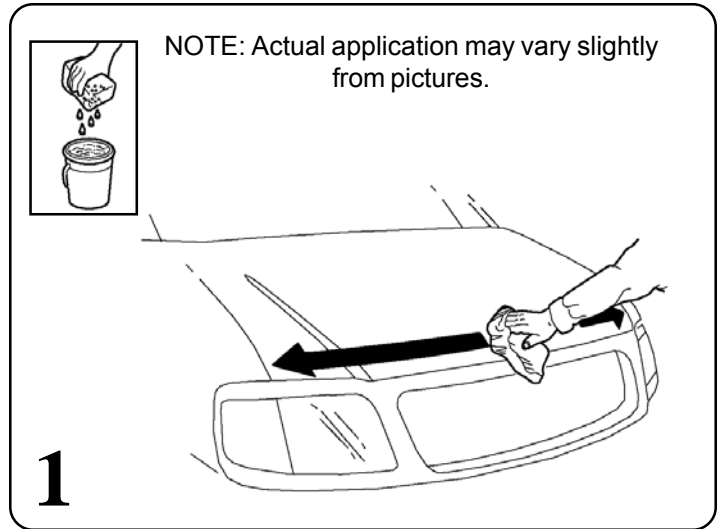


### STEP 2

Raise the hood and locate the (4) black weather strip fasteners on the underside of the hood that align with the predrilled holes in the Bugflector. Remove the fasteners at the indicated locations and discard. It may be necessary to use pliers for easier removal. See **FIGURE 2**

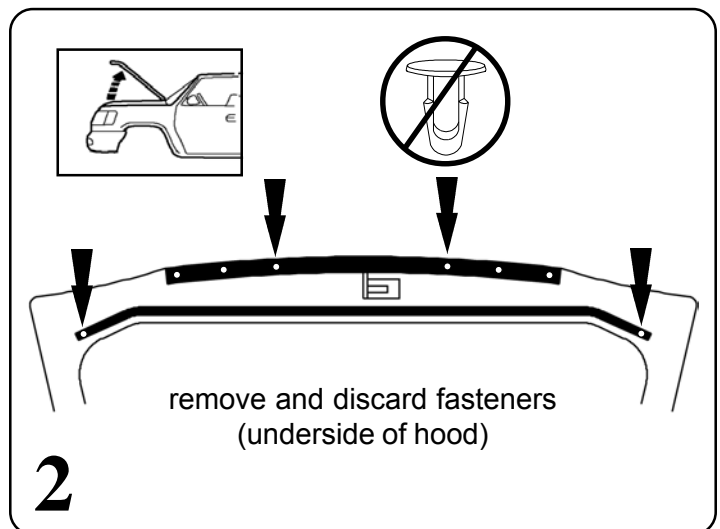

### STEP 3

Slide the Bugflector flanges between the weather strip and the hood and align the holes in the Bugflector with the corresponding holes in the underside of the hood. Using a Phillips screwdriver, install the fastener by screwing through the weather strip, Bugflector and hood. **TO PREVENT STRIPPING FASTENER, SCREW UNTIL SNUG; DO NOT OVERTIGHTEN.** Repeat procedure for the remaining holes. See **FIGURE 3**

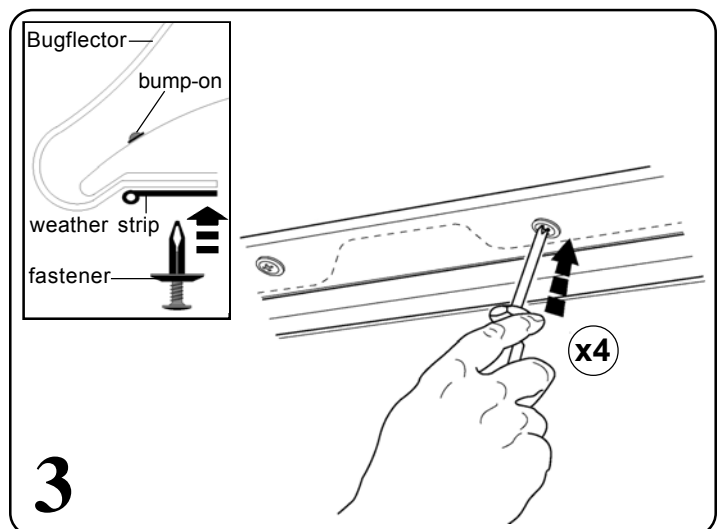

### STEP 4

To reduce the possibility of vibration, adhere the Bump-ons at pre-cleaned locations **on the painted hood/fender surface.** See **FIGURE 3**