

INSTALLATION INSTRUCTIONS:
REALTRUCK BACKRACK Tonneau Cover Riser Kits
 92509,92512,92517,92518,92519,92523,92567,92326

READ THIS NOW!

If you think you are missing any parts, think that this part number is not for your truck or have any installation question, call our customer service department toll free at:

888-588-6101 or locally 800-265-8137.

Other ways to reach RealTruck Backrack:

email: info@backrack.ca

Support@backrack.com

The tonneau cover riser kits will raise the RealTruck Backrack 1" to give room for the low profile inside the rail type tonneau cover adaptor.


The RealTruck Backrack assembly sits on the bed rails of your truck and is secured with these bolts. If your truck has a BEDLINER we suggest you remove it to drill and install the bolts

Place the riser between the rail mount bracket and the rail plate.

Risers are labeled with RealTruck Backrack on one side

NOTE: Rail Plates are recommended but not necessary.

#	PART	DESCRIPTION	QTY
1	Small BACKRACK Decal	BACKRACK DECAL 5/8" x 9"	2
2	STAKE POCKET BOLTS	Stake Pocket Bolt	2
3	RAIL PLATES DRIVER	Rail Plate Driver	2
4	RAIL PLATES PASSENGER	Rail Plate Passenger	2
5	TCA003D	Tonneau Cover Adapter Driver	1
6	TCA003P	Tonneau Cover Adapter Passenger	1

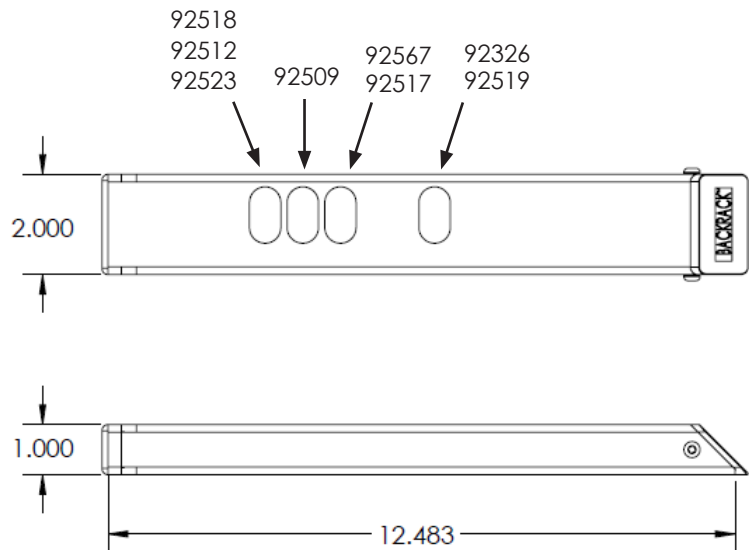

FOR MORE INFORMATION SCAN HERE!

