

INSTALLATION INSTRUCTIONS:

BACKRACK Tonneau Cover Riser Kits 92509,92512,92517,92518,92519,92523,92567,92326

READ THIS NOW!

If you think you are missing any parts, think that this part number is not for your truck or have any installation

question, call our customer service department toll free at:

800-265-8137 or locally 905 849-3633.

Other ways to reach BACKRACK:


Fax 905-849-4116


email: techsupport@backrack.ca

The tonneau cover riser kits will raise the Backrack 1" to give room for the low profile inside the rail type tonneau cover adaptor.

The BACKRACK assembly sits on the bed rails of your truck and is secured with these bolts. If your truck has a BEDLINER we suggest you remove it to drill and install the bolts

Place the riser between the rail mount bracket and the rail plate.
Risers are labeled with Backrack on one side
NOTE: Rail Plates are recommended but not necessary.

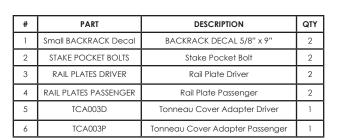

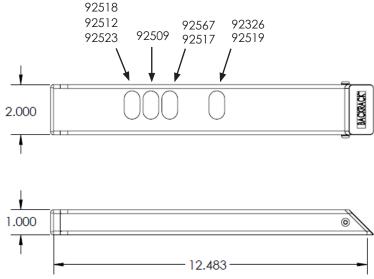

FOR MORE INFORMATION SCAN HERE!

