


I-SHEET NUMBER: INST-00009


CABPART NUMBER: GFD19CC-TX, GFD19QC-TX
PRODUCT: GROWLER RUNNING BOARD
APPLICATION: 2019-2024 RAM 1500 CREW
RAM 1500 QUAD CAB

HARDWARE DESCRIPTION		OTV
HWKT-05693X		QTY.
FLHB-	3/8"-16 X 1" GR. 5 HEX SERRATED FLANGE	12
00688X	BOLT	12
FLNT-	M8-1.25 CLASS 8 SERRATED FLANGE NUT	12
00696X	IVIO-1.25 CLASS O SENKATED FLANGE NUT	12

PARTS INCLUDED	
Running Boards	
Rocker Panel mounting Brackets	
Threaded clamp plates	6

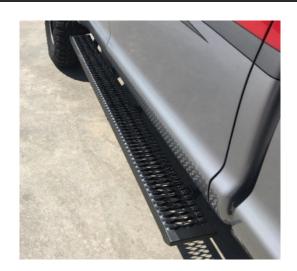



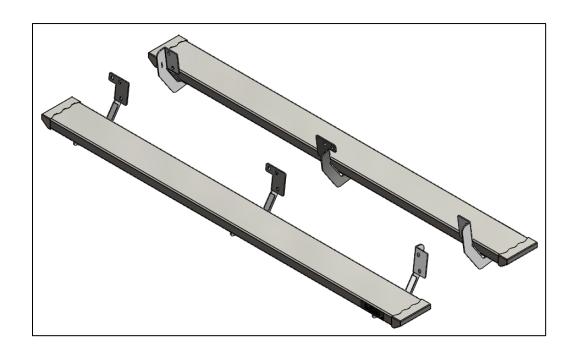


Step 1: Starting with the driver side, remove any steps and old hardware from the vehicle.



Step 2: On the inside rocker panel there will be three 8mm studs coming out from the panel. These studs may be covered in paint and will need to be cleaned before the installation.



Step 3: Carefully install the x3 rocker panel mounting brackets (both sides of truck) to the factory attachment points using the provided M8 flanged hex nuts. Leave finger tight for now.

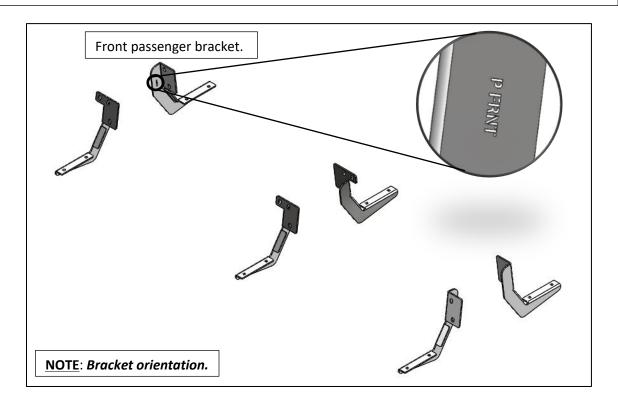





I-SHEET NUMBER: INST-00009

CABPART NUMBER: GFD19CC-TX, GFD19QC-TX PRODUCT: GROWLER RUNNING BOARD APPLICATION: 2019-2024 RAM 1500 CREW

RAM 1500 QUAD CAB


Step 4: Set running board along the top of all three brackets and center along the cab.

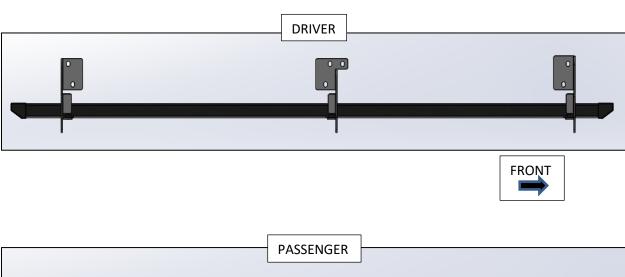

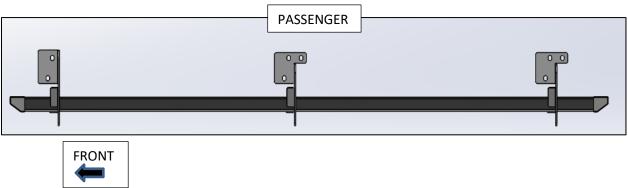

Step 5: Insert the supplied threaded brackets x3 inside the running board lip over the top of each bracket.


Step 6: With the supplied 3/8" x 1" hex bolts, secure each mounting location and leave loose.

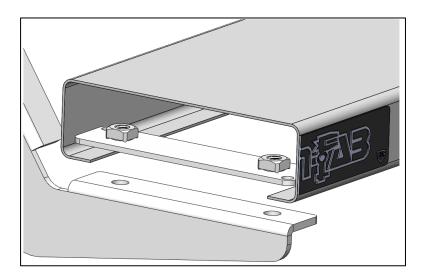

Step 7: After final adjustment, tighten all running board threaded mounts.

Step 8: Next, tighten the lower attachment points (x3).

Step 9: Finish by tightening the upper mounts (x3).

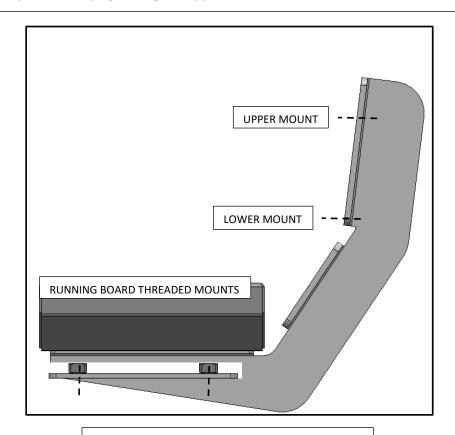

Step 10: Repeat steps 4-9 for passenger side.