




I-SHEET PART NUMBER: INST-00264
 PART NUMBER: **HPD0984CC-TX /SS**
 PRODUCT: **PODIUM HOOP STEP**
 APPLICATION: **09-14 RAM 1500-4500 CC**

HARDWARE DESCRIPTION	QTY.
8mm zinc u-nut	6
8mm zinc bolt	6
8mm zinc lock washer	6
8mm zinc washer	12
8mm black bolt	6
8mm black washer	6
8mm black ny-lock nut	6
M10X25mm Carriage bolt	12
M10 hex nut	12




PARTS INCLUDED	QTY
Driver side step	1
Passenger side step	1

Step 1: Identify driver side step.

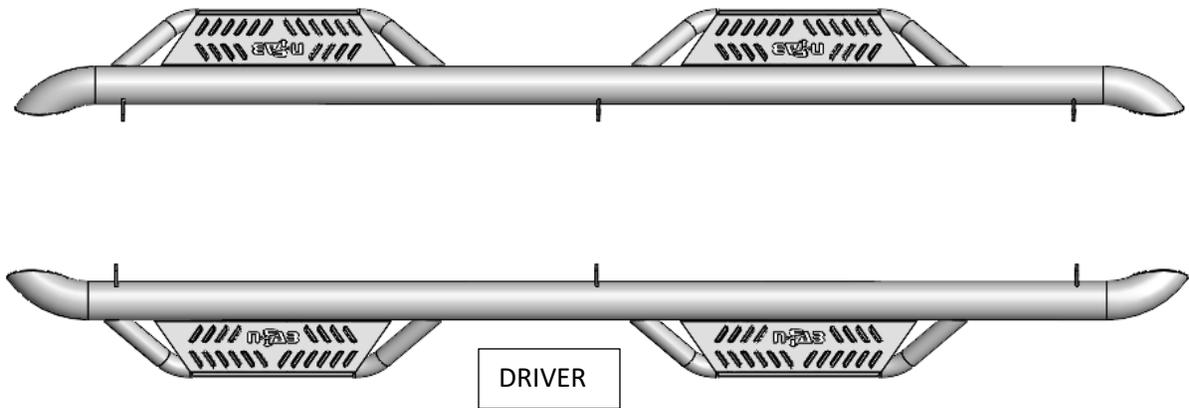


Step 2 Install the (x6) mounting brackets to each attachment point on the main tube and leave loose for now.

****** NOTE: The brackets will attach to the backside of the mounting flange with the threaded end of the carriage bolt facing towards the REAR of the step. ******

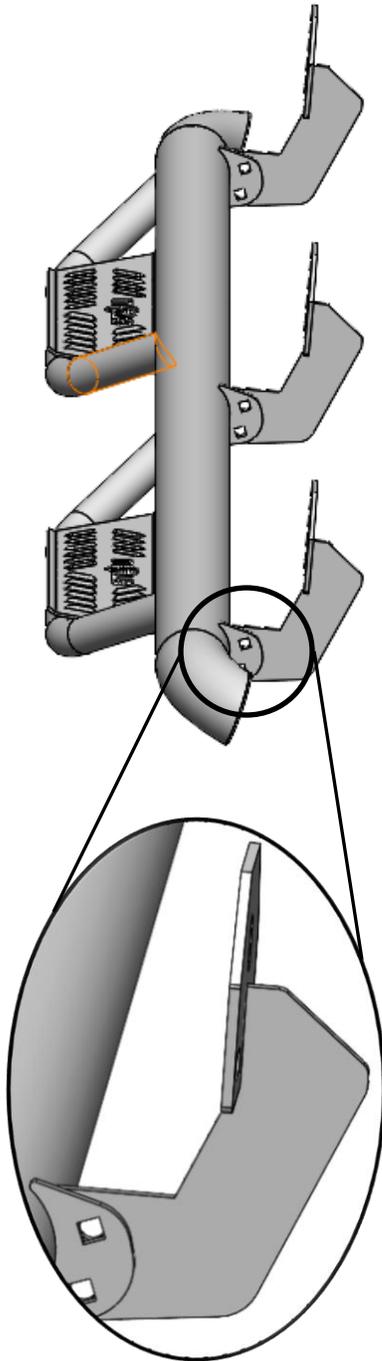

PASSENGER

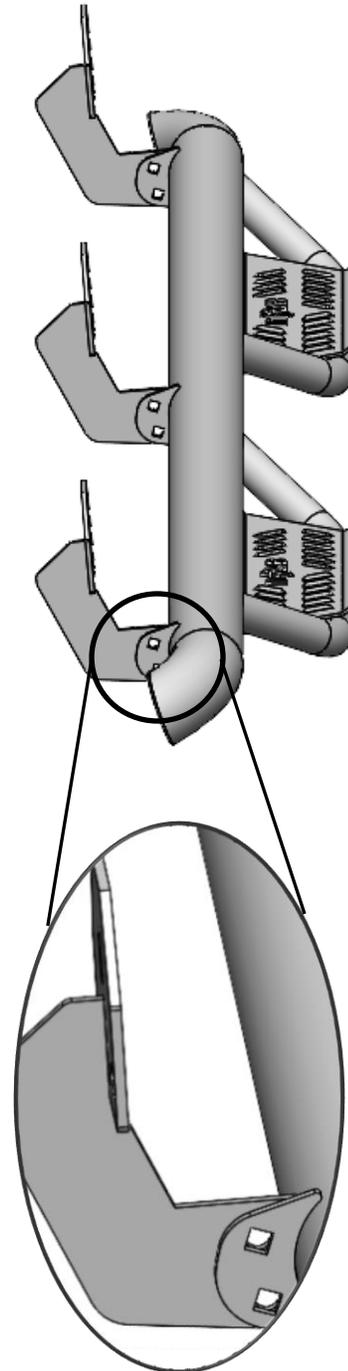


DRIVER


Step 3. Each mounting bracket consist of three mounting holes




Step 4. Remove OE steps if equipped and discard. Locate mounting holes in body. Insert U nuts to the bottom two holes.

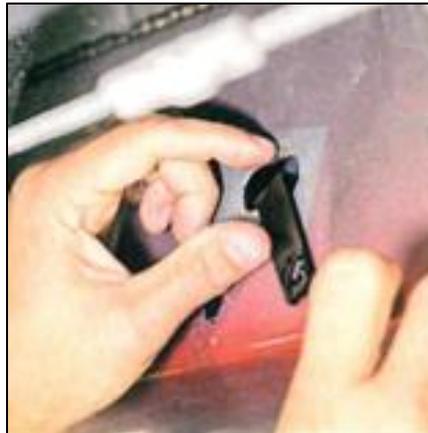

Step 5. Place clear retainer over stud on bolt plate. Fish bolt plate through the body of the truck. Slide retainer tight to stud. Take your time here; avoid dropping bolt plate into the body.

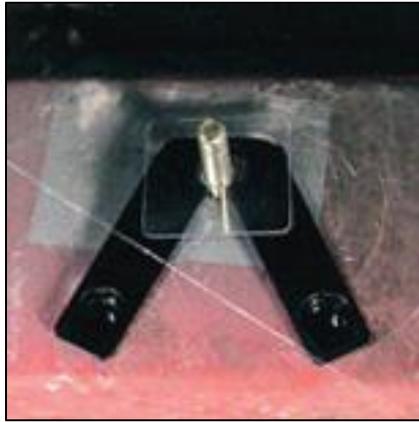

Step 6. Carefully place step into place. Hand tighten the upper nut to bolt plate with washer. Best to have an assistant to lift and hold step in place. Insert and hand tighten lower bolts.

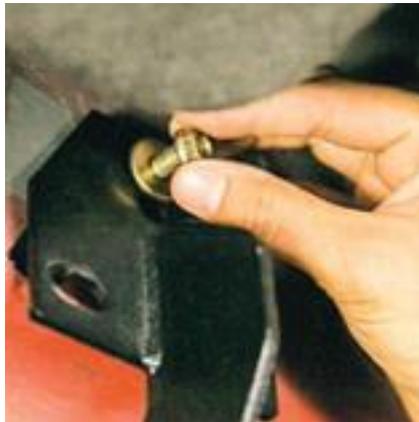

Step 7. Begin tightening nuts and bolts in an alternating pattern. ***Avoid using power or air tools.*** Tighten to (20 ft/lbs) torque to secure steps to truck.

Step 8: Tighten all 3 brackets at the main tube to (20-25 ft./lbs). torque

Step 9. Repeat steps 2-8 with passenger side.

