

Installation Instructions

I - Sheet Number WIN114 Rev.D



Ventvisor® Deflector

For proper installation and best possible fit, please read all instructions **BEFORE** you begin.
For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-344-8759.

Important Safety Information



- CAUTION - Before driving, ensure that the vent visor is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents - 4 Piece Set **NOTE:** Actual product may vary from illustration.



Front Driver
Side Visor

Front Passenger
Side Visor



Rear Driver
Side Visor

Rear Passenger
Side Visor



Alcohol Pad x4

Contents - 6 Piece Set



Front Driver
Side Visor

Front Passenger
Side Visor



Rear Driver
Side Visor



Rear Passenger
Side Visor



Ext. Rear Driver
Side Visor

Ext. Rear Passenger
Side Visor



Alcohol Pad x6

Tools Required



Car Wash Supplies




Clean Towel

Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.
- **Ensure vehicle surface and part are above 60°F (15°C) prior to installation.**




60°F+
33°C+



Installation Steps **NOTE:** Actual application may vary slightly from illustrations.




Clean the window frames with an alcohol pad and dry with a soft cloth.

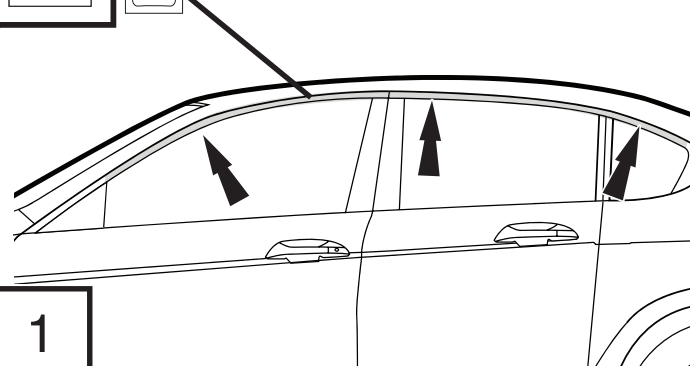

1

Peel back 2" (5cm) of tape liner from each end of top flange. Ensure free ends are accessible. Remove tape liner from rear flange.

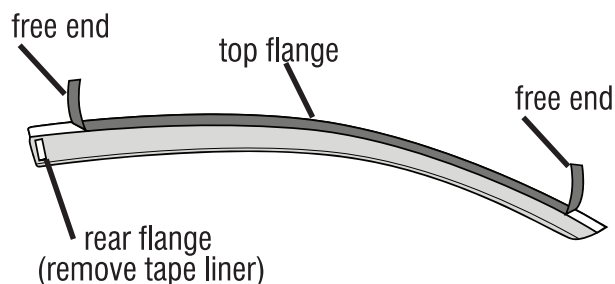


2

Installation Steps **NOTE:** Actual application may vary slightly from illustrations.


Align the Front Visor on the outside of the door frame. The top flange of the Front Visor will attach to the door frame.

NOTE: Align with edge of door frame.

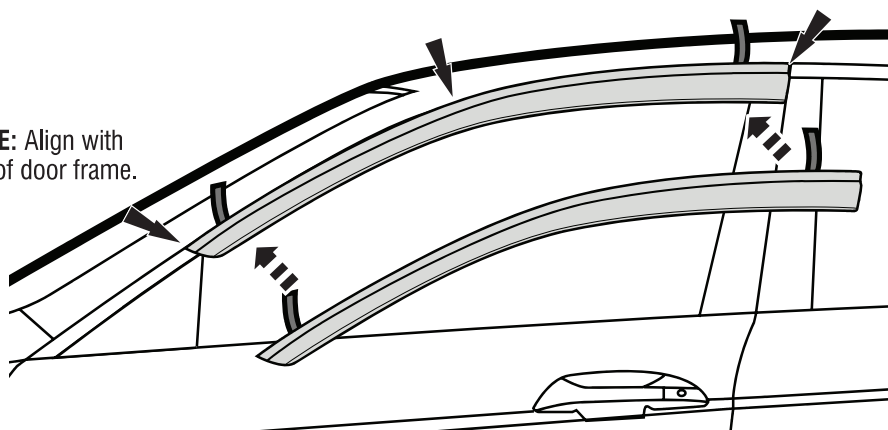


3

Gently press the exposed areas of tape against the surface and verify position. With the Front Visor in its final position, remove the remaining tape liner by pulling on free ends.

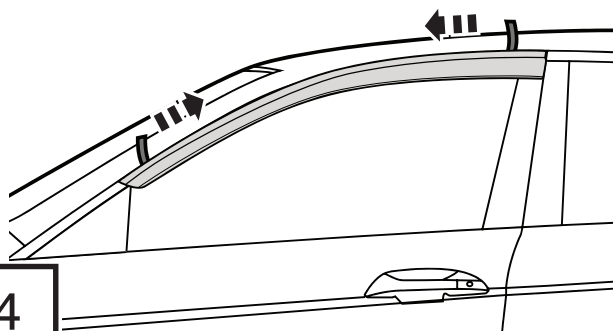


4

Apply pressure along all flanges to ensure proper adhesion of tape.

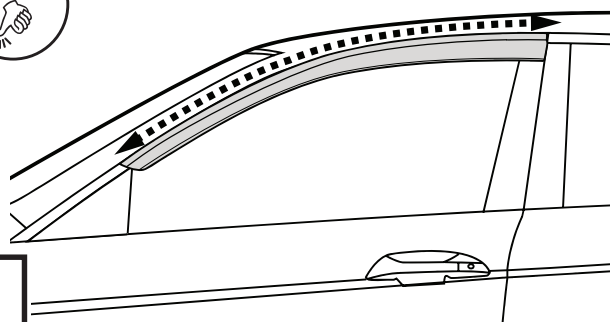


5

4 Piece Set Peel back 2" (5cm) of tape liner from each end of top flange. Remove tape liner from front flange. Remove tape liner from rear flange (6 piece set only).

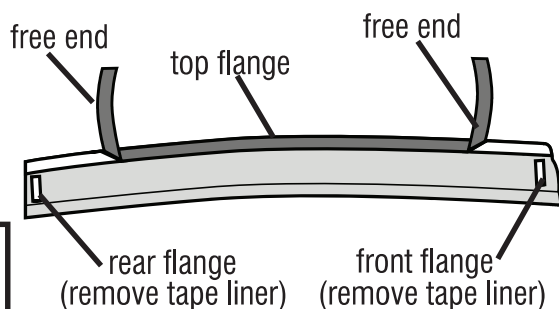


6

Align the deflector with the edge of front and rear doors.

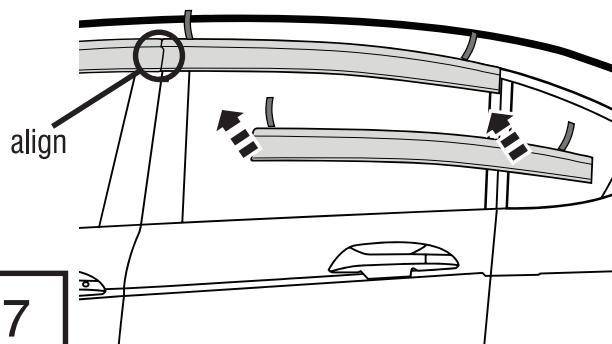


7

Gently press the exposed areas of tape against the surface and verify position. With the Rear Visor in its final position, remove the remaining tape liner by pulling on free ends.

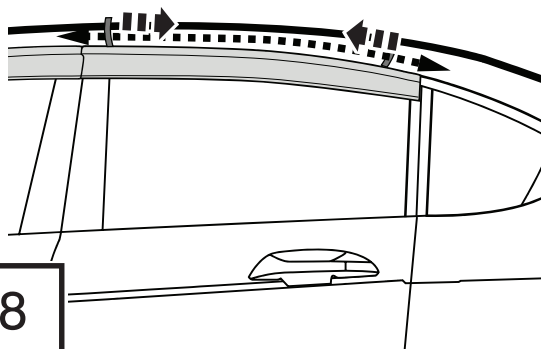

8

Apply pressure along all flanges to ensure proper adhesion of tape.

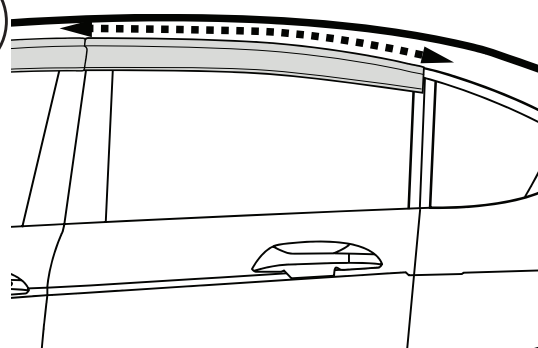


9

Installation Steps

NOTE: Actual application may vary slightly from illustrations.

6 Piece Set


Remove tape liner from Extended Rear Visor.

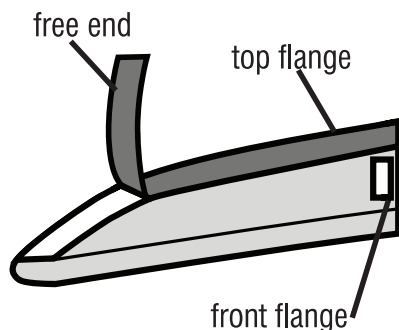

10


Align the deflector on the outside of the window frame. Align the front of the Extended Rear Visor parallel to the previously installed Rear Visor.

NOTE: Be sure visor does not interfere with opening the rear door.

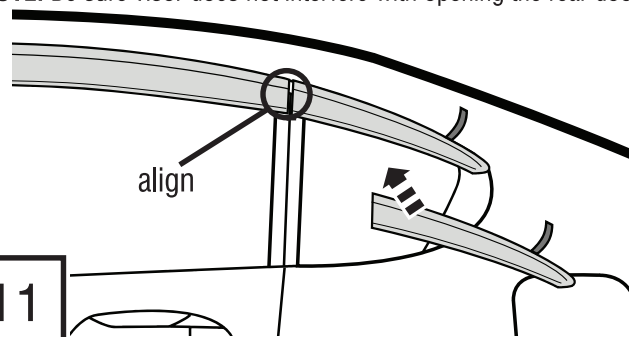


11

Gently press the exposed areas of tape against the surface and verify position. With the visor in its final position, remove the remaining tape liner by pulling on free ends.

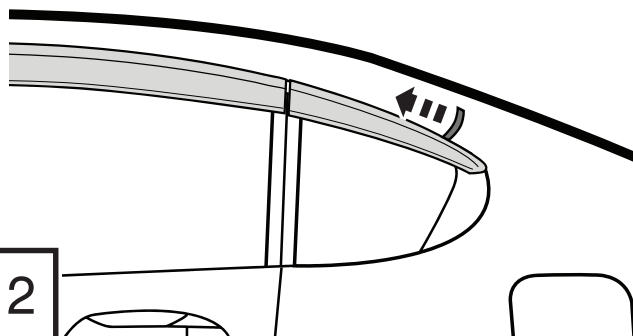

12

Apply pressure along all flanges to ensure proper adhesion of tape.

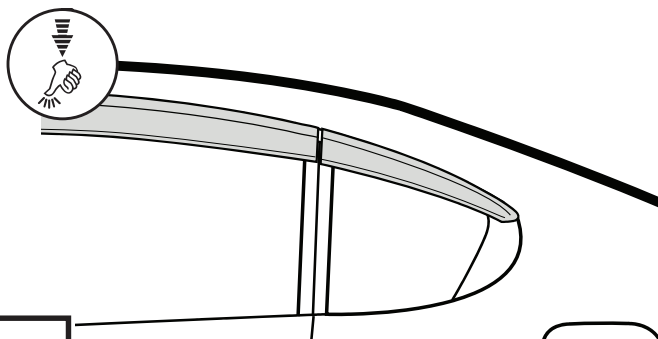

13

Repeat Steps 1 - 13 for opposite side.



Example of completed installation

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



Congratulations!

You have purchased one of the many quality Husky® branded products. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



1-800-344-8759 • Visit us at huskyliners.com

© 2025 Husky Liners, Inc. All rights reserved.

Husky® and the Husky logo are trademarks of Husky Liners, Inc.