

Installation Instructions

I - Sheet Number WIN139 Rev.E



Ventvisor® Deflector

**For proper installation and best possible fit, please read all instructions BEFORE you begin.
For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-344-8759.**

Important Safety Information



- CAUTION - Before driving, ensure that the vent visor is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents - 2 Piece Set **NOTE:** Actual product may vary from illustration.




Front Driver
Side Visor



Front Passenger
Side Visor



Alcohol Pad x2



Scotch Brite
Pad

Contents - 4 Piece Set



Front Driver
Side Visor



Front Passenger
Side Visor




Rear Driver
Side Visor



Rear Passenger
Side Visor



Alcohol
Pad x4



Scotch Brite
Pad

Tools Required



Car Wash Supplies




Clean Towel

Preparation Before Painting / Installation


- A trial fit is recommended to ensure proper positioning and fit. Note that the visors are stamped with an L or R following the part number, indicating Left or Right side placement.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash your vehicle to remove any debris and/or dirt.
- Dry with a clean towel.
- **Ensure vehicle surface and part are above 60°F (15°C) prior to installation.**



Installation Steps **NOTE:** Actual application may vary slightly from illustrations.




Roll down window. Buff the inside felt surface with scotch brite pad. Then clean with alcohol pad.

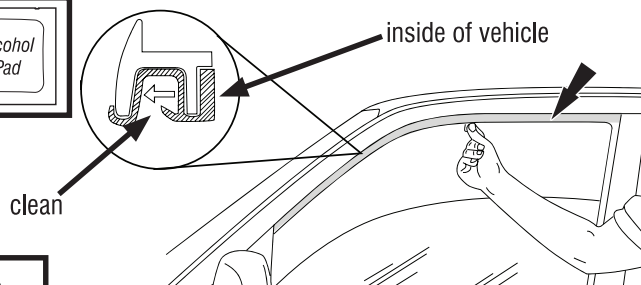

1

NOTE: visors mount on the **inside** of the window channel.

Remove the tape liner from the front & rear flanges. Peel back 2" of tape liner from each end of top flange.

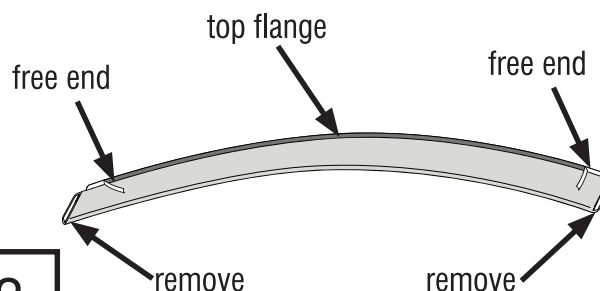


2

Installation Steps


NOTE: Actual application may vary slightly from illustrations.

Insert visor into window channel, front flange first.

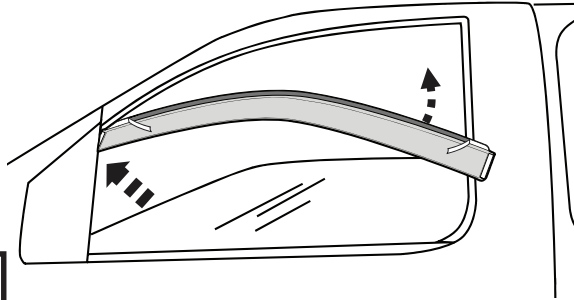


3

Apply pressure to all flange edges to ensure proper adhesion. Remove tape liner by pulling on free ends.

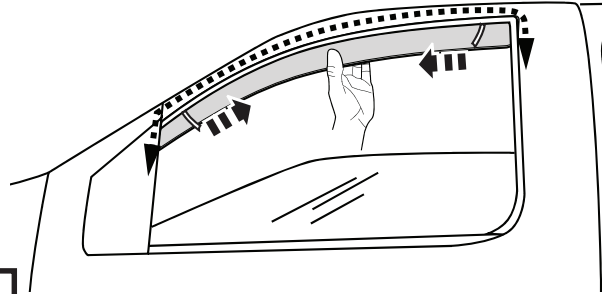


4

NOTE: It is necessary to both hold the visor up into the window channel **AND** pull the bottom of the visor slightly outward while raising the glass to seat visor properly.

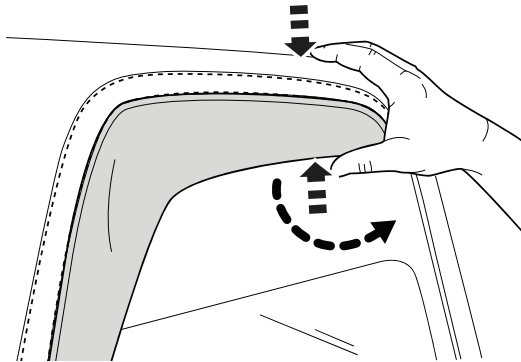

5

Continue to apply pressure to ensure that the visor remains properly seated inside the window channel as window is slowly closed. Leave window up for 72 hours to secure visor to window channel.

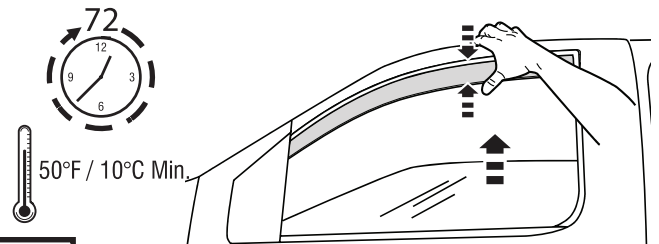


6

If the visor does not seat correctly, roll down window and repeat **Step 5**.

4 Piece Set


Install the rear visors using the same preparation and installation methods as the front visor.

NOTE: If your rear visor has a small notch on the side flange, install the notch toward the front of the vehicle.

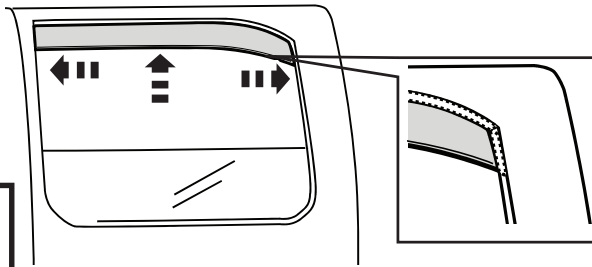

7

NOTE: It is necessary to both hold the visor up into the window channel **AND** pull the bottom of the visor slightly outward while raising the glass to seat visor properly.

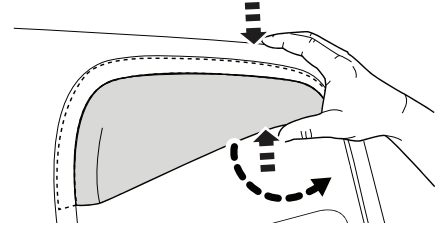

8

If the visor does not seat correctly, roll down window and repeat **Step 8**.

Repeat **Steps 1 thru 8** for passenger side.



Example of completed installation

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



Congratulations!

You have purchased one of the many quality Husky® branded products. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



1-800-344-8759 • Visit us at huskyliners.com

© 2025 Husky Liners, Inc. All rights reserved.

Husky® and the Husky® logo are trademarks of Husky Liners, Inc.