

I-SHEET NUMBER: INST- 00319  
 PART NUMBER: **F2156B**  
 PRODUCT: **HOOP STEP**  
 APPLICATION: **21-C FORD BRONCO 2D**


HARDWARE DESCRIPTION		QTY.
<b>HWKT-12094X</b>		
FHLB 04240X	M10x25mm HEX FLANGED BOLT	8



PARTS INCLUDED		QTY
DRIVER SIDE		1
PASSENGER SIDE		1

## N-FAB NERF STEP SYSTEM

**STEP 1:** Identify driver side step.

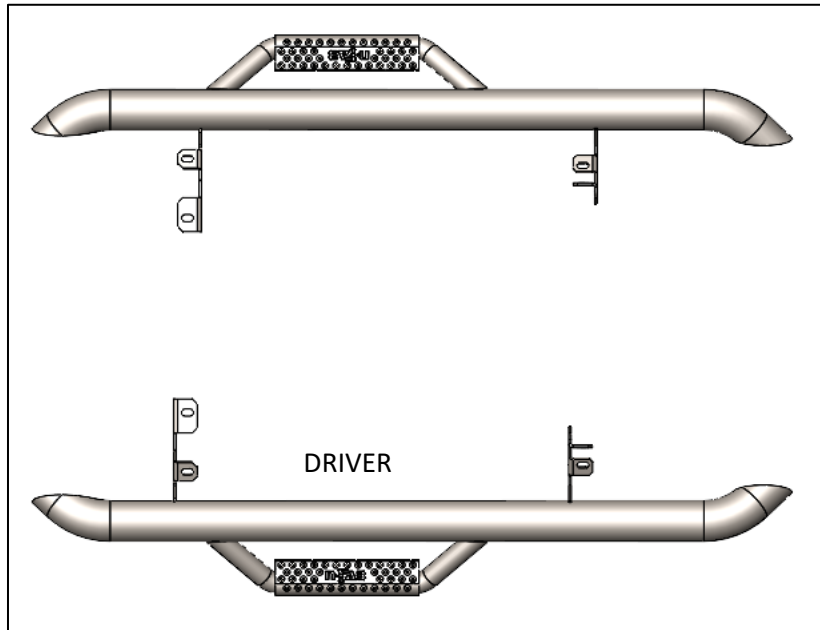

**STEP 2:** Remove any factory running boards or hardware and discard.  
**STEP 3:** Clean/tap the three factory threaded mounting locations.



**STEP 4:** Carefully place step into place and loosely fasten using the supplied M10X25mm hardware.



**Step 5:** Next, tighten the three lower bolts first following with the three upper bolts.  
**Step 6:** Repeat steps 2-5 with passenger side.  
**Step 7:** Your install is now complete.