


## **REAR WHEEL, BRAKE GUARD**

Fits 2013 FORD F-250 & F-350

PASSENGER SIDE SHOWN WITHOUT THE WHEEL RIM

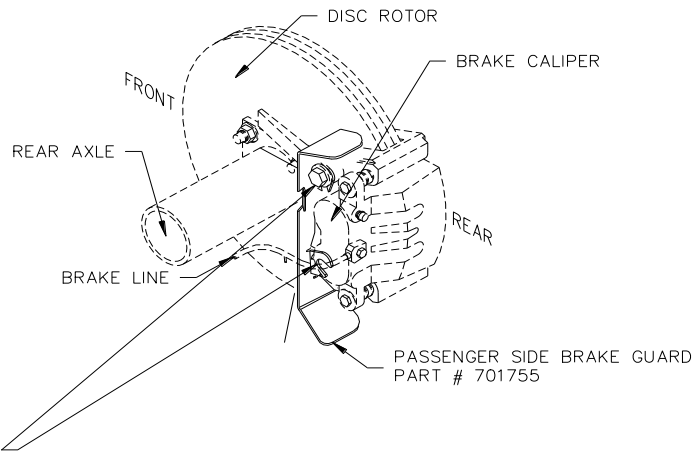

NOTE:


FACTORY CALIPER BOLTS ARE USED TO FASTEN THE BRAKE GUARD IN PLACE  
LOOSE BOTH FACTORY CALIPER BOLTS TO INSTALL THE BRAKE GUARD  
SAME INSTALLATION FOR DRIVER SIDE

REAR WHEEL, BRAKE GUARD (2013 FORD SD F250/F350)  
BRAKE GUARD KIT # 700282

## **REAR WHEEL, BRAKE GUARD**

Fits 2013 FORD F-250 & F-350

PASSENGER SIDE SHOWN WITHOUT THE WHEEL RIM

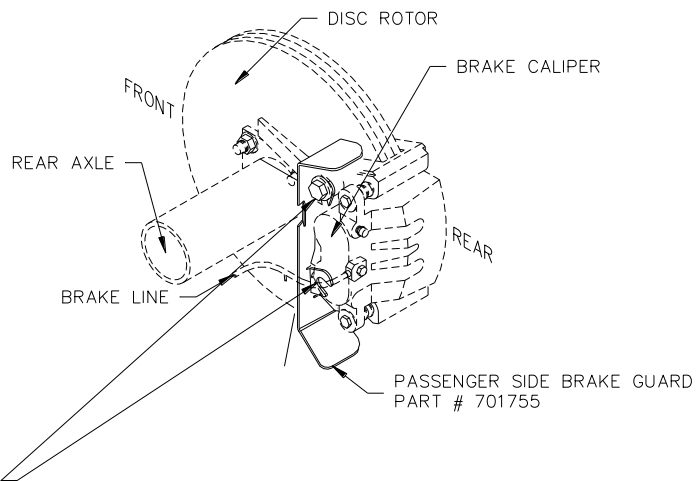

NOTE:

FACTORY CALIPER BOLTS ARE USED TO FASTEN THE BRAKE GUARD IN PLACE  
LOOSE BOTH FACTORY CALIPER BOLTS TO INSTALL THE BRAKE GUARD  
SAME INSTALLATION FOR DRIVER SIDE

REAR WHEEL, BRAKE GUARD (2013 FORD SD F250/F350)  
BRAKE GUARD KIT # 700282