

### Parts List

1	Driver / left side bar
1	Passenger / right side bar
2	Mounting bracket, front
2	Mounting bracket, rear
8	Hex bolt, 8mm x 30mm
8	Flat washer, 8mm x 25mm
8	Lock washer, 8mm
8	Button-head bolt, 10mm x 30mm
8	Flat washer, 10mm x 25mm
8	Lock washer, 10mm


### Level of Difficulty

Easy



Scan for helpful install tips

### Product Image

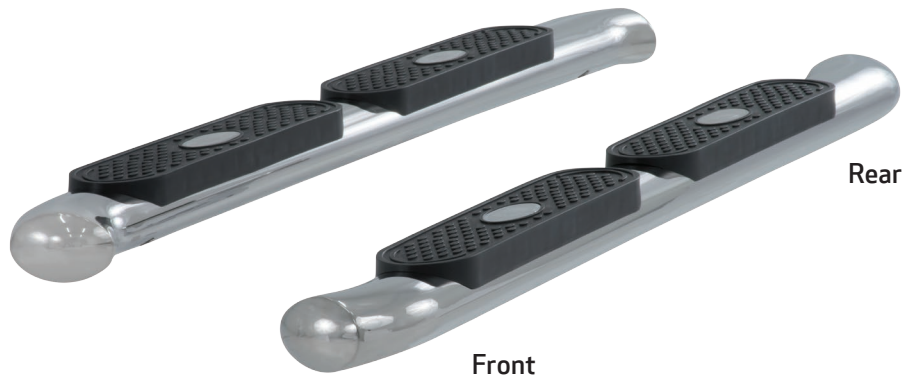


## Procedure

1. Begin installation by working on the driver side of the vehicle. Remove the plastic plugs on the rocker panel to locate the mounting holes for the brackets. Attach and secure the front and rear mounting brackets to the existing holes using 8mm bolts, 8mm flat washers and 8mm lock washers for each outer hole. Hand tighten.
2. Attach the side bars to the front and rear mounting brackets using four 10mm button-head bolts, four 10mm flat washers and four 10mm lock washers. Snug the hardware, but do not fully tighten.
3. Adjust the side bar so that it is level and centered.
4. Repeat process for passenger side of vehicle to complete installation.
5. Congratulations on the installation of your new ARIES 4" oval side bars.

With the side bars installed, periodic inspections should be performed to ensure all mounting hardware remains tight.

To protect your investment, see the 'Notes and Maintenance' section on the first page of this instruction manual.

### Brackets

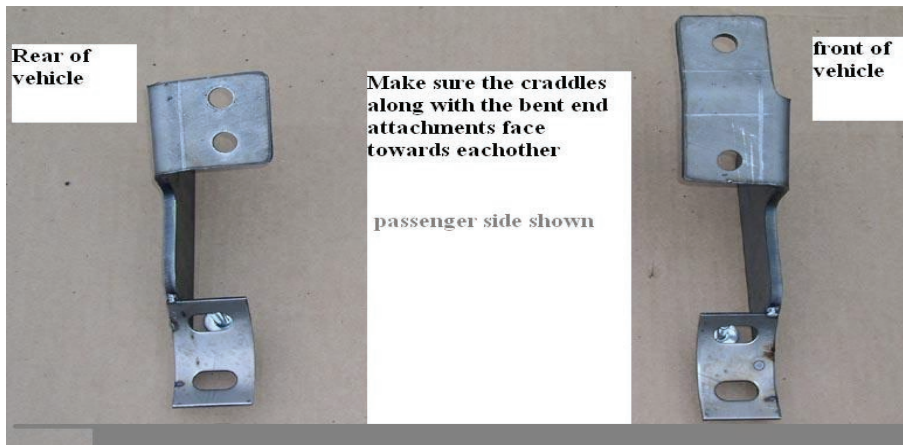

### Notes and Maintenance

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

To protect the product, wax after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel and aluminum, polish may be used to clear small scratches and scuffs on the finish. Mild soap may be used also to clean the product.