

# INSTALLATION INSTRUCTIONS

## **CUSTOMER SERVICE**

Phone: 866-900-8800 • 8:30 am - 5:00 pm Mon - Fri CST

Email: [info@undercoverinfo.com](mailto:info@undercoverinfo.com)



# MODEL SPECIFIC GUIDE

## HIDDEN HINGE VERSION

### Model 3026 Dodge Ram 1500-3500 Std/Quad/Mega Cab 6.5' Short Bed 2002-2008 & 2009 Ram 2500




**Note:** If your truck is equipped with a spoiler style tailgate piece, you will need to replace it with a standard smooth style tailgate piece like the photo to the left.



#### RE: Step 2 on the Quick Start Guide

Measurement for the rear mounting bracket is 48 1/2" from the back side of the bulkhead to the front edge of the bracket.

#### TOP VIEW PASSENGER SIDE

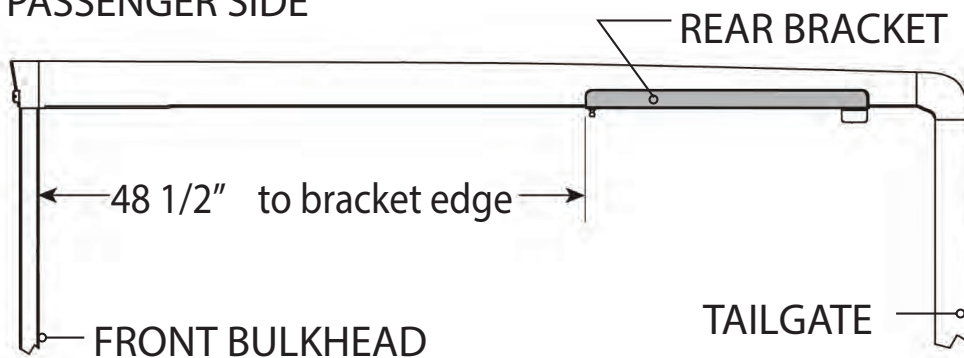

#### RE: Step 3 on the Quick Start Guide

Measurement for the front mounting is 16" from the back side of the bulkhead to the end of the bracket. The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.

#### TOP VIEW PASSENGER SIDE

