

2020 GMC Sierra HD


2" Offset Mud Flap Set, Front Mounting Diagram & Instructions Kit# GCS200F

IMPORTANT:

Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.



TOOLS REQUIRED-



7/16" Open Wrench or Socket Wrench



1/4" Socket Driver




T15 Torx Bit




Electric or Rechargeable Drill

FLAPS

(1)Flap Assy Front, DS



(1)Flap Assy Front, PS



PARTS BAG #768389

a) (2) Washer, Flat 0.281" x 1", 18g, SS, Part #018028



b) (4) Washer, Flat 0.203" x 1", 18g, SS, Part #018031



c) (2) Washer, Flat 0.437" x 1", Nylon Part #054076



d) (2) Cap Screw, SS 1/4"-20UNC x 5/8" Part #014006



e) (4) Screw, Sheet Metal, SS 1/4"Hex Washer Head, #8-18x1" Part # 016054



f) (1) Mud Flap Clip Driver Side Part # 768157



g) (1) Mud Flap Clip Passenger Side Part #768158








INSTALLATION (For ease of installation it is suggested that the wheel be removed)

- 1. Before you install your Mud Flap Set, see the diagram and parts list for all necessary parts. Start on the driver's side.
- 2. Remove factory screw from wheel well holes #5 & #6.
- 3. Loosely install mount clip (f) on mud flap hole #1 using a cap screw (d), stainless steel washer (a), and nylon washer (c).
- 4. Tuck the offset tab #4 underneath the factory plastic cap until the tab is fully engaged inside the factory plastic cap
- 5. Loosely secure mud flap through hole #2 into factory hole #5 using supplied sheet metal screw (e) and stainless steel washer (b).
- 6. Install mount clip (f) on hole #1 behind the fender lip.
- 7. Loosely secure mud flap through hole #3 into hole #6 using supplied screw (e) and washer (b).
- 8. Using a bubble level or other levelling tool, ensure that the mud flap is level. Tighten fasteners.

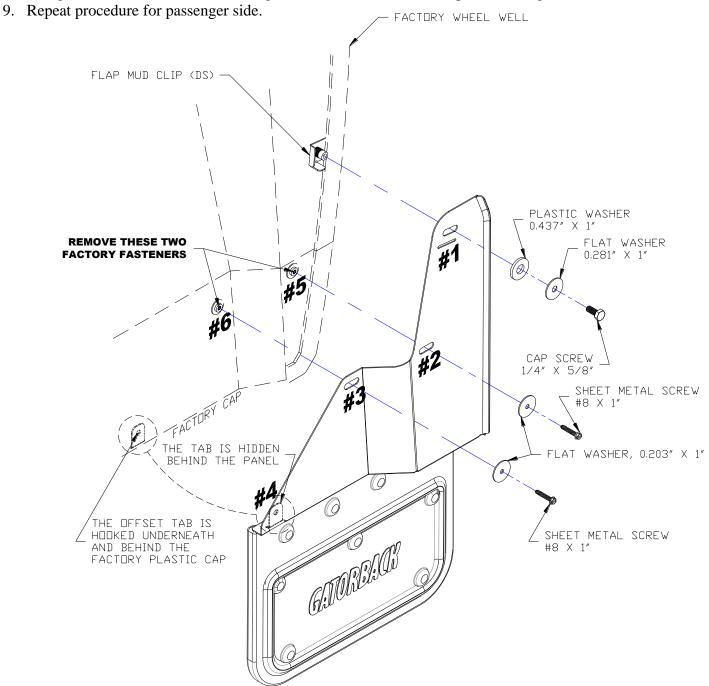

10/24/19 Sierra Front