


INFO SHEET FOR INSTALL OF CHEVY DUALY MUDFLAP WITH LINER - 1

1. Remove the highlighted factory screws.

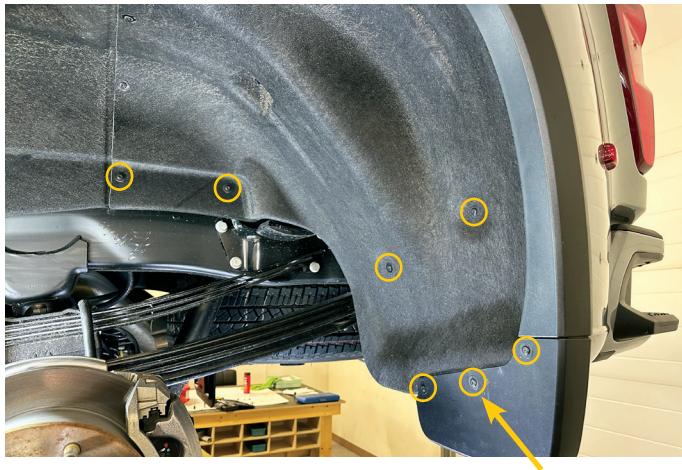

2. Pull the factory protector down so the spring nuts on the liner are exposed.



3. Remove the spring nuts from the liner.



4. Tuck liner in behind the sheet metal.



5. Reinstall spring nuts on the sheet metal as shown.



6. Put factory protector back in place.



INFO SHEET FOR INSTALL OF CHEVY DUALY MUDFLAP WITH LINER - 2

7. Loosely install mudflap using 3 factory holes in order to make guide marks.



8. Ensure flap is level.



9. Hold rubber against the liner & mark the 2 upper left holes with a marker.



10. See marks shown here.



11. Remove the mudflap.



12. Roughly line up to 2 left lower holes of the bracket with the marks made & mark below the bracket with a marker.



INFO SHEET FOR INSTALL OF CHEVY DUALY MUDFLAP WITH LINER - 3

13. Use a tape measure to help create an even horizontal line.



14. Use a level or ruler to make a horizontal line across the liner.



15. See liner with markings here.



16. Cut the liner along the horizontal line made.



17. Remove this piece - but you may want to keep it as a guide for the other wheel well.




Approx 6.5"




INFO SHEET FOR INSTALL OF CHEVY DUALY MUDFLAP WITH LINER - 4

18. Hold up bracket again & use as a guide for the next vertical cut.

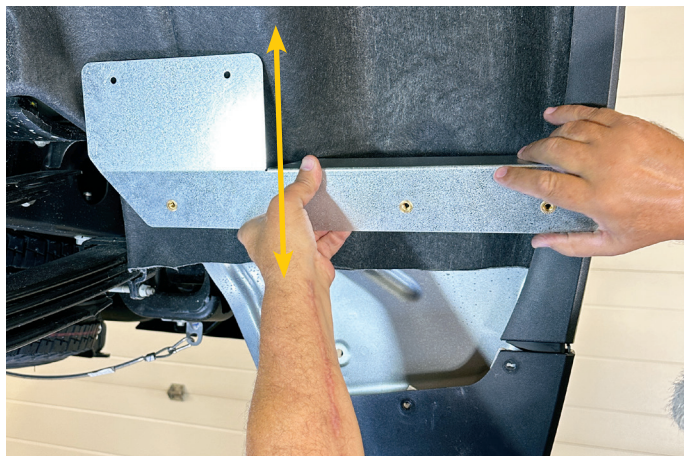

19. Mark this next section & cut it out of the liner.

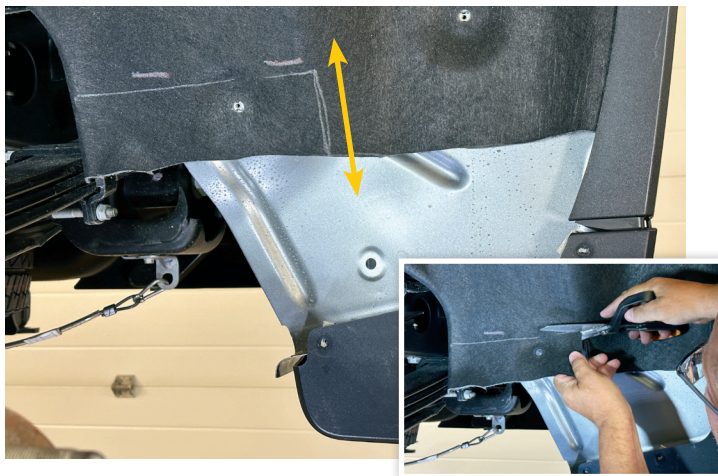

20. See cut shown here.



21. By trying to install the bracket, you can see where further relief is needed.



22. Mark the liner further, going slowly so that you aren't taking off more than you need. The objective is to be able to mount the bracket but leave enough of the liner intact so that it isn't visible once the mudflaps are installed.



INFO SHEET FOR INSTALL OF CHEVY DUALY MUDFLAP WITH LINER - 5

23. Lift the liner best you can & line the bracket up with 2 body mounting points under the liner.



24. Install the bracket to these points as per the instructions.



25. The bracket should now be installed & look like this. Ensure outer part of bracket is installed behind the wheel lip.




26. Reinstall factory screws as shown here.



INFO SHEET FOR INSTALL OF CHEVY DUALY MUDFLAP WITH LINER - 6

27. Part of the liner will still be covering mounting holes on the bracket. Cut the liner to expose these holes.

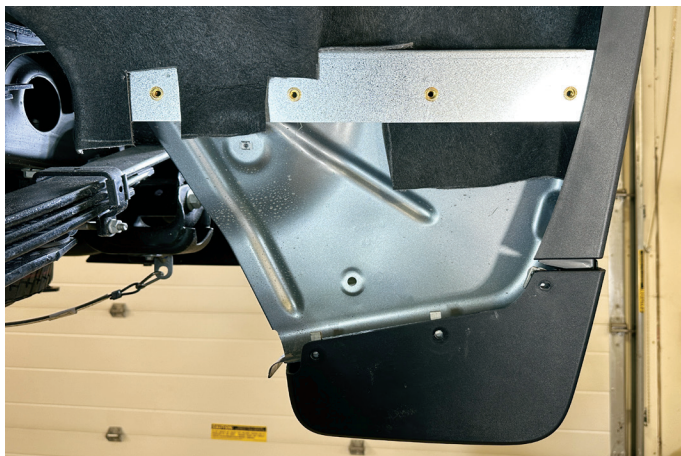

28. Carry on with the install per the instructions included.

