




2024-C GMC Sierra HD AT4X
2" Offset Mud Flap Set, Front
Mounting Diagram & Instructions
Kit# GCAA214F

IMPORTANT:

Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.




TOOLS REQUIRED-

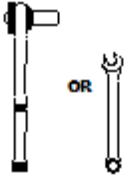

7/16" Open Wrench or
Socket Wrench


OR



1/4" Socket Driver




T15 Torx
Bit

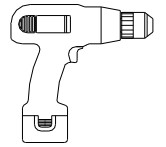


Electric or Rechargeable
Drill

FLAPS

(1) Flap Assy
Front, DS

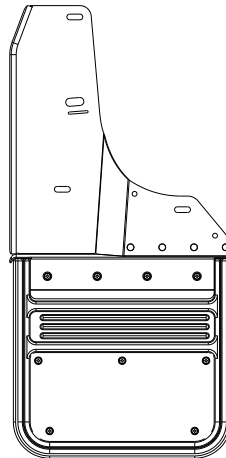


(1) Flap Assy
Front, PS

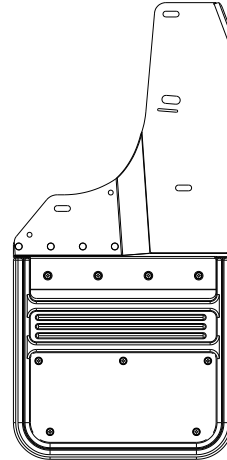

PARTS BAG # 769057


a) (2) Cap Screw, Ox.
1/4"-20UNC x 5/8"
Part #014071




b) (6) Screw, Sheet Metal, Ox.
1/4" Hex Washer Head, #8-18x1"
Part # 016055



c) (2) Washer, Flat
0.281" x 1", 18g, Ox,
Part #018069




d) (6) Washer, Flat
0.203" x 1", 18g, Ox,
Part #018070




e) (2) Washer, Flat
0.437" x 1", Nylon
Part #054091




f) (6) Washer, Nylon
0.203" x 0.885"
Part #054080



g) (1) Mud Flap Clip
Driver Side
Part # 769312

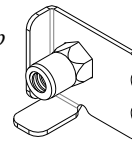


h) (1) Mud Flap Clip
Passenger Side
Part #769313

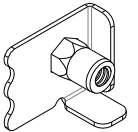

INSTALLATION *(For ease of installation it is suggested that the wheel be removed)*

1. Before you install your Mud Flap Set, see diagram and parts list for all necessary parts. Start on the driver's side.
2. Remove 3 factory screw from wheel well holes #5 to #7.
3. Loosely install mount clip (g) on mud flap hole #2 using a cap screw (a), black oxidized washer (c), & nylon washer (e).
4. Loosely secure mud flap through hole #3 into factory hole #6 using supplied sheet metal screw (b), oxidized washer (d) & nylon washer (f)
5. Slide the mount clip (g) on hole #2 behind the fender lip.
6. Loosely secure mud flap through hole #1 to factory hole #5 using supplied sheet metal screw (b), oxidized washer (d) & nylon washer (f)
7. Loosely secure mud flap through hole #4 into factory hole #7 using supplied sheet metal screw (b), oxidized washer (d) & nylon washer (f)
8. Using a bubble level or other levelling tool, ensure that the mud flap is level. Tighten fasteners.
9. Repeat procedure for passenger side.

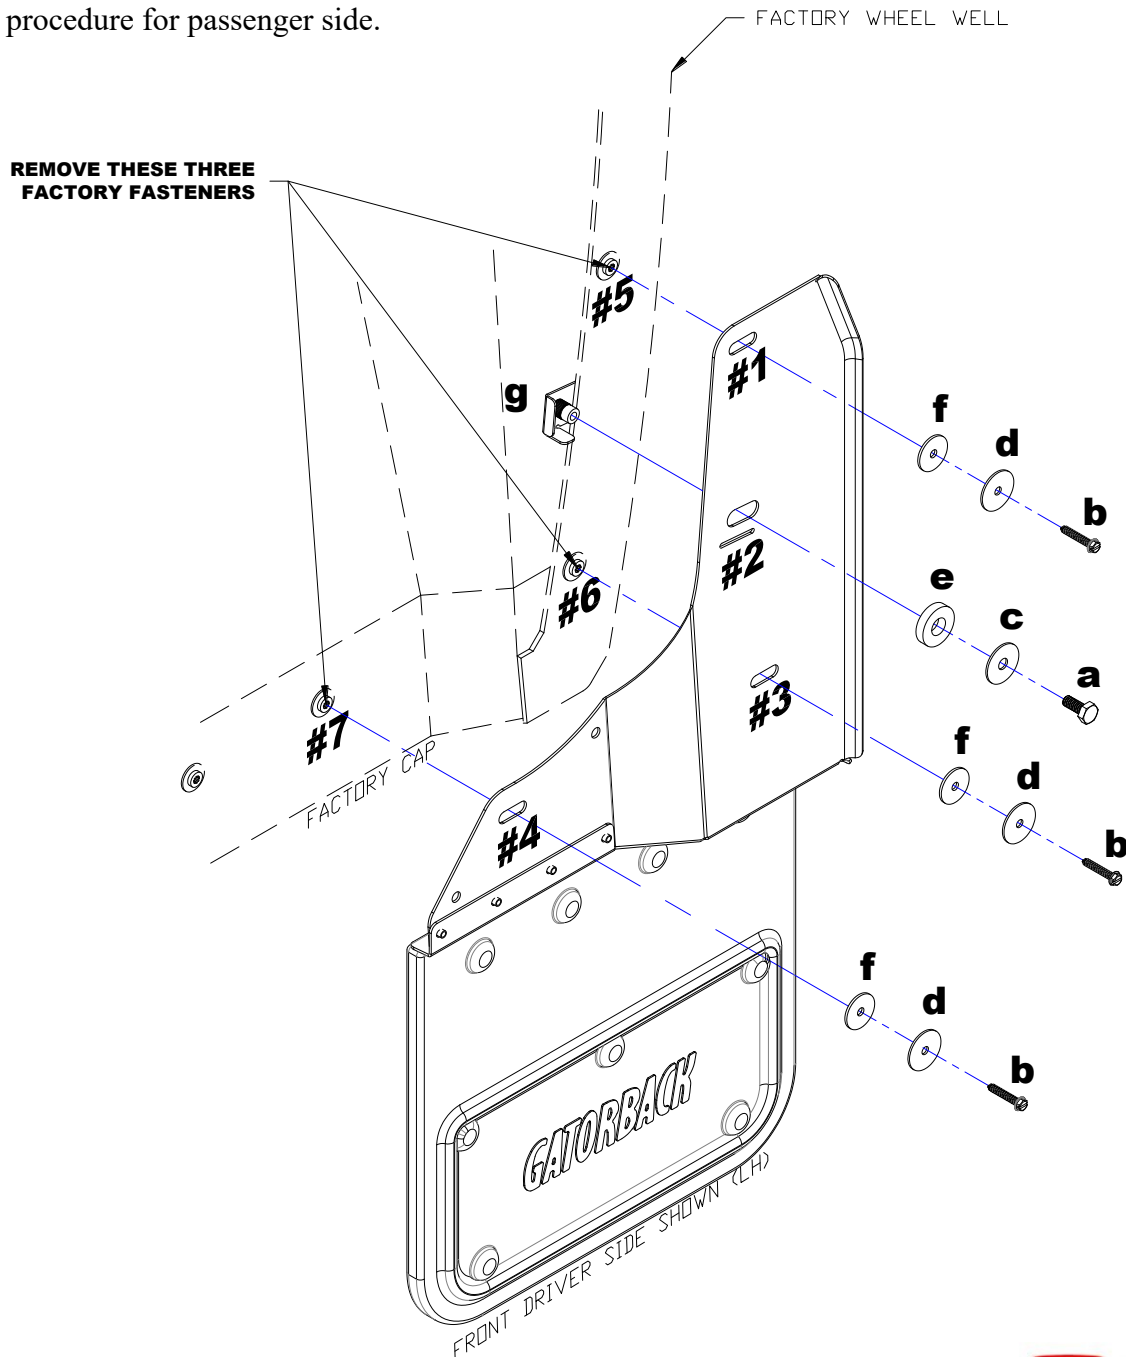

Please check out our YouTube channel to see an install video for this application.





GATORBACK MUDFLAPS


2024-C GMC Sierra HD AT4X 2" Offset Mud Flap Set, Rear Mounting Diagram & Instructions Kit# GCAA214R

IMPORTANT:

Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.



TOOLS REQUIRED-

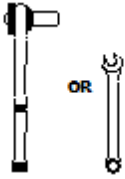


7/16" Open Wrench or
Socket Wrench



1/4" Socket Driver




T15 Torx
Bit

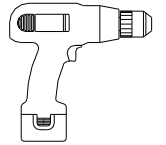


Electric or Rechargeable
Drill

FLAPS

(1) Flap Assy
Rear, DS

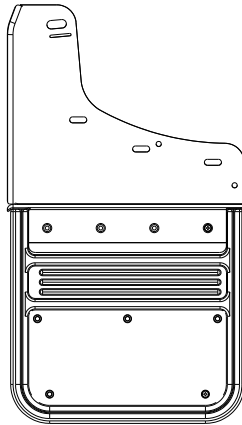


(1) Flap Assy
Rear, PS

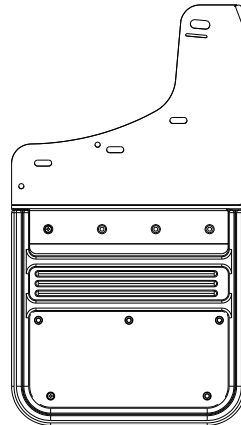

PARTS BAG # 769057


a) (2) Cap Screw, Ox.
1/4"-20UNC x 5/8"
Part #014071




b) (6) Screw, Sheet Metal, Ox.
1/4" Hex Washer Head, #8-18x1"
Part # 016055




c) (2) Washer, Flat
0.281" x 1", 18g, Ox,
Part #018069




d) (6) Washer, Flat
0.203" x 1", 18g, Ox,
Part #018070




e) (2) Washer, Flat
0.437" x 1", Nylon
Part #054091




f) (6) Washer, Nylon
0.203" x 0.885"
Part #054080



g) (1) Mud Flap Clip
Driver Side
Part # 769312

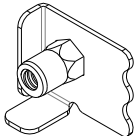


h) (1) Mud Flap Clip
Passenger Side
Part #769313

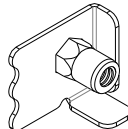

INSTALLATION *(For ease of installation it is suggested that the wheel be removed)*

1. Before you install your Mud Flap Set, see diagram and parts list for all necessary parts. Start on the driver's side.
2. Remove factory screw from wheel well holes #5 to #7.
3. Loosely install mount clip (g) on mud flap hole #1 using a cap screw (a), oxidized washer (c), and nylon washer (e).
4. Loosely secure mud flap through hole #2 into factory hole #5 using supplied sheet metal screw (b), oxidized washer (d) and nylon washer (f)
5. Slide the mount clip (g) on hole #1 behind the fender lip.
6. Loosely secure mud flap through hole #3 into hole #6 and through hole #4 into hole #7 using supplied sheet metal screws (b), oxidized washers (d), and nylon washers (f).
7. Using a bubble level or other levelling tool, ensure that the mud flap is level. Tighten fasteners.
8. Repeat procedure for passenger side.

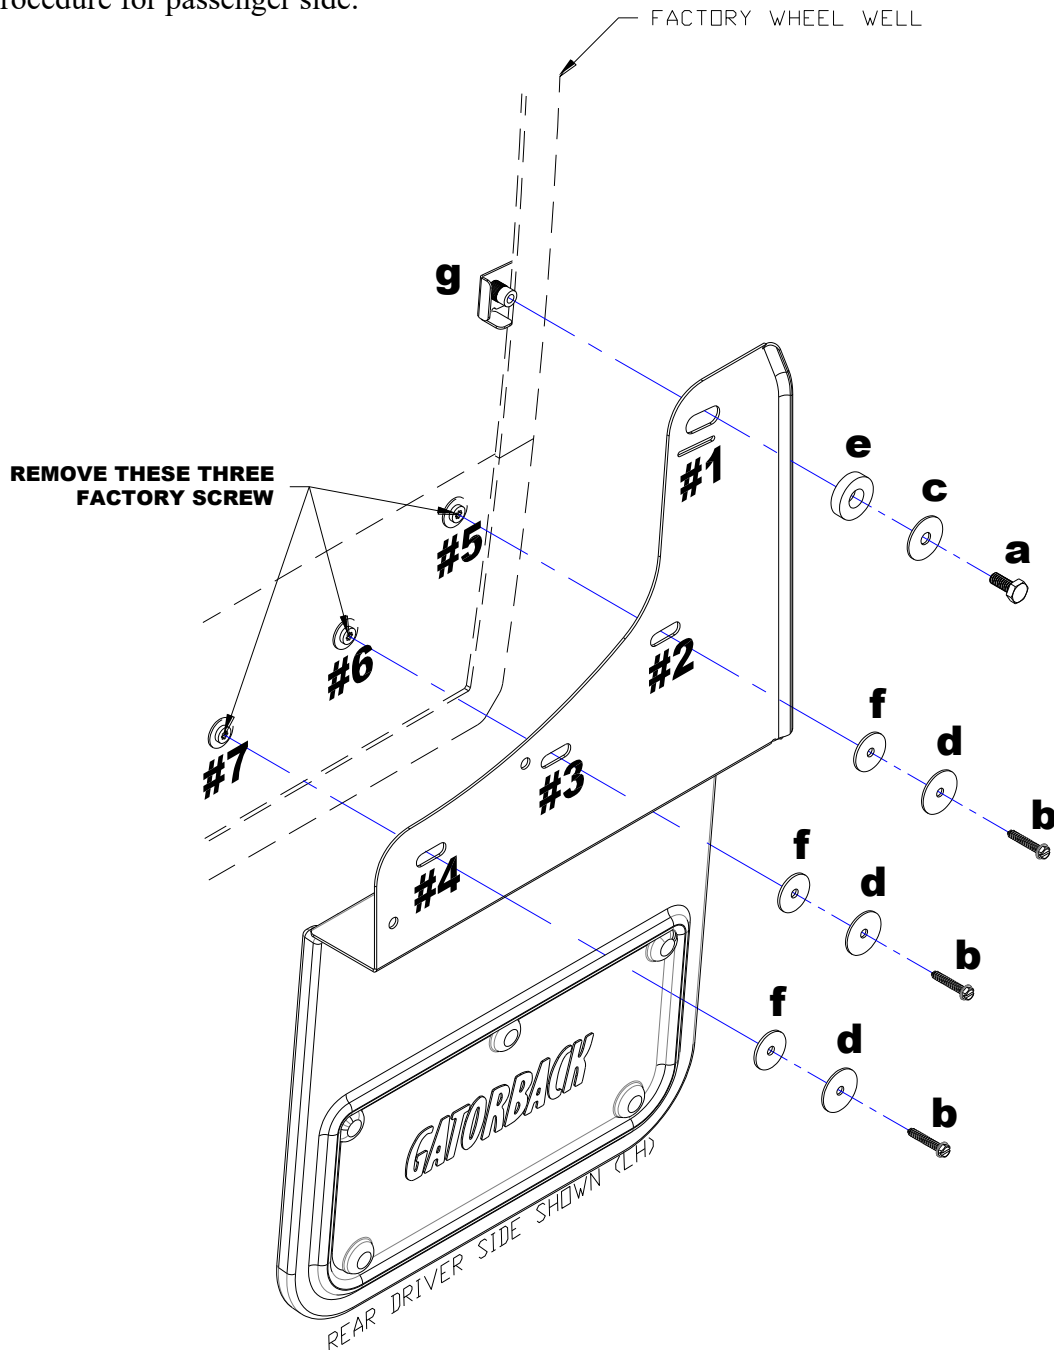

Please check out our YouTube channel to see an install video for this application.

