

# ADAPTOR FITTING GUIDE

## 1. How to Determine the Ezi-action® Adaptor Fitting for a Drum with internal threaded opening.

- Measure across the opening internal thread width.
- Measure the width of the bung.



This opening measures close to 55mm.




This bung measures close to 55mm.


Both these drums require an Ezi-action® M55 fitting.

## 2. How to Determine the Ezi-action® Adaptor Fitting for a Container with external threaded opening.

- Measure across the opening outside thread width.
- Examine the thread pitch.

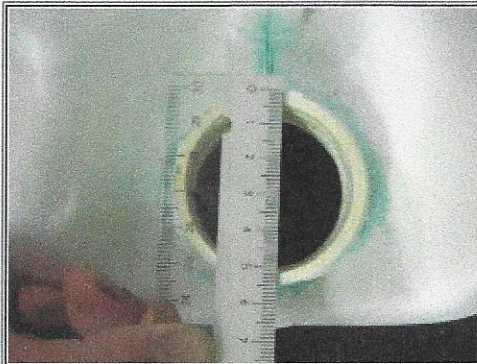

The width is 55mm.  
This container requires an Ezi-action®  
C55 Fitting

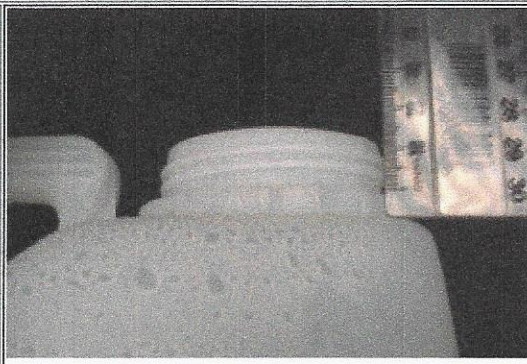

This container requires an Ezi-action®  
C63Int Fitting.



### 3. How to Determine the Ezi-action® Adaptor Fitting for an IBC

Note: The IBC needs a small inner cap within a large cap. ( see photo)

a. Remove the small inner cap.



b. Measure the internal opening and examine the thread.



If the opening has width of 58mm with a fine thread the IBC requires an Ezi-action® MBSP Adaptor Fitting.

If the opening has width of 55mm with a medium thread the IBC requires an Ezi-action® M55 Adaptor Fitting.



The most commonly required fittings for IBC's are the Ezi-action® MBSP and M55 adaptor fitting.