

420 N. Grove, Richardson, TX 75081

Tele: (800) 527 - 4345 Fax: (800) 442 - 5263

Web site: www.goindustries.com E-mail: sales@goindustries.com

Big Tex Grille Guard

Installation Instructions

77640 & 77640B

Ford Super Duty '99 - '04 Ford Excursion '00 - '04

77641 & 77641B

Ford Super Duty '05 - '07 Ford Excursion '05

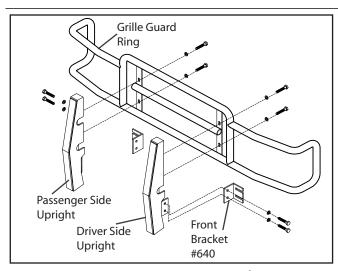


Diagram 1

Parts List:

- 1 Grille Guard Ring
- 1 Driver Side Upright
- 1 Passenger Side Upright
- 2 Brackets #640
- 6 1/2" Lock Washers
- 2 1/2" x 1 1/2" HH Bolts
- 4 1/2" x 2" HH Bolts
- 4 1/2" x 1 1/4" HH Bolts
- 8 1/2" Flat Washers

View Of Driver Side Bracket #640

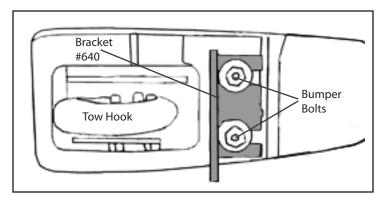


Diagram 2

- 1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase. Read the instructions completely before beginning. Two people are strongly recommended for this install.
- 2. Assemble the Grille Guard Ring and Uprights: See Diagram 1, assemble the Uprights to the Grille Guard Ring. Each upright will get (2) 1/2"x 1 1/4" hex head bolts and (2) - 1/2" flat washers that will go through the vertical plate on Grille Guard ring into upright. Hand tighten all bolts at this time.

Note: only loosen one side of the bumper at a time.

- 3. Install Brackets #640: Using Diagram2, loosen the 2 bumper bolts on each side of the front bumper enough to slide the grille guard brackets underneath the bolts. Tighten the bolts.
- 4. Attach the Grille Guard to the front brackets #640: Using two people align the Grille Guard holes to the front brackets #640. Attach the Grille Guard to brackets using (2) - 1/2" x 1 1/2" hex head bolts, (2) - 1/2" flat washers, per side and hand tighten the bolts.
- 5. Center the Grille Guard on the vehicle: Center the Grille Guard on the vehicle. Tighten all bolts at this time insuring the Grille Guard remains centered on vehicle.
- 6. Finish protection: Go Industries have a high quality finish that must be cared for periodically (every 30 days), like any other exposed finish on the vehicle. Protect the finish with a non-abrasive automotive wax (pure carnuba) on a regular basis. The use of cleaner wax or any compound that contains an abrasives determinal as the compound will scratch the finish and open it to corrosion.