



2018-C Chevy Equinox

Mud Flap Set, Front


Mounting Diagram & Instructions

Kit# GCR26F
766810/766759

IMPORTANT:


Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.

TOOLS REQUIRED-

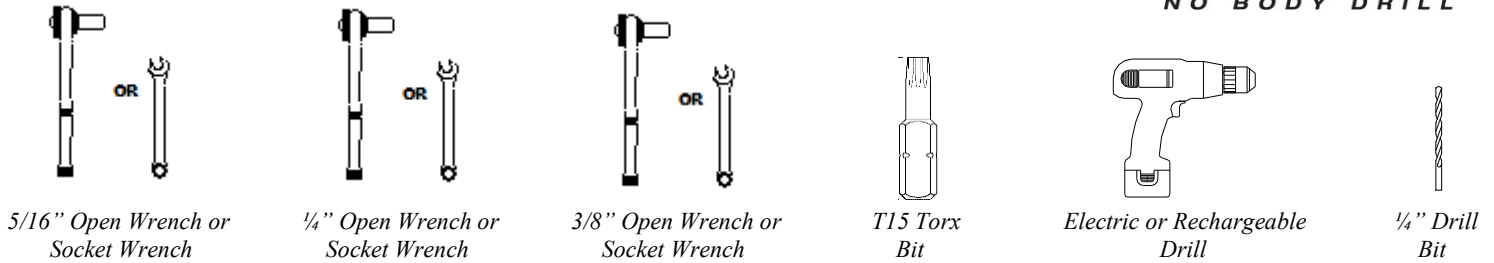


FLAPS

(1) Flap Assembly, Front, DS
Part #766762

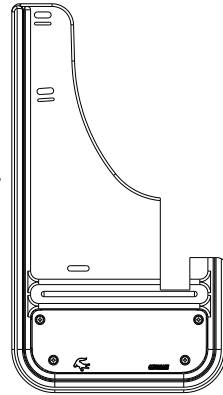


(1) Flap Assembly, Front, PS
Part #766763

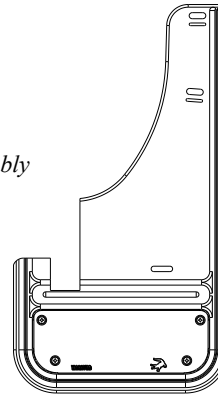

PARTS BAG # 766764

a) (4) Washer, Flat
0.203" x 1.5", 18GA, SS
Part #018066



b) (4) Washer, Flat, SS
0.203"ID x 1"OD, 18ga
Part #018081



c) (2) Washer, Flat, SS
0.203"ID x 0.781"OD, 20ga
Part #018018



d) (2) Screw, Mach.
18-8SS, 10-24x1, Hex Hd
Part #012022




e) (2) Nut, Hex
#10-24, SS
Part #025003




f) (2) Washer, Lock
18-8SS, Helicoil
Part #024001




g) (6) Bolt, Hex Nut, SS
M4.2 x 1" Black
Part #016041



h) (2) Clip, Fender
Driver's Side
Part #766839

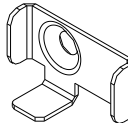




i) (2) Clip, Fender
Passenger Side
Part #766840

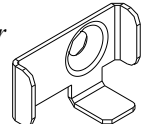

INSTALLATION (For ease of installation it is suggested that the wheel be removed)

1. Before you install your Mud Flap Set, see the diagram and parts list for all necessary parts. Start on the driver's side.
2. Remove the factory screw from the inner wheel well.
3. Install 2 clips included with kit into the holes #1 & #2 located at the upper part of the mud flap. When installing these clips, ensure that the lower part of the clip is placed into the lower cutout.

4. Loosely secure the clip on hole #1 using a small flat washer (#018018) and a hex bolt (#016041), and the clip on hole #2 using a large flat washer (#018066) and a hex bolt (#016041).
5. Install mud flap through hole #3 to fender hole #5 using a large flat washer (#018066) and a hex bolt (#016041).
6. Ensure that the inner most part of the flap is tucked behind the liner as shown in Diagram B.
7. Cut liner to allow flap to sit flush against the back of the liner as shown in Diagram C.
8. Insert clips on holes #1 and #2 into the fender lip and tighten the screws to secure the clips.
9. Using a bubble level or square, ensure that the mud flap is level. Viewing the vehicle from the back, the outer edge of the mud flap should appear parallel to the tires.
10. Drill a ¼" hole through mud flap and fender liner to create hole #4 and hole #6.
11. Install one machine screw (012022), and one flat washer (#018081) through hole #4 into hole #6 and secure with one flat washer (018031), one lock washer (024001) and one hex nut (025003).
12. Carefully tighten all fasteners and ensure that the flap has remained level.
13. Repeat procedure for the passenger side.

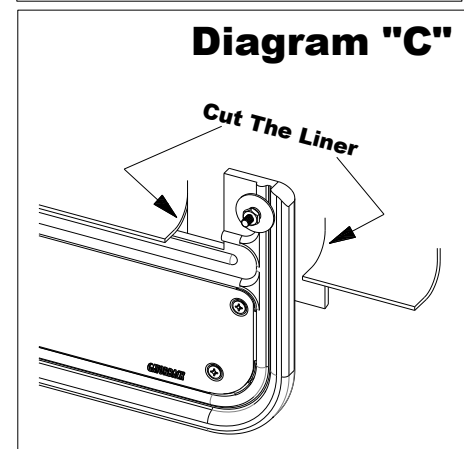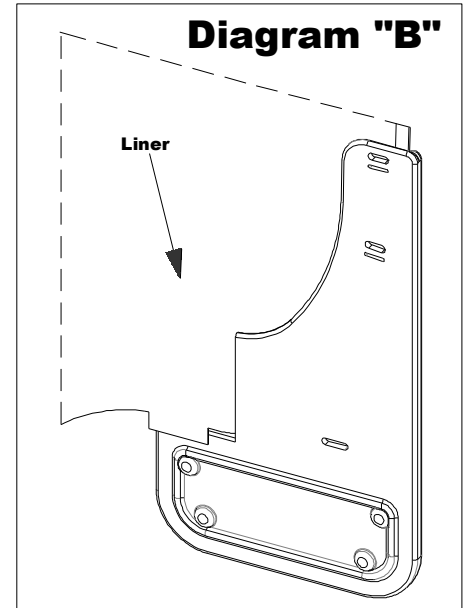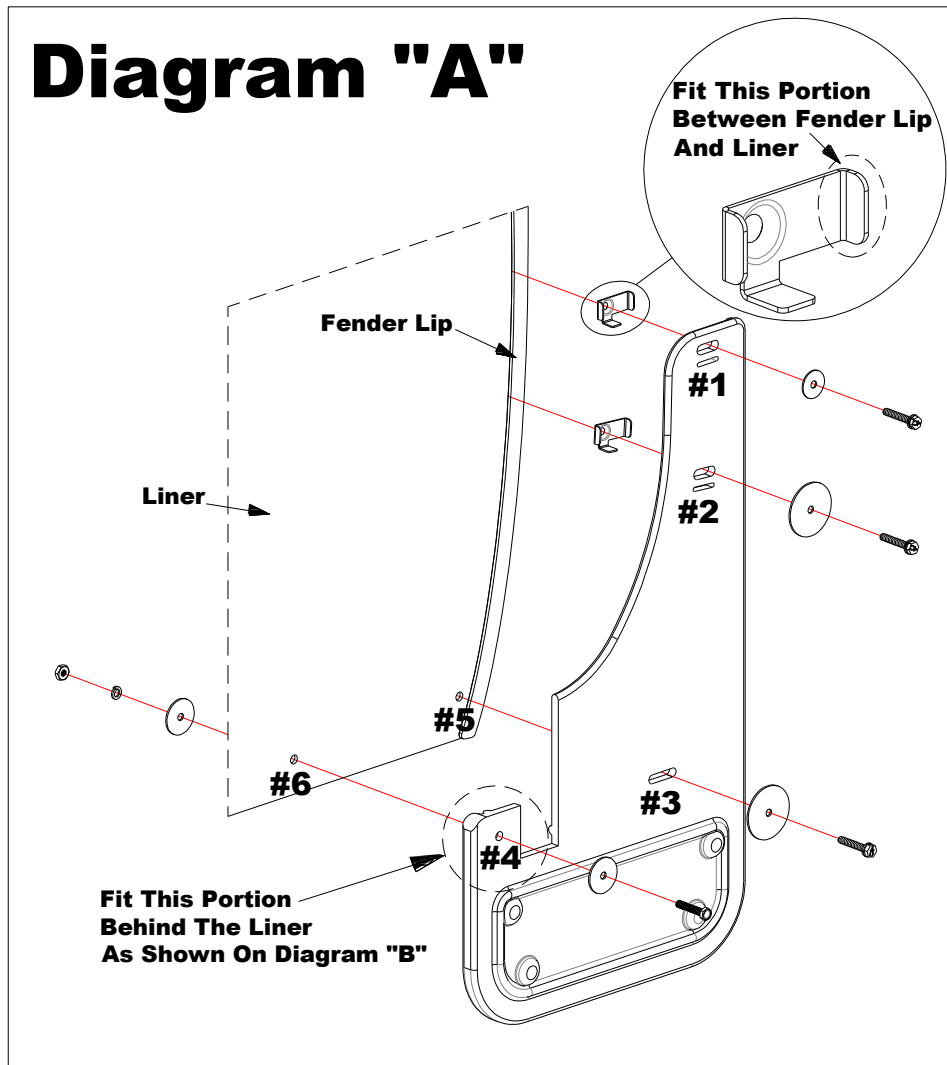

Please check out our YouTube channel to see an install video for this application.





2018-C Chevy Equinox

Mud Flap Set, Rear


Mounting Diagram & Instructions

Kit# GCR26R
766818/766765


IMPORTANT:

Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.


TOOLS REQUIRED-

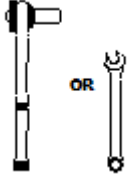


5/16" Open Wrench or
Socket Wrench

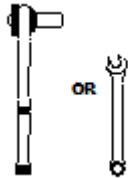

3/8" Open Wrench or
Socket Wrench



T15 Torx
Bit

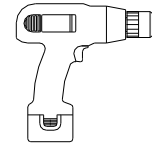


Electric or Rechargeable
Drill




1/4" Drill
Bit

FLAPS

(1) Flap Assembly,
Front, DS

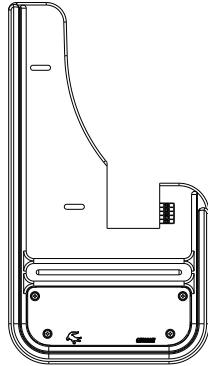


(1) Flap Assembly
Front, PS

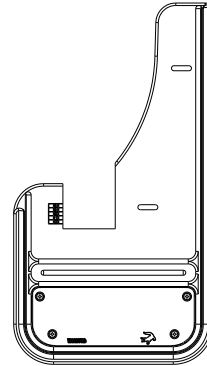

PARTS BAG # 766770

a) (4) Washer, Flat
0.203" x 1.5", 18GA, SS
Part #018066



b) (4) Washer, Flat, SS
0.203" ID x 1" OD, 18ga
Part #018081




d) (2) Screw, Mach.
18-8SS, 10-24x1, Hex Hd
Part # 012022



e) (2) Nut, Hex
#10-24, SS
Part # 025003



c) (4) Bolt, Hex Nut, SS
M4.2 x 1" Black
Part #016041



f) (2) Washer, Lock
18-8SS, Helicoil
Part #024001






INSTALLATION (For ease of installation it is suggested that the wheel be removed)

- Before you install your Mud Flap Set, see the diagram and parts list for all necessary parts. Start on the driver's side.
- Remove the 2 factory screw from the inner wheel well on holes #4 & #5.
- Position the flap so that the inner most part of the mud flap sits behind the liner as shown in Diagram B.
- Mark the liner on either side of the mud flap.



5. Set the flap aside and cut the liner on the marks as shown in Diagram C.
6. Ensure that the inner most part of the flap is tucked behind the liner as shown in Diagram B.
7. Loosely install mud flap through holes #1 & #2 into factory holes #4 & #5 and secure with a hex bolt (016041) and a 1-1/2" flat washer (018066)
8. With a square or other levelling tool, ensure that the mud flap is level.
9. Tighten all fasteners.
10. Drill a 1/4" hole through mud flap and fender liner to create hole #3 and hole #6.
11. Install one machine screw (012022), and one flat washer (#018081) through hole #3 into hole #6 and secure with one flat washer (018031), one lock washer (024001) and one hex nut (025003).
12. Carefully tighten all fasteners and ensure that the flap has remained level.
13. Repeat procedure for the passenger side.

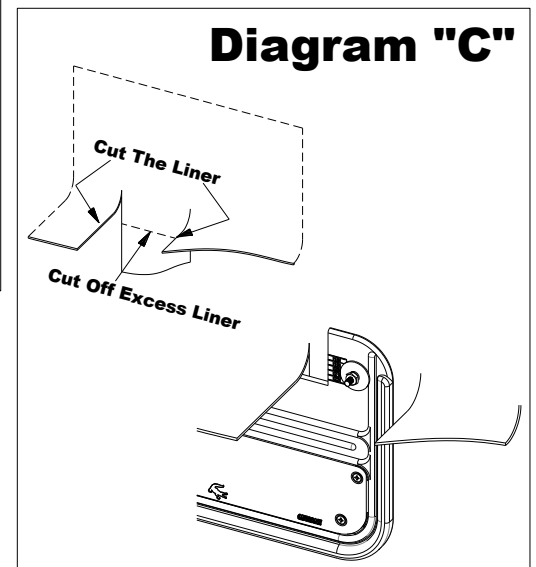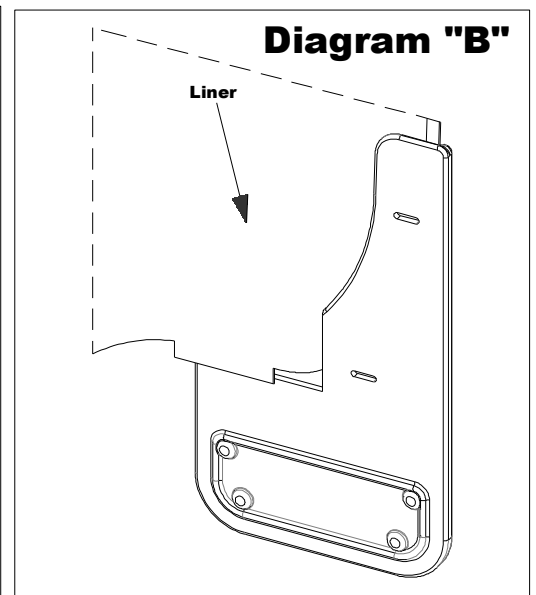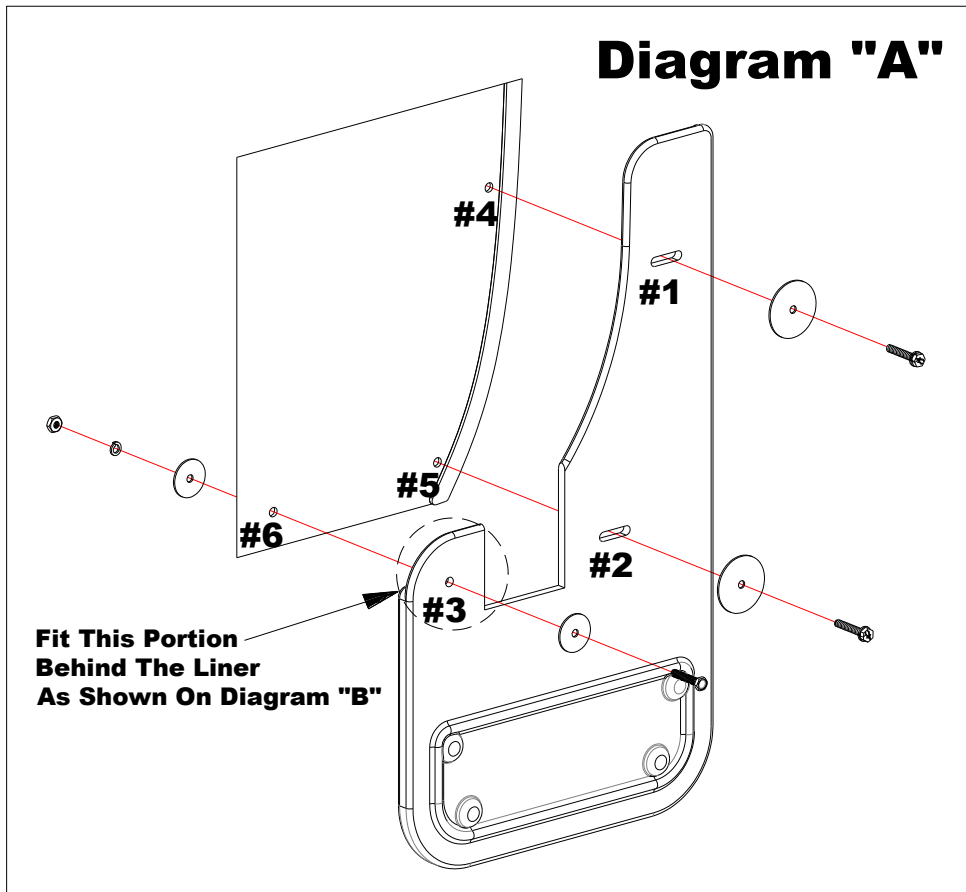

Please check out our YouTube channel to see an install video for this application.

